ICF-SW07
AN-LP2

SERVICE MANUAL

Ver 1.0 1999.02

US Model
Canadian Model
AEP Model
E Model
Tourist Model

Antenna mdule

Antenna Controller

AN-LP2

ICF-SW07

SPECIFICATIONS

ICF-SW07

Circuit system
- FM: Super heterodyne
- AM: Dual conversion super heterodyne

Frequency range
- FM: 76–108 MHz
- SW: 1,621–29,999 kHz
- MW: 530–1,620 kHz
- LW: 150–529 kHz

Intermediate frequency
- FM: 10.7 MHz
- SW/MW/LW: 55.845 MHz (1st), 455 kHz (2nd)

Output
- LINE OUT jack (stereo minijack) approx. 245 mV, less than 10 kilohms
- ∩ (headphones) jack (stereo minijack) 16 ohms

Speaker
- Approx. 40 mm ($1^{5}/_{8}$ inches) diameter, 8 ohms

Maximum output
- 200 mW (at 10 % harmonic distortion)

Power requirements
- DC 3 V, two R6 (size AA) batteries

External power source
- DC IN 3V jack accepts: supplied AC power adaptor*

Dimensions
- Approx. 135 x 32.5 x 91 mm (w/h/d)($5\ ^{3}/_{8}$ x $1\ ^{5}/_{16}$ x $3\ ^{5}/_{8}$ inches) not incl. projecting parts

Mass
- Approx. 220 g (7.8 oz)
- Approx. 257 g (9.1 oz) incl. batteries

AN-LP2

Power requirements
- DC 3 V, two R6 (size AA) batteries

Dimensions (w/h/d)
- Antenna Module
- In use: Approx. 490 x 480 x 17.8 mm ($19\ ^{3}/_{8}$ x 19 x $^{23}/_{32}$ in.)
- Folded: Approx. 205 x 180 x 17.8 mm ($8\ ^{1}/_{8}$ x $7\ ^{1}/_{8}$ x $^{23}/_{32}$ in.)
- Antenna Controller
- Approx. 120 x 29.5 x 72 mm ($4\ ^{3}/_{4}$ x $1\ ^{3}/_{16}$ x $2\ ^{7}/_{8}$ in.)

Mass
- Antenna Module: approx. 92 g (3.3 oz.)
- Antenna Controller: approx. 144 g (5.1 oz.) incl. batteries

Supplied accessories
- Stereo headphones (1)
- Ear pads (2)
- AC power adaptor (1)*
- AC plug adaptor (1)*
- Active antenna AN-LP2 (1)
- Carrying case for ICF-SW07 (1)
- Carrying case for AN-LP2 (1)
- Wave Handbook (1)
- * Not supplied with the UK, Australian, Chinese (including Hong Kong), and Argentine model.

Your dealer may not handle some of the above listed optional accessories. Please ask your dealer for detailed information on the optional accessories available in your country.

Design and specifications are subject to change without notice.

FM STEREO/SW/MW/LW PLL SYNTHESIZED RECEIVER

MICROFILM

SONY®

TABLE OF CONTENTS

Specifications 1

1. SERVICE NOTE 3

2. GENERAL 4

3. DISASSEMBLY
- 3-1. Cabinet (Lower), Cabinet ASSY 25
- 3-2. Chassis ASSY 26
- 3-3. Main Board 26
- 3-4. Key Board 27
- 3-5. Microcomputer Board 27
- 3-6. Cabinet (Front), Reel ASSY 28
- 3-7. Cabinet (Rear), Reel Board, Control Board 28

4. ELECTRICAL ADJUSTMENTS 29

5. DIAGRAMS
- 5-1. Explanation of IC Terminals 34
- 5-2. Block Diagrams 37
- 5-3. Printed Wiring Boards (Main Section) 41
- 5-4. Schematic Diagram (Main Section) 46
- 5-5. Printed Wiring Boards (Key Section) 50
- 5-6. Schematic Diagram (Key Section) 53
- 5-7. Printed Wiring Boards (Microcomputer Section) ... 55
- 5-8. Schematic Diagram (Microcomputer Section) 56
- 5-9. Printed Wiring Boards (Antenna Section) 59
- 5-10. Schematic Diagram (Antenna Section) 61

6. EXPLODED VIEWS
- 6-1. Cabinet Section 64
- 6-2. Chassis Section 65
- 6-3. Antenna Controller Section 66
- 6-4. SW Loop Antenna Section 67

7. ELECTRICAL PARTS LIST 68

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION.
REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1
SERVICE NOTE

REPLACING THE SW STATION CALL ROM

The propagation of short-wave radio waves is greatly affected by many causes such as atmospheric phenomenon due to dark spots on the sun, etc.
This makes it necessary for short wave radio broadcast stations to periodically change their broadcast frequencies. This set can be replaced with a new SW STATION CALL ROM to allow changing the broadcast frequencies.
This set came with the latest ROM (Sony) when purchased. The user can later on when needed, purchase the latest updated ROM (F Corp.) version from the F Corporation on referring to the instructions for "Purchasing the Latest SW STATION CALL ROM" which are included with the unit. These ROMs can also
be custom made to match the user's particular combination of broadcast station frequencies.

- Identify the 2 different types of ROMs (Sony or F Corp.) as follows.
  The Sony ROM has no printing on it.
  The F Corp. ROM is marked with the F Corporation name.
- Servicing is provided for the accessory Sony ROM.
- Only the most recent version is supplied for replacing the Sony ROM.
- A new Sony ROM is issued every year in October and the part No. suffix is also changed.
- A new updated Sony ROM is issued every year so is not usually kept in stock.
- Servicing is not provided for the F Corp. ROM.
- Instruct the user to directly contact the F Corporation when the F Corp. ROM is obviously malfunctioning or defective.

Address
Mail : F Corporation P.O. Box 816
Tokyo 100-8692 Japan
Fax : 81-3-3436-1932
E-mail : fco@wavehandbook.com

Exchanging the SW STATION CALL ROM

To purchase the newest ROM, refer to "Purchasing the latest SW STATION CALL ROM" and contact F Corporation.

1 Hold down the ROM compartment lid at the bottom of the unit and slide RELEASE in the direction of the arrow. Then, release your finger slowly from the lid.

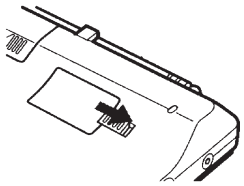

2 Remove the ROM compartment lid and the ROM in the compartment. Be careful not to touch the contact surfaces (metallic parts).



3 Insert the projection of the ROM in the compartment cavity and place the replacement ROM in the ROM compartment with the contact surface facing down. Be careful not to touch the contact surfaces.

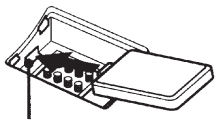

4 Insert the projections of the ROM compartment lid in the compartment cavities and lock the cover by sliding RELEASE opposite the direction of the arrow while holding down the lid.

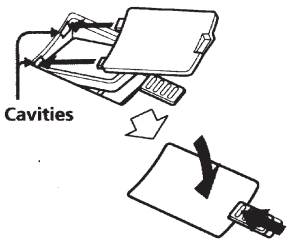

Note
Do not touch the contact surfaces on the ROM or the radio, as this may cause a malfunction.

Cleaning the SW STATION CALL ROM contact surface

If "NO" "ROM" is displayed with the SW STATION CALL ROM inserted in the ROM compartment, the contact surface of the ROM may be dirty.
Remove the ROM following the steps above and clean the contact surface with a cotton swab.

Note
Do not clean the contact springs of the main unit, as they may deform and cause a malfunction.

AEP, 7AEP model only

Connecting short land as in the figure when changed main board.

[MAIN BOARD] (SIDE A)

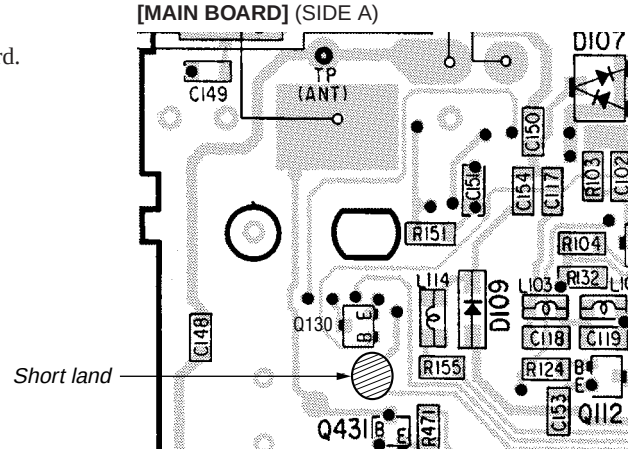

This section is extracted from instruction manual.

LOCATION AND FUNCTION OF CONTROLS

Preparation

Location of parts and controls

Refer to the pages in the parentheses for details.

Front

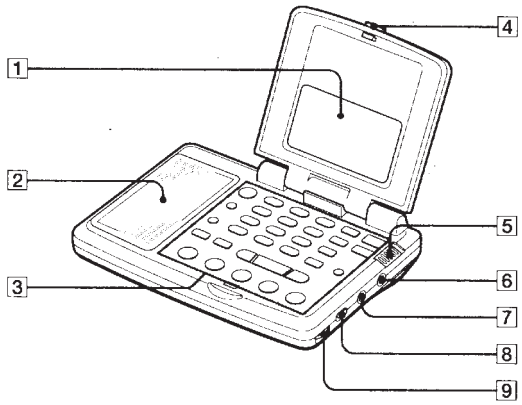

1 Display (7)
2 Speaker
3 Controls (6)
4 OPEN button (4)
5 HOLD switch (42)
6 ∩ (headphones) jack
7 LINE OUT (recording output) jack (35)
8 TONE/ST•MONO (stereo•monaural) selector (17)
9 VOL (volume) control (17)

Opening the cover

Push the OPEN button to open the cover. Adjust the angle to your choice.

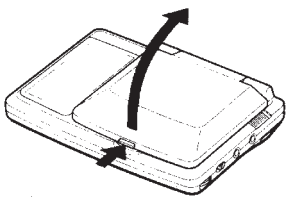

Rear

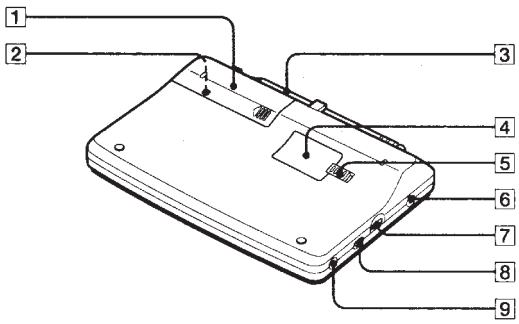

1 Battery compartment (9)
2 RESET button
Press this button in the battery compartment with a pointed object when the radio fails to function properly. The clock settings, etc., will revert to the factory preset. The frequencies you have preset in the memory are retained.
3 Telescopic antenna (17)
4 ROM compartment lid (46)
5 RELEASE (ROM compartment lid slide open) switch (46)
6 DC IN 3V ⟐⋐⟐ (external power input) jack (11)
7 ATT (attenuator) control (21)
8 ATT ON•OFF (attenuator on•off) selector (21)
9 AM EXT ANT (external antenna) jack (33)

Extending the antenna

Gently pull out the base of the antenna before rotating it, as shown below.

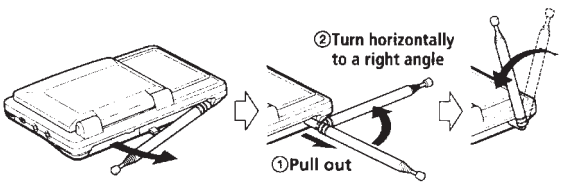

Controls

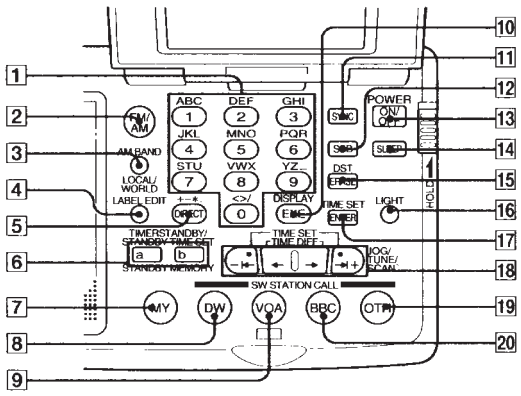

1 Number buttons (16, 22, 36)

2 FM/AM button (16, 43)

3 AM BAND•LOCAL/WORLD (local time/world time) button (14, 18)

4 LABEL EDIT button (36)

5 DIRECT button (16)

6 STANDBY MEMORY•TIMER STANDBY/STANDBY TIMESET button (38)

7 MY button (27)

8 DW button (24)

9 VOA button (24)

10 EXE•DISPLAY button (13, 16, 36)
Press to switch to clock display while operating the radio. Press again to return to the previous display. If you do not press the button, the display will return to the previous condition in about 10 seconds.

11 SYNC (Synchronous detection) button (31)

12 SSB (Single Side Band) button (30)

13 POWER ON/OFF button (16)

14 SLEEP button (41)

15 ERASE•DST (Daylight Saving Time) button (12, 23, 29, 40)

16 LIGHT button
Press this button to illuminate the display for approximately 30 seconds.

17 ENTER•TIME SET button (12, 22, 27, 38)

18 JOG/TUNE/SCAN•TIME DIFF/TIME SET buttons (12, 18, 20)

19 OTH (others) button (25)

20 BBC button (24)

Display

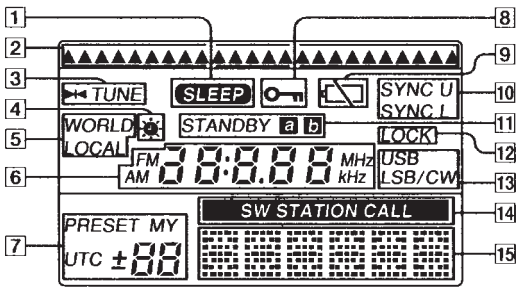

1 SLEEP indicator (41)
Appears when the sleep timer is in effect.

2 Time zone indicator (12, 14)
Points at the time zone on the map corresponding to your time difference setting.

3 TUNE indicator (16)
Appears when a station is tuned in.

4 ☀ (Daylight Saving Time) indicator (12, 14)
Appears when the time display is adjusted to the Daylight Saving Time.

5 WORLD•LOCAL indicator (12, 14)

6 Time/frequency display (12, 16)

7 Memory number/time difference display (12, 22, 27)

8 HOLD indicator (42)
Appears when HOLD is in effect. All buttons will be inoperative.

9 Battery indicator (10)

10 SYNC U•SYNC L (synchronous detection) indicators (31)

11 STANDBY a•b indicators (38)
Appear when standing by for timer activated reception.

12 LOCK (synchronous detection lock) indicator (31)
Appears when synchronous detection is in effect.

13 USB•LSB/CW (single side band/continuous wave) indicators (30)

14 SW STATION CALL indicator (24)

15 Label display (12, 16)
Names of the preset stations, cities, bands or meter bands are displayed.

Short wave active antenna AN-LP2

Refer to page 32 on how to use the active antenna.

Antenna controller

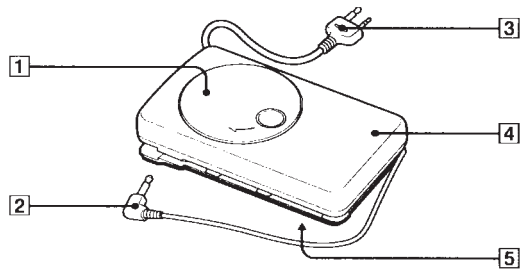

[1] Cord winder
[2] Short cord
[3] Long cord
[4] Power lamp
[5] Battery compartment

Antenna module

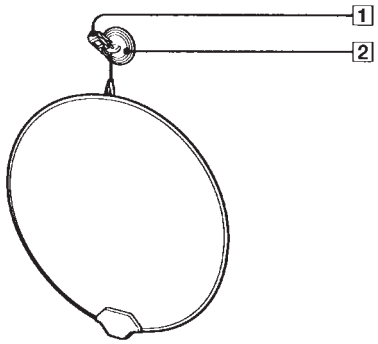

[1] Clip
[2] Suction cup

Power sources

Operating on batteries

To operate the unit on house current, see "Operating on house current", page 11.
To operate the unit on a car battery, see "Operating on car battery", page 11.

1 Slide and open the battery compartment lid.

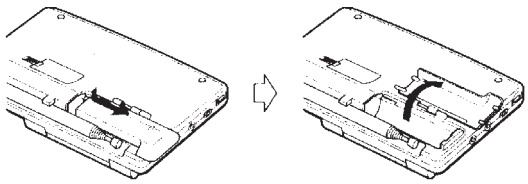

2 Insert two R6 (size AA) batteries in the battery compartment.
Insert with correct polarity as shown.

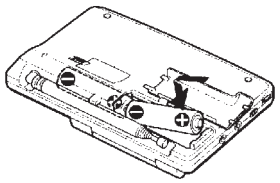

3 Close the battery compartment lid.

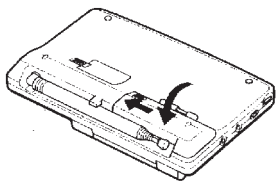

Replacing the batteries

The sound will be distorted and "🔊" will flash in the display when the batteries become weak. Replace both batteries with new ones.

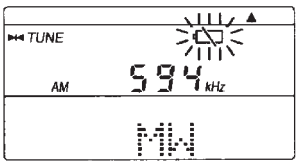

Battery Life

	Sony LR6 alkaline (size AA)	Sony R6(size AA)
FM	approx. 32 hours	approx. 10 hours
AM	approx. 23 hours	approx. 8 hours

Tips

- Replace the batteries within 3 minutes. Otherwise, the clock setting will be erased. Frequencies preset in the memory are not erased.
- When the batteries are completely exhausted, the power turns off, and "🔊" stops flashing and lights up in the display. All buttons except the LIGHT button will become inoperable.
  The buttons will not become operable again until you replace the batteries and press POWER ON/OFF to turn on the power and clear the "🔊" indication.

Notes on dry batteries

- Insert the batteries with the correct polarity.
- Do not mix new and used batteries. Do not mix different types of batteries.
- Do not try to charge dry batteries, as they cannot be charged.
- Remove the batteries when the unit is not to be used for a long time.
- Should any battery leakage occur, wipe the battery compartment thoroughly before installing new batteries.

Operating on house current

To operate the unit on house current, connect the supplied AC power adaptor* to the DC IN 3V jack of the unit.

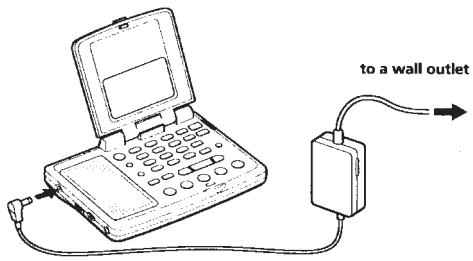

Notes on the AC power adaptor

- Do not bend or twist the power cord forcibly. Do not place heavy objects on the power cord.
- When disconnecting the AC power adaptor from the wall outlet, pull out by the plug. Do not pull the cord itself.
- Disconnect the AC power adaptor from the wall outlet and the radio when the unit is not to be used for a long period of time.

Tip

When the AC power adaptor or the car battery cord is plugged into the DC IN 3V jack, the batteries are disconnected, and the unit automatically switches to external power source.

Operating on car battery

To operate the unit on car batteries, connect a recommended Sony car battery cord to the DC IN 3V jack of the unit. Refer to its Operating Instructions for details.

Notes on external power sources

- Keep the batteries installed even when operating on external power, as they supply power for the unit's memory backup. Replace the batteries once a year.
- Turn off the unit when connecting or disconnecting external power sources. Otherwise, the power may go off and "🔊" may appear. In this case, turn on the power again to clear the "🔊" indication.
- When operating the unit on batteries, first disconnect the AC power adaptor or the car battery cord from the wall outlet or car battery, then disconnect the AC power adaptor or the car battery cord from the DC IN 3V jack of the unit. The unit will not run on batteries as long as the DC IN 3V jack is plugged in.
- Use only the recommended AC power adaptor or car battery cord manufactured by Sony. Using AC power adaptors or car battery cords with different specifications (polarity of the plug, etc.) will result in malfunction and damage to the unit.

Polarity of the plug

- Use the supplied AC plug adaptor* if the AC power adaptor plug does not match your wall outlet.

* Not supplied for models for certain countries. See "Specifications".

Setting the clock

Setting the Local Time

Set the clock if "0:00" flashes in the display (i.e., when you installed the batteries for the first time or after you reset the clock). Set the clock with the radio turned off.

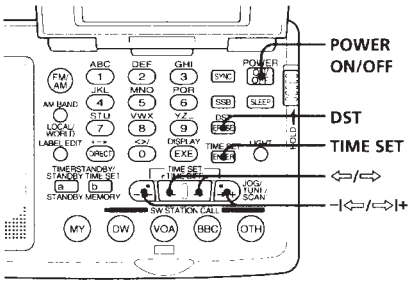

LOCAL time signifies the time for your time zone, while WORLD time is the time for any other time zone in the world.
Clock adjustment is done in LOCAL time. Before setting the clock, refer to the table on page 15 and check the time difference between your area and the UTC (Coordinated Universal Time). Names of major cities and their time differences from the UTC are preset in the unit's memory.

1 If the radio is turned on, press POWER ON/OFF to turn it off.

2 Hold down TIME SET and press ⇦ or ⇨ to choose a city or the time difference between your local time and the UTC.

When TIME SET is pressed, the clock display will automatically switch to LOCAL time if WORLD time had been displayed.
The LOCAL indication flashes. Each time you press ⇦ or ⇨, the time zone indicator will move to the right or left.

When you release TIME SET, LOCAL indication will stop flashing and light up. Your local time zone has been selected.

3 Press DST if your area is now under daylight saving time.

☀ appears in the display.
If daylight saving time is not used in your area, or if ☀ is already displayed, skip this step.

4 Hold down TIME SET and press –I⇦ or ⇨I+ to set the local time.

Each time you press –I⇦ or ⇨I+, the current time will decrease or increase by a minute.
To change the digits rapidly, hold down –I⇦ or ⇨I+.

5 Release TIME SET.

" : " starts flashing and the clock starts running.



To switch to clock display while the radio is turned on

Press EXE. The current time appears for about 10 seconds and then returns to the previous display. Press EXE again to return to the previous display manually.

The display will not switch to the clock while the radio is running scan.

For areas adopting daylight saving time (summer time)

Press DST to light up the ☀ indication if you are now in the summer time period (step 3 in the previous page). If you are now in the standard time period, press DST at the beginning of the daylight saving time period. Press again at the end of the daylight saving time period to clear the indication. The time display will be adjusted accordingly.

Note

You cannot set the clock while listening to the radio.
If the radio is on, press POWER ON/OFF first to turn off the radio.

Tips

- The clock is displayed in the 24 hour system.
- Press TIME SET to stop the flashing of "0:00".
- To adjust the time to the second, release TIME SET at the time of the tone.

Finding out the time in other areas of the world

Besides your local time, you can display the time for any other area in the world (WORLD time). Turn off the radio to display the WORLD time.

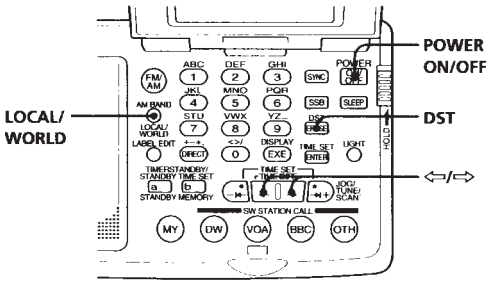

1 If the radio is turned on, press POWER ON/OFF to turn it off.

2 If the LOCAL indication is displayed, press LOCAL/WORLD to switch the indication to WORLD.

3 Press ⇦ or ⇨ to choose a city or the time difference with the UTC.

4 Press DST to light up the ☀ indication if the specified area is now under daylight saving time.

If daylight saving time is not used in the desired area, or if ☀ is already displayed, skip this step.

The current time for the area you have specified will appear in the display.



To switch back to the LOCAL time display

Press LOCAL/WORLD again.

If the desired city name or area name is not preset

Select the area by selecting the time difference with the UTC.

To edit the label (i.e., name of the city) for the time zone, see "Editing labels", page 36.

Time difference between local time and UTC

The table shows the time difference of each time zone with the UTC, which could be formulated as follows:

Time difference = Local time* – UTC

The number of hours marked with a plus sign (+) indicate the hours ahead of the UTC, while those marked with a minus sign (–) indicate the hours behind the UTC.

Time difference	Label **	City or area	Other cities in the area	Scan step
± 0	LONDON	London		9 kHz
+ 1	C.EURO	Central Europe	Amsterdam, Berlin, Brussels, Lisbon, Madrid, Paris, Rome, Stockholm, Vienna, Zurich	
+ 2	CAIRO	Cairo	Athens, Istanbul	
+ 3	JEDDAH	Jeddah	Nairobi, Riyadh, Moscow	
+ 4	DUBAI	Dubai		
+ 5	KARACH	Karachi		
+ 6	DHAKA	Dhaka(Dacca)		
+ 7	BNGKOK	Bangkok	Jakarta	
+ 8	S.PORE	Singapore	Beijing, Hongkong	
+ 9	TOKYO	Tokyo	Seoul	
+ 10	SYDNEY	Sydney	Guam	
+ 11	SOLMON	Solomon	Noumea	
+ 12	AUKLND	Auckland	Fiji	
– 11	SAMOA	Samoa		
– 10	HAWAII	Hawaii	Honolulu, Tahiti	10 kHz
– 9	ANCHRG	Anchorage		
– 8	L.A.	Los Angeles	San Francisco, Vancouver	
– 7	DENVER	Denver	Calgary	
– 6	CHICAG	Chicago	Dallas, Mexico City	
– 5	N.Y.	New York	Lima, Panama, Toronto	
– 4	CARACS	Caracas	Santiago	
– 3	RIO	Rio de Janeiro	Buenos Aires, San Paulo	
– 2	FN.ISL	Fernando island		9 kHz
– 1	AZORES	Azores Island		

* Local time prior to DST (daylight saving time) adjustment. The DST setting does not affect the time difference indication.

** Default labels. To change the labels, see "Editing labels", page 36.

Automatic adjustment of the MW channel step

A channel step is the basic interval unit in a frequency allocation system. The MW channel step differs from country to country (10 kHz for North and South American countries, and 9 kHz for Japan, Europe and other countries). Normally, the scanning or tuning steps needs to be adjusted to match the system for the area to scan or manually tune MW frequencies. This unit, however, determines your local area from your time zone setting (the time difference from the UTC) and automatically chooses the appropriate channel step.

Various ways of reception

Direct tuning

If you know the frequency of the station you want to listen to, enter the frequency digits with the number buttons directly.

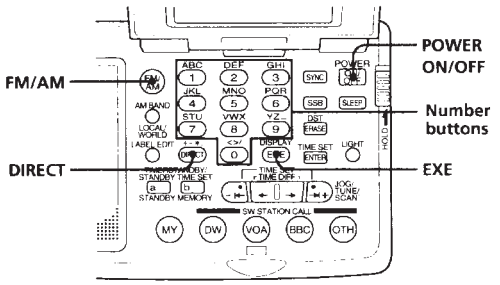

1 Press POWER ON/OFF to turn on the radio.

2 Press FM/AM to select either band.

To listen to SW (short wave), MW (medium wave) or LW (long wave) broadcasts, select AM.

3 Press DIRECT.

The frequency disappears and "DIRECT" appears in the display.



4 Press the number buttons and input the frequency of the desired station.

FM band: You can ignore the decimal point.
To enter 84.7 MHz, for example, press 8, 4 and 7.
AM band: You can ignore the last 3 digits if they are all zero.
To enter 10,000 kHz, for example, press 1 and 0.
Complete each button operation within 10 seconds.
The minimum frequency step for direct input is 0.05 MHz (50 kHz) for FM, and 1 kHz for AM.

5 Press EXE to enter.

"▶◀ *TUNE* " appears in the display when the station is tuned in.



To correct input

Press DIRECT and repeat from step 3.

If "TRY" "AGAIN" appears in the display

When you enter an invalid frequency (i.e., a figure that is not within the frequency range of the band you chose), you will hear a beep and "TRY" "AGAIN" appears in the display.
Check the frequency and repeat from step 3.

Notes

- Complete each operation from step 3 to 5 within 10 seconds. If the display returns to the previously tuned frequency, repeat from step 3.
- The unit will not beep if the beep is set to BEEP OFF (see "Turning off the beep", page 43).

Other operations

To	Press or adjust
Fine tune the reception	−I⇦, ⇦, ⇨, ⇨I+
Adjust the volume	VOL
Turn off the radio*	POWER ON/OFF

* The radio tunes to the previously tuned frequency when you turn on the radio.

To improve reception

FM reception

Gently pull out the telescopic antenna and adjust the length, angle and direction (see "Extending the antenna", page 5).

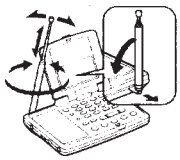

MW/LW reception

Retract the telescopic antenna and rotate the unit to reorient the built-in ferrite bar antenna.

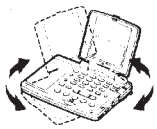

SW reception

Gently pull out the telescopic antenna vertically to its full length.

For SW reception, you can enjoy even better reception by using the supplied external antenna (see "Using the supplied external antenna", page 32).

Tips

- Plug in the supplied stereo headphones to enjoy FM stereo reception. Set ST • MONO to ST or MONO to select stereo or monaural reception. Select MONO when reception is noisy or unclear.
- When listening to news programs, etc., set TONE to NEWS. Speaking voices will be heard clearer. When listening to music programs, set TONE to MUSIC.
- Reception of frequencies around 3.0MHz and 3.64 MHz may be difficult due to internal spurious signals generated by the built-in oscillators.

Various ways of reception (continued)

Manual tuning

Use −I⇦, ⇨I+ or ⇦, ⇨ to change the frequency manually step by step. The outer buttons (−I⇦ and ⇨I+) change the frequency in large frequency steps, and the inner buttons (⇦ and ⇨) in small frequency steps.

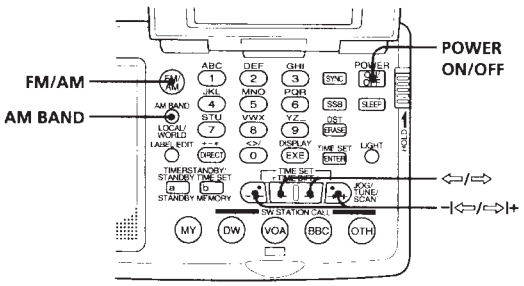

1 Press POWER ON/OFF to turn on the radio.

2 Press FM/AM to select either band.

To listen to SW, MW or LW broadcasts, select AM.

3 For the AM bands, hold down AM BAND and press −I⇦ or ⇨I+ to select MW (medium wave), LW (long wave) or a meter band (short wave).

The name of the band or the meter band and its lowest frequency appears in the display.

For FM, skip this step.



4 Press −I⇦, ⇨I+ or ⇦, ⇨ repeatedly to tune in to the desired broadcast station.

With each press, the frequency changes in the channel steps shown below. (The figures in the parentheses indicate the steps in the SSB mode).

Band	−I⇦ or ⇨I+	⇦ or ⇨
FM	0.05 MHz	0.05 MHz
SW	5 kHz (1 kHz)	1 kHz (0.1 kHz**)
MW	9 or 10 kHz* (1 kHz)	1 kHz (0.1 kHz**)
LW	9 kHz (1 kHz)	1 kHz (0.1 kHz**)

* The frequency step is adjusted automatically to your time zone according to your local time zone setting (see "Automatic adjustment of the MW channel step", page 15).

** Units of 0.1 kHz are not indicated in the display.

Tips

- The unit starts scan tuning when −I⇦ or ⇨I+ is held down (see "Scan tuning", page 20).
- The frequency changes rapidly when ⇦ or ⇨ is held down, and stops when released. In the AM bands (MW, SW, and LW), the unit scans continuously in the range of 150 to 29,999 kHz.

Frequency range of the bands/meter bands

The short wave range is divided into 14 bands that are generally referred to as "meter bands".

(kHz for AM / MHz for FM)

Band		Frequency Range	Scan Frequency Range	Meter band
AM	LW	150–529	153–522	—
	MW	530–1620	530–1620*1 531–1620*2	—
	SW	1621–29999	2250–2550	120 meter band
			3150–3450	90 meter band
			3850–4050	75 meter band
			4700–5100	60 meter band
			5900–6250	49 meter band
			7100–7400	41 meter band
			9400–10000	31 meter band
			11500–12150	25 meter band
			13500–13900	22 meter band
			15000–15700	19 meter band
			17450–18000	16 meter band
			18850–19100	15 meter band
			21450–21950	13 meter band
			25600–26100	11 meter band
FM		76.00–108.00	76.00–108.00	—

*1 10 kHz channel step (see page 15).

*2 9 kHz channel step (see page 15).

Note

The actual frequency range of short wave broadcasts and the range of the meter bands for this unit may differ. Refer to the supplied "Wave Handbook" for more information.

Various ways of reception (continued)

Scan tuning

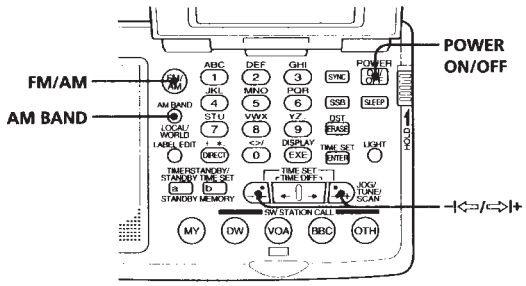

1 Press POWER ON/OFF to turn on the radio.

2 Press FM/AM to select either band.

To listen to SW, MW or LW broadcasts, select AM.

3 For AM bands, hold down AM BAND and press ⊣⇦ or ⇨⊢+ to select MW (medium wave), LW (long wave) or a meter band (short wave).

The name of the band or the meter band and its lowest frequency appear in the display.
For FM, skip this step.

4 Hold down ⊣⇦ or ⇨⊢+. Release when the unit starts scanning.

"SCAN" is displayed. The unit stops at each reception and resumes scanning after about 3 seconds.
The unit scans within the frequency range of the chosen band or meter band (see "Frequency range of the bands/meter bands", page 19). In the SSB reception mode, the unit scans the whole 150 to 29999 kHz frequency range.



5 Press ⊣⇦ or ⇨⊢+ to stop scanning and listen to the desired broadcast.

"SCAN" disappears and the name of the band appears in the display.

Tips

- The unit scans the frequencies in descending order when holding down ⊣⇦, and in ascending order when holding down ⇨⊢+.
- To the change scanning direction, hold down either ⊣⇦ or ⇨⊢+ opposite to the current direction. This is convenient when, for example, you want to return to the previous reception after the unit has resumed scanning.
- When scanning for MW broadcasts at night when reception is intense, or when scanning under prevalent interference, the unit may stop scanning to null broadcasts frequently. Switch ATT to ON and adjust sensitivity with the ATT Control (see "Controlling scan stops", below). Under normal conditions, set ATT to OFF.

Controlling scan stops — using the ATT switch and the ATT Control

Use the ATT (attenuator) switch and the ATT Control to control reception sensitivity when the unit stops scanning to null broadcasts frequently or when scanning under prevalent interference. Under normal conditions, use the radio with ATT set to OFF (i.e., with maximum sensitivity).

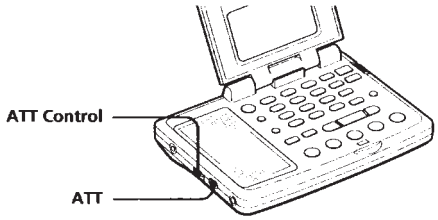

The ATT Control is activated when ATT is switched ON. Turn the ATT Control toward MAX to reduce sensitivity. The radio will skip weaker signals and stop at only stronger ones.

Note

If the ATT Control is turned too much toward MAX, the radio will not stop on any weaker signals at all. Switch ATT to OFF if you do not need to use the attenuator.

Preset tuning

You can preset a total of 20 stations of your choice to the number buttons (10 for FM and 10 for AM).

Presetting stations

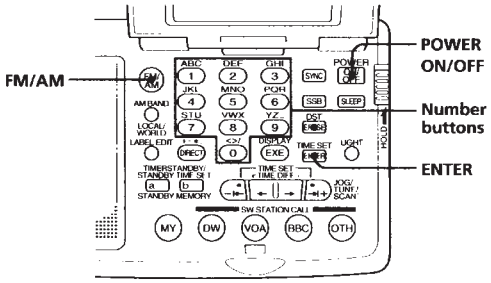

1 Press POWER ON/OFF to turn on the radio.

2 Tune in to the station you want to preset.

3 Hold down ENTER and press a number button (0–9) of your choice.

When ENTER is held down, "PRESET MY" will flash in the display.

A beep sounds when a number button is pressed. The station is stored to the selected button. The preset number and the preset label are displayed.



Note

If a station is already stored to the button you chose, it will be overwritten by the new preset. If the preset label had been edited, it will return to the default setting.

Default preset labels

Each time a station is preset, the preset key is assigned the default preset label as shown.

To change labels, see "Editing labels", page 36.

Button	AM	FM
1	AM-1	FM-1
2	AM-2	FM-2
3	AM-3	FM-3
4	AM-4	FM-4
5	AM-5	FM-5
6	AM-6	FM-6
7	AM-7	FM-7
8	AM-8	FM-8
9	AM-9	FM-9
0	AM-0	FM-0

Tuning in to a preset station

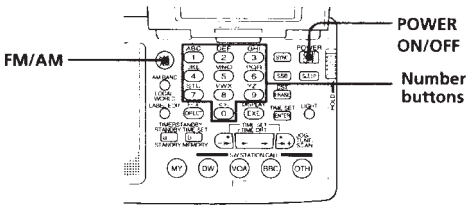

1 Press POWER ON/OFF to turn on the radio.

2 Press FM/AM to select either band.

3 Press a number button (0–9) of your choice.

The radio receives the station assigned to the button.

If no station is preset

A beep sounds and "MEMORY" "EMPTY" appears in the display. Then the display will return to the previous condition.

Notes

- The radio may have frequencies stored in the preset memory at factory shipment.
- The unit will not beep if the beep is set to BEEP OFF (see "Turning off the beep", page 43).

Erasing a preset station

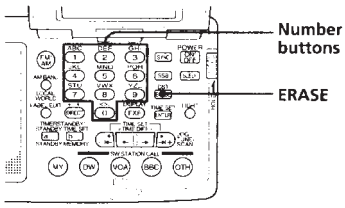

1 Press a number button (0–9) for the preset station you want to erase.

2 Hold down ERASE.

The preset number flashes in the display while ERASE is held down.

A beep sounds after 3 seconds and the station assigned to the button you chose is erased. The preset number and the preset label disappear.

Note

When a preset station is erased, any changes to its default label is erased as well.

SW STATION CALL tuning

Tune in to major short wave stations by just pressing the station buttons: DW, VOA, BBC and OTH (others). The radio automatically chooses the frequencies used in your time zone from the SW STATION CALL ROM* encased at the bottom of the unit, scans for them, and stops scan at reception.

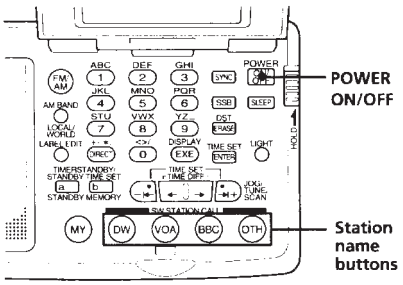

*ROM = Read Only Memory

1 Set the time zone to your area.

For LOCAL time, see "Setting the Local Time", page 12.
For WORLD time, see "Finding out the time in other areas of the world", page 14.

SW STATION CALL automatically selects **only the frequencies that are receivable in the area corresponding to your time zone setting**, regardless of LOCAL or WORLD time. Thus, it is crucial that you set the time zone properly to match your current location before using SW STATION CALL.

2 Press POWER ON/OFF to turn on the radio.

3 Press the station button of your choice.

"SW STATION CALL", the station name and a frequency is displayed. The time difference from the UTC and the time zone indicator flash for about 3 seconds, and then light up. Confirm your time zone setting. The frequency actually displayed may be different from the illustration.

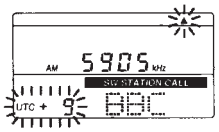

4 Press the same station button again.

The radio scans the frequencies for your area in ascending order, and stops at reception.
Press the button again to resume scanning.

To stop scanning

Press the same station button during scan.

To manually recall the selected frequencies one by one

Hold down the station button and press ⇦ , ⇨ or –I⇦ , ⇨I+.

The frequency changes quickly when –I⇦ or ⇨I+ is held down, and stops when released.

Tip

When scanning at night when reception is intense, or when scanning under prevalent interference, the unit may stop scanning to null broadcasts frequently. Switch ATT to ON and adjust sensitivity with the ATT Control (see "Controlling scan stops", page 21). Under normal conditions, set ATT to OFF.

Stations recalled by the SW STATION CALL station buttons

Button	Station and program
DW	English and German programs of Deutsche Welle
VOA	English programs of Voice of America
BBC	English programs of British Broadcasting Corporation
OTH	Choose one of the following*; R.NED – English and Dutch programs of Radio Nederland RFI – English and French programs of Radio France International R.JPN – English and Japanese programs of Radio Japan REE – English and Spanish programs of Radio Exterior de España CRI – English and Chinese programs of China Radio International

*Selecting the station for the OTH button

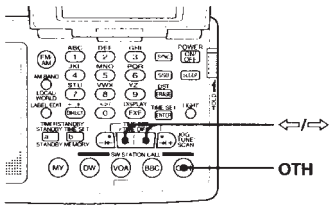

Turn off the radio if it is turned on.
Hold down OTH and press ⇦ or ⇨. Release OTH when the station of your choice appears in the display.

Steps for reception is the same as the other SW STATION CALL buttons.

When there is no reception

If the radio was not able to receive any of the frequencies for the time zone stored in the ROM, scanning stops with a beep when the radio returns to the frequency where it started scanning.

Lowest frequency ← Scan start frequency → Highest frequency

Short wave reception may be difficult at times due to various factors, such as sunspot activity and atmospheric conditions. Furthermore, the major broadcast stations whose data are stored in the ROM may change the broadcast time and/or frequencies at the change of season, etc. In such cases, the radio may not be able to receive the frequencies stored in the SW STATION CALL ROM.

Updating the SW STATION CALL ROM

To conform with possible changes in frequencies, the SW STATION CALL ROM is designed to be replaceable by the user to an updated version of the ROM. The newest SW STATION CALL ROM is sold by F Corporation. The ROM is to be updated in around October every year. We recommend the ROM to be replaced at least once in 2 to 3 years.

To purchase the newest ROM, refer to "Purchasing the latest SW STATION CALL ROM" and contact F Corporation.

To exchange the ROM, see "Exchanging the SW STATION CALL ROM", page 46.

Notes

- Many of the worldwide broadcast programs of the major broadcast stations stored in the ROM are broadcast only at certain times of the day. If the station is not broadcasting on the scanned frequency at the time, the radio will not receive any broadcast or receive broadcast by some other station, such as a local station, broadcasting on the same frequency.
- If the frequency is changed by manual tuning, etc., when "SW STATION CALL" indication is lit in the display, the radio will exit SW STATION CALL and the indication will disappear.
- If there is no frequency for the station corresponding to the time zone stored in the ROM, a beep sounds, "MEMORY" "EMPTY" appears in the display, and the radio returns to the previous condition.
- If you press a station button without the ROM in the ROM compartment of the radio, a beep sounds, "NO" "ROM" appears in the display, and the radio returns to the previous condition. If the ROM is displaced when "SW STATION CALL" indication is lit in the display, a beep sounds, "NO" "ROM" appears in the display, and the radio changes to manual tuning.
- If "NO" "ROM" is displayed with the SW STATION CALL ROM inserted in the ROM compartment, the contact surface of the ROM may be dirty. See "Cleaning the SW STATION CALL ROM contact surface", page 46, and clean the contact surface with a cotton swab. Do not clean the contact springs of the main unit, as they may deform and cause a malfunction.

Various ways of reception (continued)

MY-Memory tuning

Preset up to 100 frequencies of any band (FM, SW, MW or LW) to the MY button. You can scan these stations or tune in one by one.

Presetting stations to MY-Memory

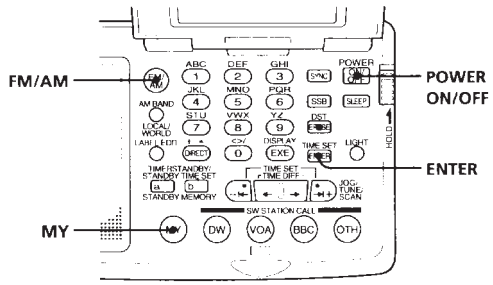

1 Press POWER ON/OFF to turn on the radio.

2 Tune in to the station you want to preset.

3 Hold down ENTER and press MY.

When ENTER is held down, "PRESET MY" will flash in the display.

A beep sounds when MY is pressed. The station is stored to the lowest available MY-Memory number (00 to 99). The MY-Memory number and the MY-Memory label are displayed.



Default MY-Memory labels

Each time a station is stored to MY-Memory, it is assigned the default MY-Memory label "MY-xx" (with the memory number in place of "xx").

To change labels, see "Editing labels", page 36.

Note

The radio may have frequencies stored in MY-Memory at factory shipment. In this case, erase them before presetting stations to MY-Memory (see "Erasing a MY-Memory preset", page 29).

Tips

- If you press MY with all the MY-Memory numbers (00 to 99) assigned a station, a beep sounds, "MEMORY" "FULL" appears in the display, and the radio returns to the previous condition.
- MY-Memory tuning is not affected by the time zone setting.

Tuning in to a MY-Memory station

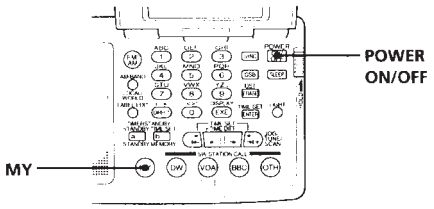

1 Press POWER ON/OFF to turn on the radio.

2 Press MY.

The radio enters the MY-Memory tuning mode.

3 Press MY again.

The radio scans the frequencies stored in MY-Memory and stops at reception.

Press the button again to resume scanning.

To stop scanning

Press MY during scan.

To manually recall the MY-Memory frequencies one by one

Hold down MY and press ⇦ , ⇨ or ⊣⇦ , ⇨⊢.

The frequency changes quickly when ⊣⇦ or ⇨⊢ is held down and stops when released.

Tips

- MY-Memory scans only the stored memory numbers and skips the empty ones.
- MY-Memory scans fastest if the frequencies are stored in ascending or descending order.
- If MY is pressed with no frequency stored in MY-Memory, a beep sounds and "MEMORY" "EMPTY" appears in the display. Then the display returns to the previous condition.
- When scanning at night when reception is intense, or when scanning under prevalent interference, the unit may stop scanning to null broadcasts frequently. Switch ATT to ON and adjust sensitivity with the ATT Control (see "Controlling scan stops", page 21). Under normal conditions, set ATT to OFF.

When there is no reception

If any of the frequencies stored in MY-Memory was not received, scanning stops with a beep when the radio returns to the frequency where it started scanning.

Lowest stored MY-Memory number ← Scan start MY-Memory number → Highest stored MY-Memory number

Erasing a MY-Memory preset

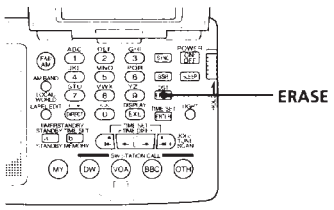

1 Recall the MY-Memory number you want to erase.

2 Hold down ERASE.

The MY-Memory number flashes in the display while ERASE is held down.

A beep sounds after 3 seconds and the station assigned to the MY-Memory number is erased. The MY-Memory number and the MY-Memory label disappear.

Note

When a MY-Memory station is erased, any changes to its default label is erased as well.

To change the station stored in MY-Memory

You cannot overwrite a frequency stored in MY-Memory with a new one. Erase the particular MY-Memory number first, then store a new frequency.

Note

MY-Memory stores stations to the lowest available MY-Memory number. Note, thus, that if a MY-Memory number lower than the one you erased is available, the new frequency will be stored to that number.

Receiving SSB and CW Transmissions

You can receive SSB (Single Side Band) and CW (Continuous Wave) transmissions with the built-in BFO circuit.

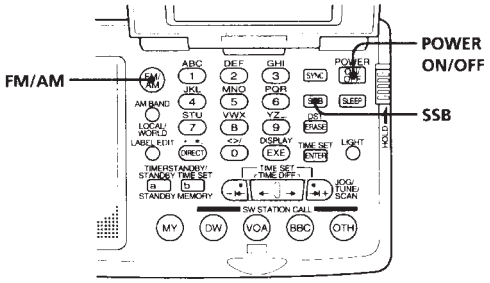

1 Press POWER ON/OFF to turn on the radio.

2 Press FM/AM and select AM.

3 Press SSB to select USB or LSB/CW.

Each time SSB is pressed, the display changes as follows:

(Normal mode) → USB → LSB/CW



4 Tune in to the desired station.

For tuning methods, see "Various ways of reception", pages 16 to 29.

Tip

For more on SSB and CW, refer to "Tips on radio waves", page 50.

Notes

- The USB or the LSB/CW mode cannot be preset to memory. You can tune in to stations in 0.1 kHz steps in the USB or the LSB/CW mode, but the frequency digit below the decimal point is ignored when memorized.
- If a preset AM frequency is recalled during the USB or the LSB/CW mode, the mode setting remains active and the frequency is received in the respective mode.

Adjusting for optimum AM reception —Synchronous detection

Adjust AM reception (especially SW reception) to optimum condition with synchronous detection.

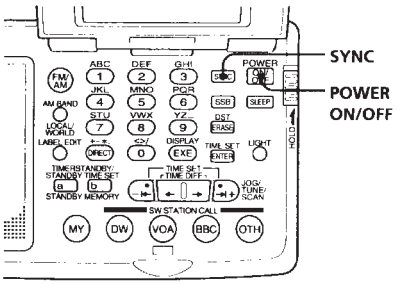

1 Press POWER ON/OFF to turn on the radio.

2 Tune in to the desired station.

For tuning methods, see "Various ways of reception", pages 16 to 29.

3 Press SYNC repeatedly to select the synchronous detection mode with better reception (SYNC U or SYNC L).

Each time SYNC is pressed, the display changes as follows:

(Normal mode) → SYNC U → SYNC L

"LOCK" appears in the display when synchronous detection is in effect.



Tip

For more on synchronous detection, see "Tips on radio waves", page 50.

Notes

- Synchronous detection may be cancelled when the batteries become weak.
- Even when you have chosen either of the synchronous detection modes and SYNC U or SYNC L is lit in the display, synchronous detection may not take effect if reception is weak. In this case, "LOCK" will not light up.
- Synchronous detection setting cannot be preset to memory.
- If a preset AM frequency is recalled when either synchronous detection mode is in effect, the mode setting remains active and the frequency is received in the respective mode.

Using the supplied external antenna

Use the supplied Short Wave Active Antenna AN-LP2 for better short wave reception. The antenna gives you stable indoor reception with the built-in amplifier.

This antenna can be used only to receive the short wave meter bands from the 120 meter band to the 11 meter band as seen in "Frequency range of the bands/meter bands", page 19. Be sure to disconnect it for FM, MW or LW reception.

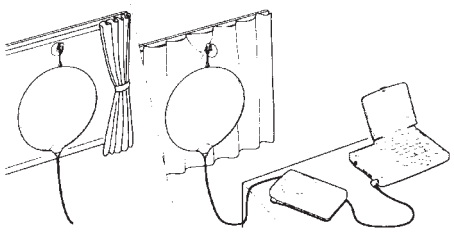

Inserting the Batteries

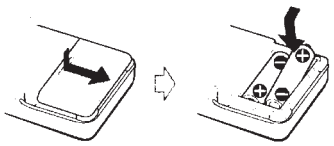

1 Open the battery compartment lid of the antenna controller.

2 Insert two R6 (size AA) batteries with correct polarity.

3 Close the lid.

Battery life of the active antenna

Using Sony R6 (size AA) dry batteries: approx. 40 hours

When to replace the batteries

When the batteries become weak, the POWER lamp of the antenna controller dims. Replace both batteries with new ones.

Setting Up

1 Unfold the antenna module slowly.

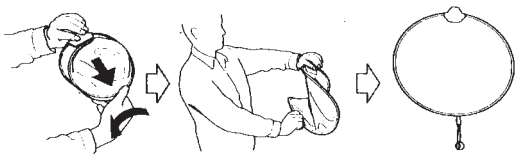

Be careful not to hit anyone or anything when unfolding the antenna module.

2 Pull out the long cord with the double pin plug from the antenna controller until it stops, and connect it to the antenna module.

3 Attach the antenna module to the window glass or the curtain.

Fix the antenna with the supplied clip or the suction cup, as seen in the illustration on the previous page.

4 Connect the short cord with a single pin plug to the AM EXT ANT (AM external antenna) jack of the radio.

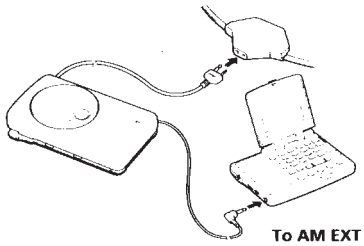

The power supply of the antenna controller is linked to the power supply of the radio. The POWER lamp lights up on the controller. Switch ATT to OFF on the radio.

On setup

- Place the antenna module where reception is well, such as by the window.
- Reception may become poorer if the long cord of the antenna controller is kept near the radio. Keep it as far away from the radio as possible.
- Keep the radio and the antenna away from fluorescent lamps, television sets, telephones, personal computers, etc., as they may generate noise interference.
- Set up the antenna as far away from the street as possible.
- Do not use the antenna outdoors.
- When using the external antenna, be sure to retract the telescopic antenna on the main unit.

After use

1 Disconnect the antenna module, antenna controller and radio.

2 Reel up the long cord.

3 Wrap the short cord to the antenna controller and set it in place.

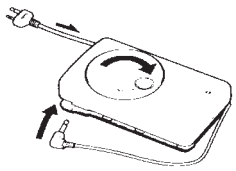

4 Twist and fold the antenna module, set it in place, and put it in the carrying case.

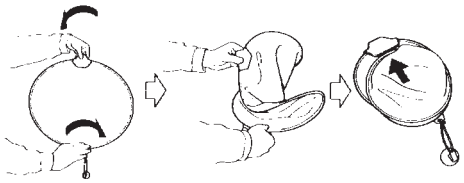

Note

- When receiving FM, MW or LW broadcasts, be sure to disconnect the active antenna. The radio cannot receive these bands with the external antenna plugged in, as the telescopic antenna and the built-in ferrite bar antenna will be disconnected.
- The supplied external antenna is to be used only with this unit. It cannot be used on other radios.
- Do not connect any other antennas other than the recommended active antennas to the AM EXT ANT jack of the unit, as the jack supplies DC voltage to power the recommended active antennas.

Recording broadcasts

Connect the radio to a cassette recorder with connecting cables to record radio broadcasts.

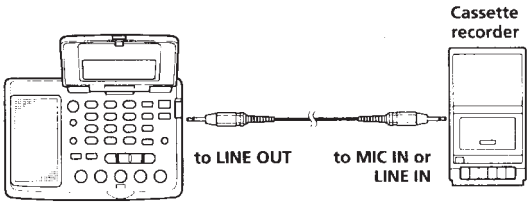

1 Connect the radio to a cassette recorder with connecting cords (not supplied).

Use the appropriate cord for the type of cassette corder.

Cassette recorder		Connecting cord
Type	Jack	
Monaural	MIC IN (minijack)	RK-G135
Stereo	MIC IN (minijack)	RK-G134
	LINE IN (minijack)	RK-G136
	LINE IN (pinjack)	RK-G129

2 Tune in to the station you want to record.

3 Record on the cassette recorder.

If you record with a stereo recorder

FM stereo programs are recorded in stereo. AM programs are recorded monaurally to both channels.

Tip

Adjusting VOL on the radio has no effect on the recording.

Editing labels

You can change the default label for a station preset, time zone, etc., to any combination of up to 6 alphanumeric letters.

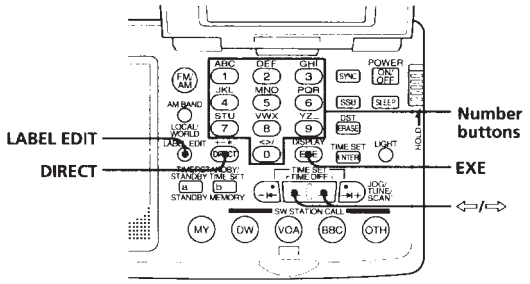

1 Display the label you want to edit by preset tuning (page 22), MY-Memory tuning (page 27), WORLD time display (page 14) or the Standby function (page 38).

2 Press LABEL EDIT.

The first letter of the label flashes.

3 Press ⇦ or ⇨ to move the cursor to the letter you want to change.

4 Press one of the number buttons (0 to 9) or DIRECT to enter the letter of your choice.

The first letter written above the number button is entered when the button is pressed. Every press of the button changes the letter as follows.

Ex. Pressing number button ①: A → B → C → 1

① A B C 1	② D E F 2	③ G H I 3
④ J K L 4	⑤ M N O 5	⑥ P Q R 6
⑦ S T U 7	⑧ V W X 8	⑨ Y Z _ ' 9
DIRECT + − * .	⓪ < > / 0	_

_ indicates a blank space.

5 Repeat steps 3 and 4 to change other letters.

Complete each button operation within 20 seconds.

6 Press EXE.

A beep sounds and the displayed letters are stored as the label.

If the flashing of the character stops

You took more than 20 seconds to complete a button operation.

If the display returns to the original label, press LABEL EDIT again and start over.

To cancel editing

Press LABEL EDIT before pressing EXE.

Notes

- The SW STATION CALL labels cannot be edited.
- The unit does not beep if the beep is set to BEEP OFF (see "Turning off the beep", page 43).
- An edited preset label returns to the default setting if a station is overwritten to the preset button (see "Default preset labels", page 22).

Using the timer

Waking up to the radio or buzzer — Standby function

You can wake up to your favorite radio program using the Standby function. You can preset different frequencies and standby times to STANDBY MEMORY a and b.

To wake up to the buzzer, see "To wake up to the buzzer", page 40.

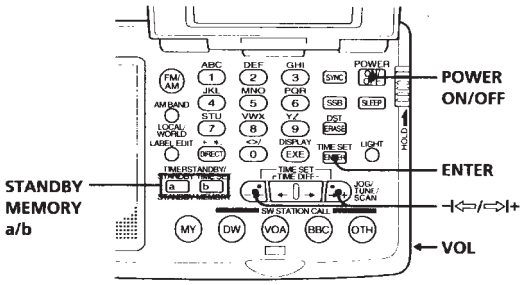

Make sure the clock is set correctly before using the Standby function (page 12).

1 Tune in to the station you want to preset.

2 Adjust VOL to your choice.

3 Hold down ENTER and press STANDBY MEMORY a or b.

When ENTER is held down, "PRESET MY" will flash in the display.

A beep sounds when STANDBY MEMORY a or b is pressed. The station is stored to the selected button. The STANDBY MEMORY number (a or b) and the STANDBY MEMORY label are displayed.



4 Press POWER ON/OFF to turn off the radio.

5 Hold down the STANDBY MEMORY button you pressed in step 3 and press ⊣⇦ or ⇨⊢ repeatedly to set the standby time (i.e., the time the radio is to turn on).

"STANDBY" and "a" or "b" flash while the STANDBY MEMORY button is held down.

6 Release the STANDBY MEMORY button.

"STANDBY" and "a" or "b" light up and the standby setting is complete. The clock indication returns to the current time.

The radio turns on at the standby time to receive the preset broadcast station.

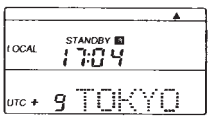

To check the standby time

Hold down STANDBY MEMORY a or b with the radio turned off. The preset standby time is displayed while the button is pressed.

To change the standby time

Repeat steps 4 to 6 and preset a new standby time.

To cancel the standby function

Press STANDBY MEMORY a or b with the radio turned off so that "STANDBY" "a" or "b" is cleared from the display.

Make sure to release the button within a second. If the button is pressed for longer than a second, the radio goes to step 5.

At the standby time

The radio turns on, "SLEEP" lights up, and the preset broadcast station is tuned in. The radio turns off after about 60 minutes.

Notes

- The Standby function is activated when the currently displayed time, whether in LOCAL or WORLD display mode, reaches the standby time. Make sure, therefore, that the time display is in the mode of your choice.
- If a station was already stored to the STANDBY MEMORY button, the previous preset station is overwritten by the new preset. If the preset label had been edited, it will return to the following default;
  a = "STBY-a"
  b = "STBY-b"
  To change labels, see "Editing labels", page 36.
- Make sure that the radio is turned off before setting the standby time. You cannot set the standby time with the radio turned on.

Tips

- To temporarily cancel the Standby function, turn off the radio and slide HOLD in the direction of the arrow so that "🔒" is displayed. The standby timer goes back to effect when HOLD is turned off ("🔒" is cleared from the display). See "Using the hold function", page 42.
- Once the standby presets are set, the radio turns on at the preset time everyday unless the standby status is canceled (see "To cancel the standby function", above). Canceling the standby status does not erase the standby setting itself. The setting can be put back to the standby status by pressing STANDBY MEMORY a or b with the radio turned off so that "STANDBY" "a" or "b" is lit in the display.
- If the standby memory is in standby status, it takes effect even when you are listening to the radio. The radio switches to the preset standby frequency at the standby time.
- You can set both STANDBY memories to the standby status at the same time (i.e., both the a and b indicators are lit in the display). The radio turns on at the first standby time to receive the first standby frequency, then switches to the second standby frequency at the second standby time.
- If both STANDBY memories are set to the same standby time, STANDBY a takes precedence.

To wake up to the buzzer

If a STANDBY MEMORY without a frequency preset is activated, the buzzer sounds at the standby time. Erase if a frequency is preset.

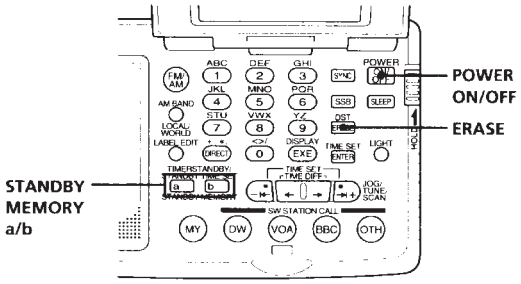

1 Press POWER ON/OFF to turn on the radio.

2 Press STANDBY MEMORY a or b.

The preset frequency is recalled.
If no frequency is stored, a beep sounds and "MEMORY" "EMPTY" appears in the display. Go to step 4.

3 Hold down ERASE.

The Standby Memory number flashes in the display while ERASE is held down.
A beep sounds after 3 seconds and the station assigned to the STANDBY MEMORY button is erased. The Standby Memory number and the Standby Memory label disappear.

4 Follow steps 4 to 6 of "Waking up to the radio or buzzer", page 38 to set the standby time (i.e., the time the buzzer is to sound).

The buzzer sounds at the standby time.

To stop the buzzer

Press any button except LIGHT.
The buzzer stops after about 60 minutes if it is left on.

Notes

- The buzzer volume cannot be adjusted with VOL.
- The Standby Memory buzzer sounds regardless of the BEEP OFF setting.
- When a Standby Memory preset is erased, any changes to its default label is erased as well.

Falling asleep listening to the radio — Sleep timer

You can turn off the radio automatically after about 60 minutes using the sleep timer.

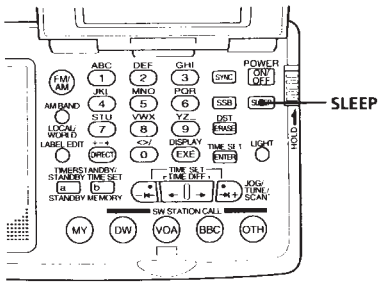

1 Press SLEEP.

If the radio was off, the radio turns on. "SLEEP" lights up.

2 Tune in to the station of your choice.

The radio turns off automatically after about 60 minutes.

To turn off the radio before the 60 minute duration

Press POWER ON/OFF.

Tips

- If SLEEP is pressed with the radio turned on, "SLEEP" lights up and the radio turns off after about 60 minutes.
- If you press SLEEP to turn on the radio, the radio tunes to the previously tuned frequency.
- If SLEEP is pressed when "SLEEP" is already lit, the sleep countdown is reset and the radio turns off after about 60 minutes from this point.

Using the hold function

When the hold function is activated, all buttons become inoperative, preventing accidental operation when the radio is being carried or used. The hold function can also be used to temporarily cancel the Standby timer function.

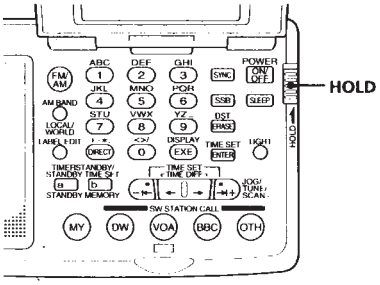

1 Slide HOLD in the direction of the arrow.

"⊶" lights up and all buttons become inoperative.



To cancel the hold function

Slide HOLD in the direction opposite to the arrow so that "⊶" disappears in the display.

To temporarily cancel the Standby timer

When the hold function is activated, the Standby timer function is temporarily canceled (see "Waking up to the radio or buzzer — Standby function", page 38).

Temporary cancellation of the Standby timer by the hold function is effective only when the power is turned off.

Turning off the beep

The confirmation beep can be turned off. Do so with the power turned off.

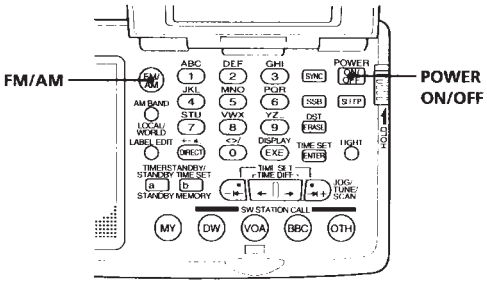

1 If the radio is turned on, press POWER ON/OFF to turn it off.

2 Hold down FM/AM for longer than 2 seconds.

A beep sounds and "BEEP" "OFF" appears in the display. The beep has been turned off.

To turn the beep back on, hold down FM/AM for longer than 2 seconds again. "BEEP" "ON" appears in the display and the beep turns on.

Tip

The beep setting does not affect the buzzer sound for the Standby timer function (see "To wake up to the buzzer", page 40).

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet.
Refer servicing to qualified personnel only.

Features

- **World clock feature**
  Find out the time for any place in the world by selecting a city name.
- **Worldwide coverage with FM stereo/SW/MW/LW reception**
  Simple and precise tuning with the quartz controlled PLL (Phase Locked Loop) synthesizer system.
  FM: 76–108 MHz
  SW: 1621–29999 kHz
  MW: 530–1620 kHz
  LW: 150–529 kHz
  Refer to the supplied "Wave Handbook" for more information.
- **SW STATION CALL tuning**
  Tune in to major short wave stations just by pressing the station buttons. The radio automatically chooses the frequencies used in your time zone from the ROM data and scans for them.
- **MY-Memory tuning**
  Memorizes and scans up to 100 frequencies of your choice.
- **Four other tuning methods to suit your needs**
  - **Direct tuning**: tune in by inputting the frequency digits directly.
  - **Manual tuning**: tune in by manually changing the frequency step by step.
  - **Scan tuning**: scans automatically through the band and stops at reception.
  - **Preset tuning**: tune in by recalling a preset broadcast station with the single press of a button.
- **Label editing**
  Label preset frequencies, time zones, etc., with a station name, city name, etc., or any combination of up to 6 alphanumeric letters.
- **Built-in timer operation**
  Turns on the radio automatically at any preset time to a station of your choice. Preset two individual standby-times and frequencies under STANDBY MEMORY a and b.
- **Sleep timer**
  Set the sleep timer and fall asleep to the radio. The timer turns off the radio automatically after approximately 60 minutes.
- **Stereo FM reception**
  Use the supplied stereo headphones to enjoy stereo FM.

Tips on radio waves

What is SSB (Single Side Band)?

SSB is very popular among ham and business radio transmissions, and is commonly used in many amateur bands because of its superiority in signal intelligibility. Its impressive signal intelligibility is achieved with minimum interferences when compared to DSB (Double Side Band) owing to its half bandwidth structure.

In general, SSB transmissions employ the USB (Upper Side Band) modulation, while amateur band transmissions below 10 MHz employ the LSB (Lower Side Band) modulation.

Conventional radios without a BFO (Beat Frequency Oscillator) circuit cannot receive SSB transmissions successfully. This unit can receive SSB transmissions successfully with the built-in BFO (Beat Frequency Oscillator) circuit.

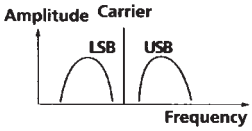

What is CW (Continuous Wave)?

CW is also popular among ham and business radio transmissions. Unlike other signals, the amplitude of a carrier is not modulated for CW transmissions. CW transmissions convey information by interrupting the carrier and use Morse code as a means of communication.

This unit can receive CW transmissions successfully with the built-in BFO (Beat Frequency Oscillator) circuit as beat sound only. To fully comprehend the information transmitted by CW transmissions, an understanding of the Morse code is prerequisite.

What is synchronous detection?

There are two underlying obstacles in optimum AM reception: distortions due to fading and interferences from adjacent broadcast stations.

Synchronous detection is effective in solving these obstacles.

Distortions due to fading are generally caused by over-modulation which occurs when a carrier component of the received signal is attenuated along the way. The synchronous detection circuit of this unit generates a pure carrier frequency with no level variation which is ideally synchronized with the original carrier to compensate for the attenuated carrier component, thus dramatically reducing distortion.

Likewise, AM (LW, MW, and SW) broadcast generally employs DSB (Double Side Band) signals for transmissions in which the modulated signals are transmitted using both the upper and lower side bands (USB and LSB). In most cases, one of the side bands is affected by interferences from adjacent broadcast stations (i.e., beats). The synchronous detection circuit of this unit extracts one of the two sides (USB or LSB) of the DSB (Double Side Band) signal which is free from interferences. This allows clear reception without the interferences from adjacent broadcast stations.

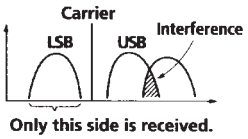

SECTION 3
DISASSEMBLY

● The equipment can be removed using the following procedure.

<RADIO SECTION>

Set → Cabinet (Lower) ASSY
Set → Cabinet ASSY → Chassis ASSY → Main board
Cabinet ASSY → Chassis ASSY → Key board
Cabinet ASSY → Microcomputer board

<ANTENNA CONTROLLER SECTION>

Set → Cabinet (Front), Reel ASSY
Set → Cabinet (Rear), Reel board, Control board

Note : Follow the disassembly procedure in the numerical order given.

<RADIO SECTION>

3-1. CABINET (LOWER), CABINET ASSY

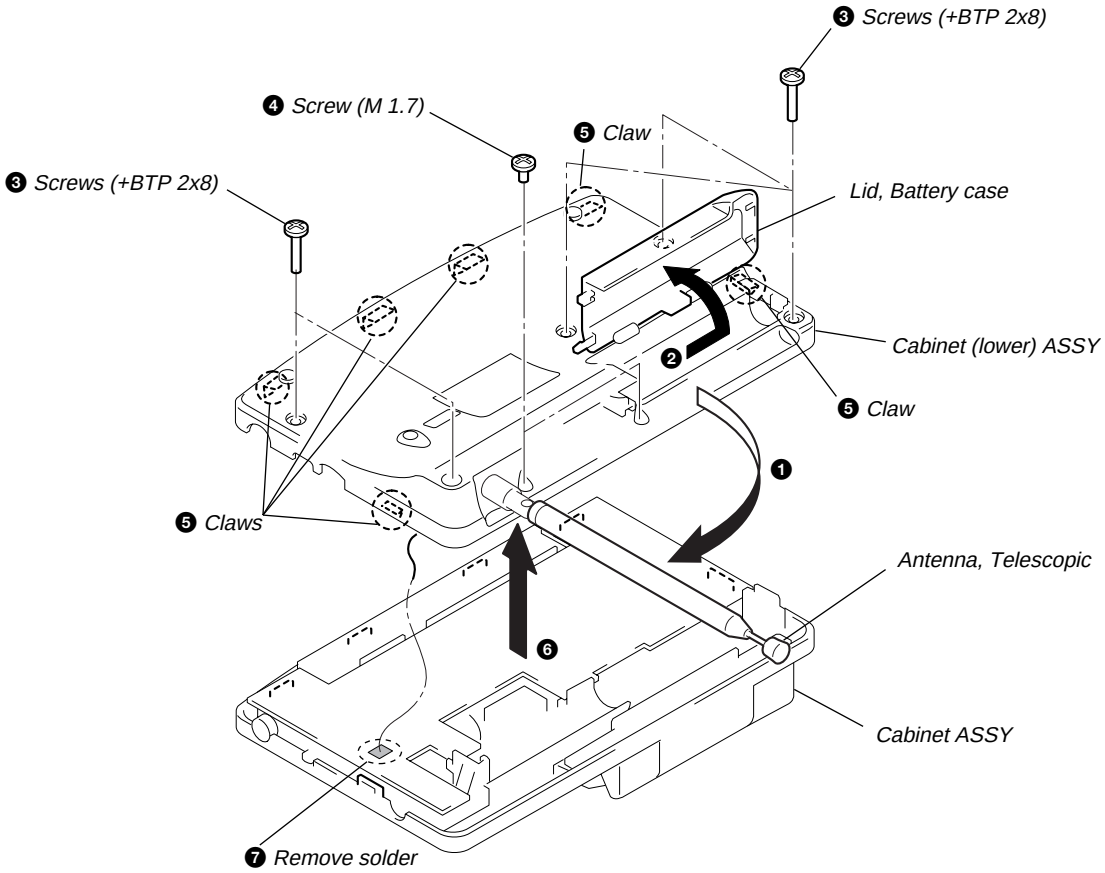

3-2. CHASSIS ASSY

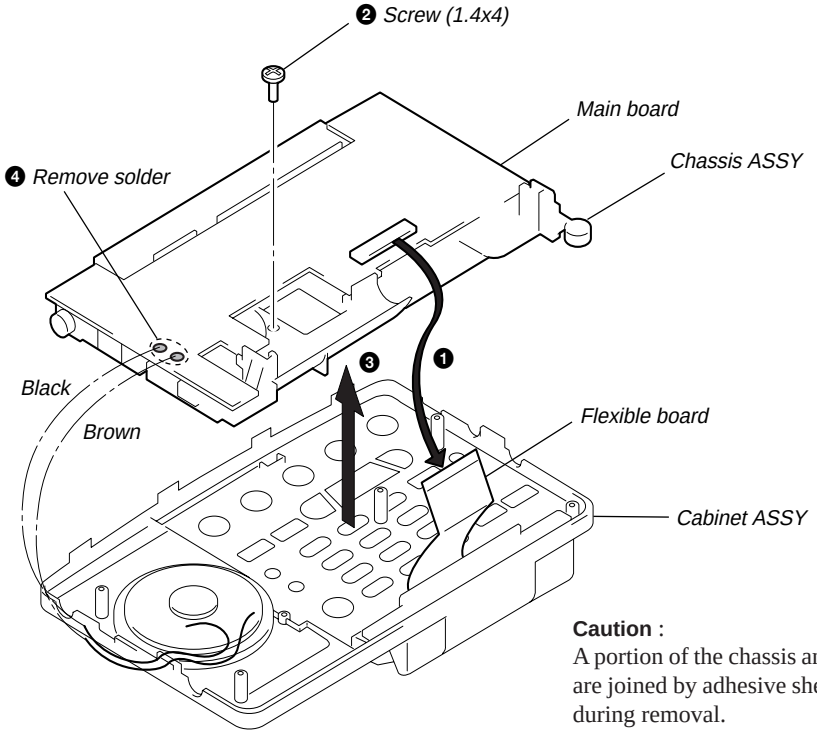

Caution :
A portion of the chassis and cabinet ASSY are joined by adhesive sheet so use caution during removal.

3-3. MAIN BOARD

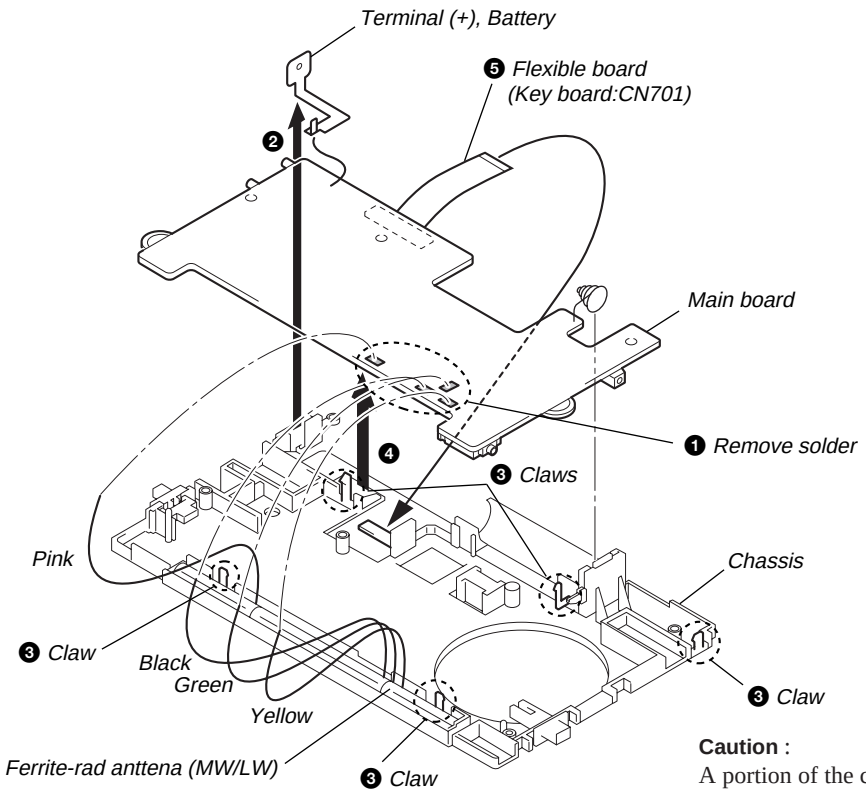

Caution :
A portion of the chassis and main board are joined by adhesive sheet so use caution during removal.

3-4. KEY BOARD

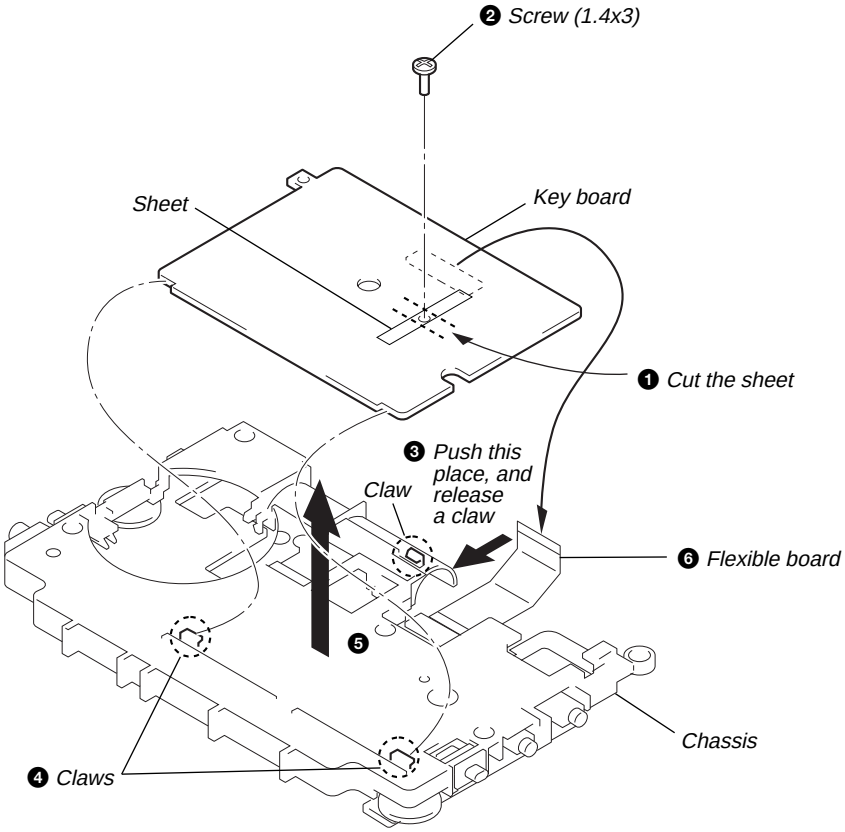

3-5. MICROCOMPUTER BOARD

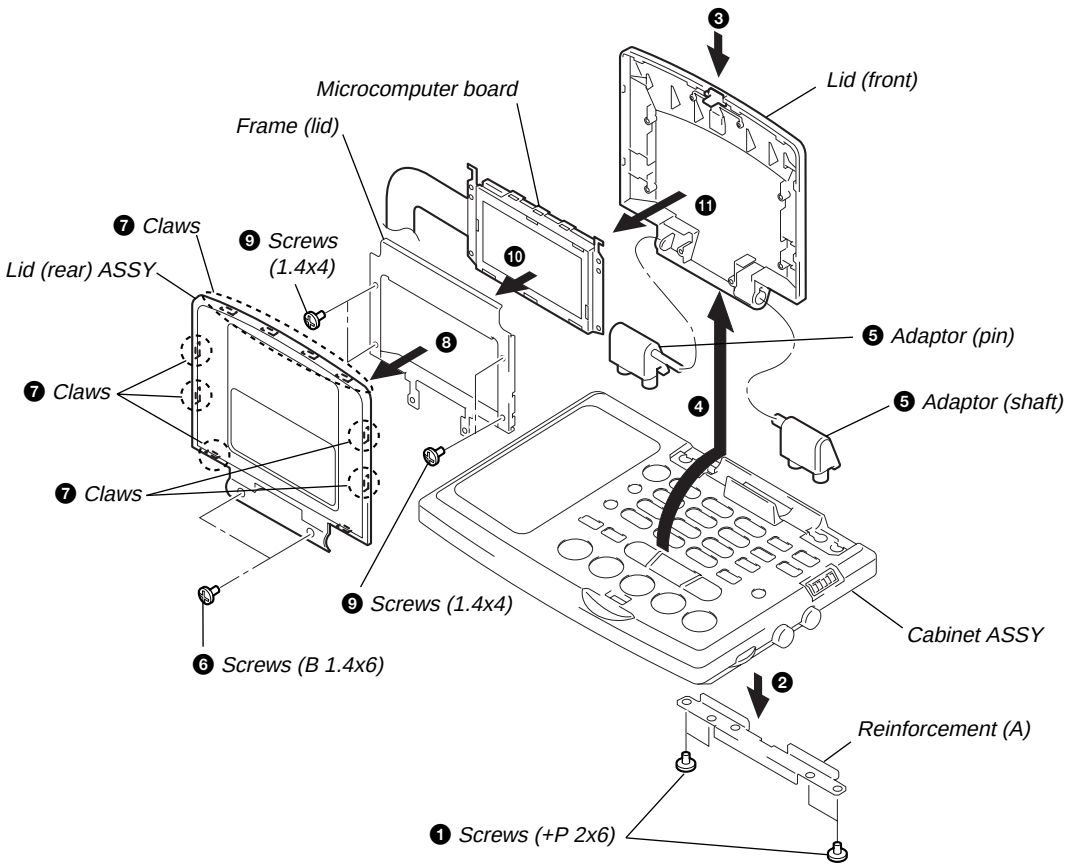

<ANTENNA CONTROLLER SECTION>

3-6. CABINET (FRONT), REEL ASSY

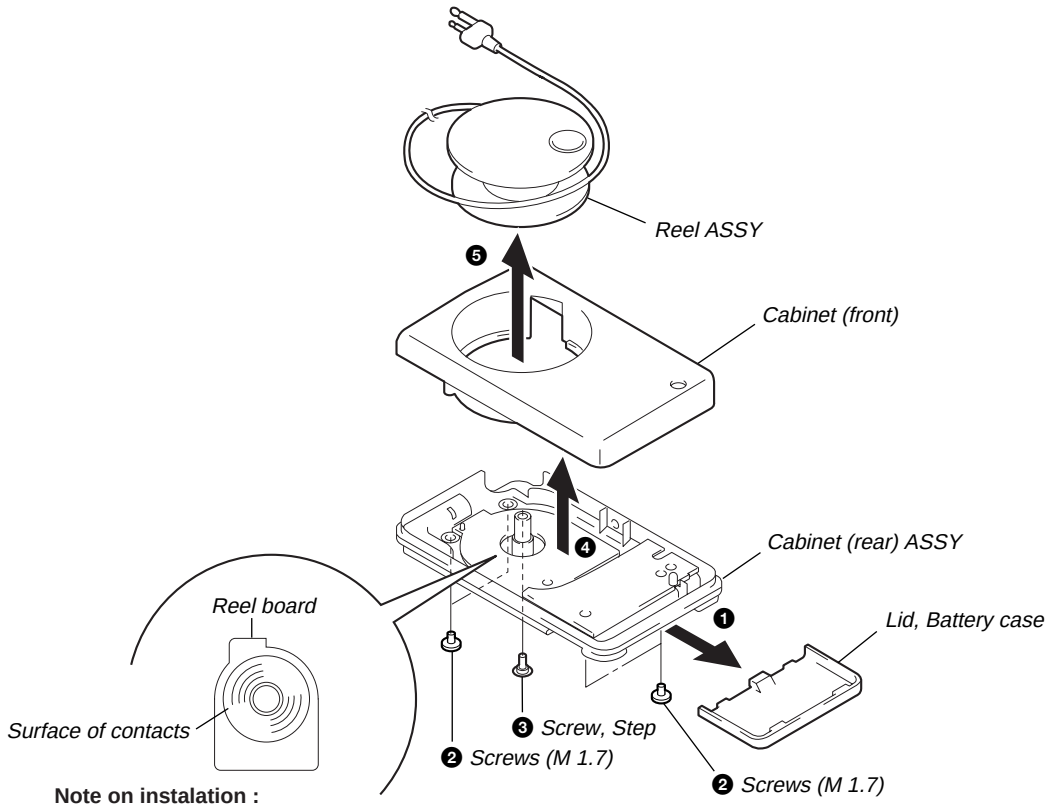

Note on instalation :
Apply grease (J-2502-028-1) to the surface of contacts on the reel board.

3-7. CABINET (REAR), REEL BOARD, CONTROL BOARD

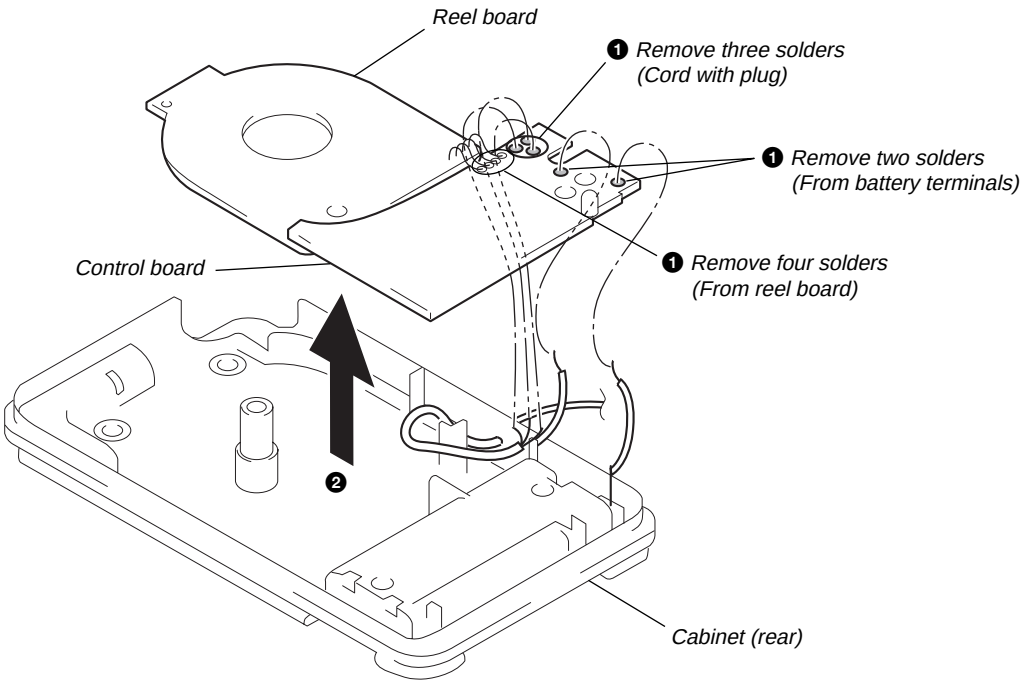

SECTION 4
ELECTRICAL ADJUSTMENTS

AM SECTION 0dB=1µV

2nd LOCAL Adjustment

BAND : AM
VOLUME control : as required

Connection Points :

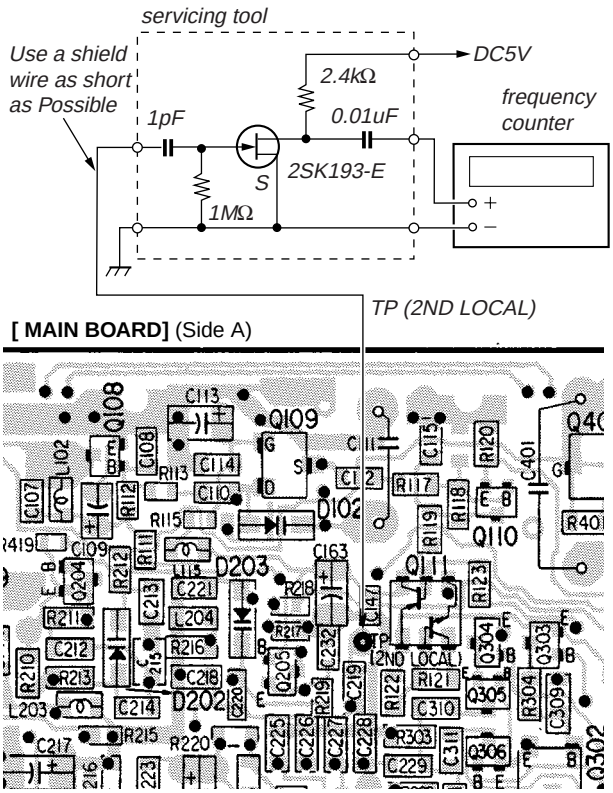

Procedure :

1. Tune the set to AM 150kHz.
2. Press the SSB button, and confirm that USB is displayed.
3. Press the ➡I button.
4. Adjust CT201 to obtain a 55.39MHz on the frequency counter.
   Standard value : 55.38997 – 55.39003 MHz
5. Press the ⬅ button only once. (Return to 2 if wrong)
6. Adjust RV203 to obtain a 55.3891MHz on the frequency counter.
   Standard value : 55.38907 – 55.38913 MHz

Adjustments Location : MAIN board (see page 33)

1 st IF Adjustment

BAND : AM
VOLUME control : as required

Setup :

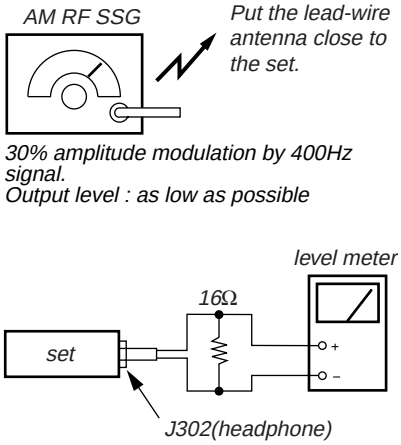

Procedure :

1. Set the frequencies of the AM RF SSG and the frequency display of the set to 150kHz.
2. Adjust T104 and T105 to obtain a maximum reading on the level meter.

Adjustments Location : MAIN board (see page 33)

SSB ZERO BEAT Adjustment

Setup :

BAND : AM
MODE : SSB (USB or LSB/CW)

Procedure :

1. Tune to the strong and stable AM station nearby.
2. Adjust the RV201 to attain zero beat (no beat sound heard).
3. Change the mode to the alternative band (LSB/CW if USB), and if not, readjust.

Adjustments Location : MAIN board (see page 33)

SW FREQUENCY Adjustment

BAND : AM

VOLUME control : as required

Connection Points :

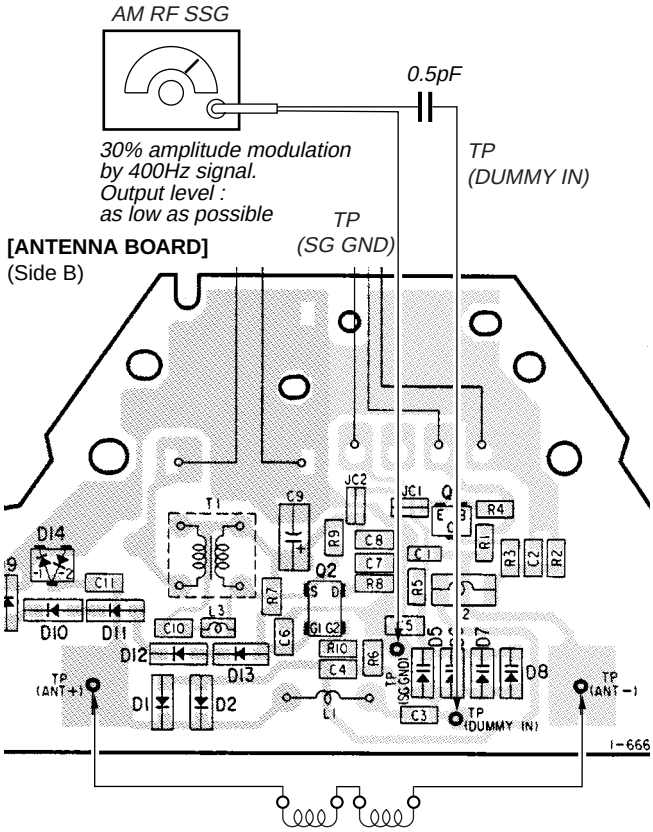

Two dummy antenna coils 1µH (1-410-497-11)

Note : Disconnect a loop antenna ASSY from the antenna board, and connect two dummy antenna coils in series connection.

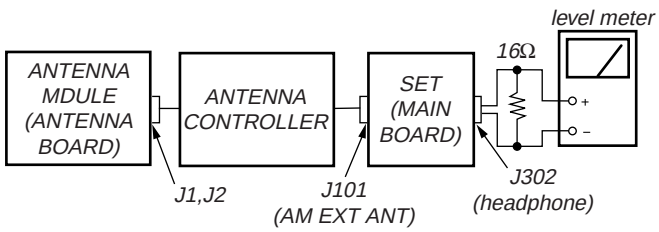

Procedure :

1. Align the set with the frequency of the AM RF signal generator shown on the table below.
2. Align RV401 - RV412 for each band meter band until the highest reading is obtained on the level meter.

AM RF SSG frequency	Meter band	Adjust part
2.4MHz	120mb	RV401
3.3MHz	90mb	RV403
3.95MHz	75mb	RV405
4.9MHz	60mb	RV407
6.075MHz	49mb	RV409
7.25MHz	41mb	RV411
9.7MHz	31mb	RV402
11.825MHz	25mb	RV404
13.7MHz	22mb	RV406
15.35MHz	19mb	RV408
18.275MHz	16mb	RV410
23.5MHz	13mb	RV412

Caution : Always perform the SW Frequency Adjustment after having replace the main circuit board or antenna circuit board.

Adjustments Location : MAIN board (see page 33)

FM SECTION

FM FREQUENCY COVERAGE Adjustment

BAND : FM
VOLUME control : as required

Connection Points :

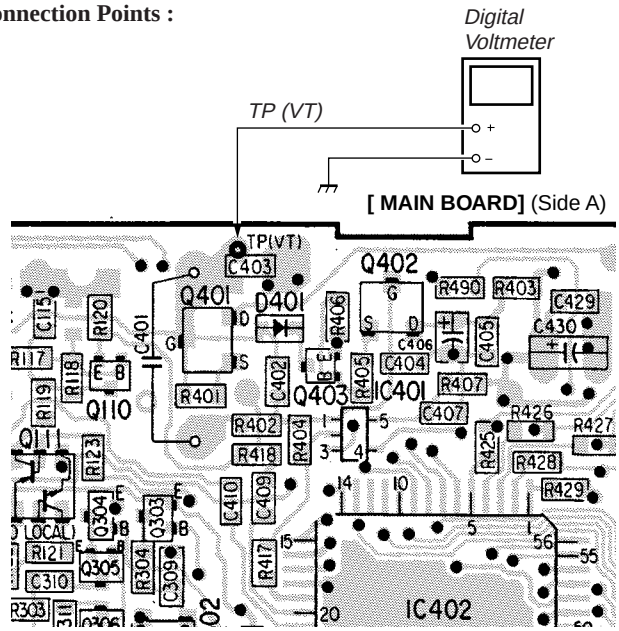

Procedure :

1. Tune the set to 76MHz.
2. Adjust T201 to obtain a 1.6V on the digital voltmeter.
   Standard value : 1.55 – 1.65V
3. Tune the set to 108MHz.
4. Make sure that the digital voltmeter reading is below 11V.

Adjustments Location : MAIN board (see page 33)

FM TRACKING Adjustment

Note : This adjustment should be performed after the remove Rod Antenna (ANT102).
This adjustment should be performed after the FM FREQUENCY COVERAGE ADJUSTMENT.

BAND : FM
VOLUME control : as required

Connection Points :

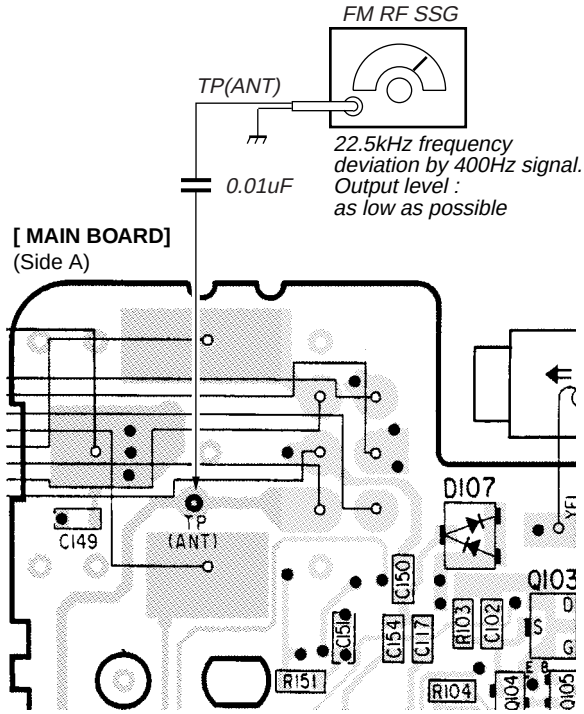

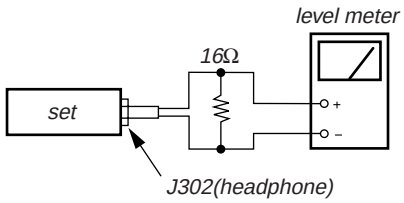

Procedure :

1. Set the frequencies of the FM RF SSG and the frequency display of the set to 76MHz.
2. Adjust T106 and T107 to obtain a maximum reading on the level meter.
3. Set the frequencies of the FM RF SSG and the frequency display of the set to 108MHz.
4. Adjust CT101 and CT102 to obtain a maximum reading on the level meter.
5. Repeat the above steps several times, and finish the adjustment with the trimmers CT101 and CT102.

Adjustments Location : MAIN board (see page 33)

FM STEREO Adjustment

BAND : FM
ST • MONO switch : ST
VOLUME control : as required

Connection Points :

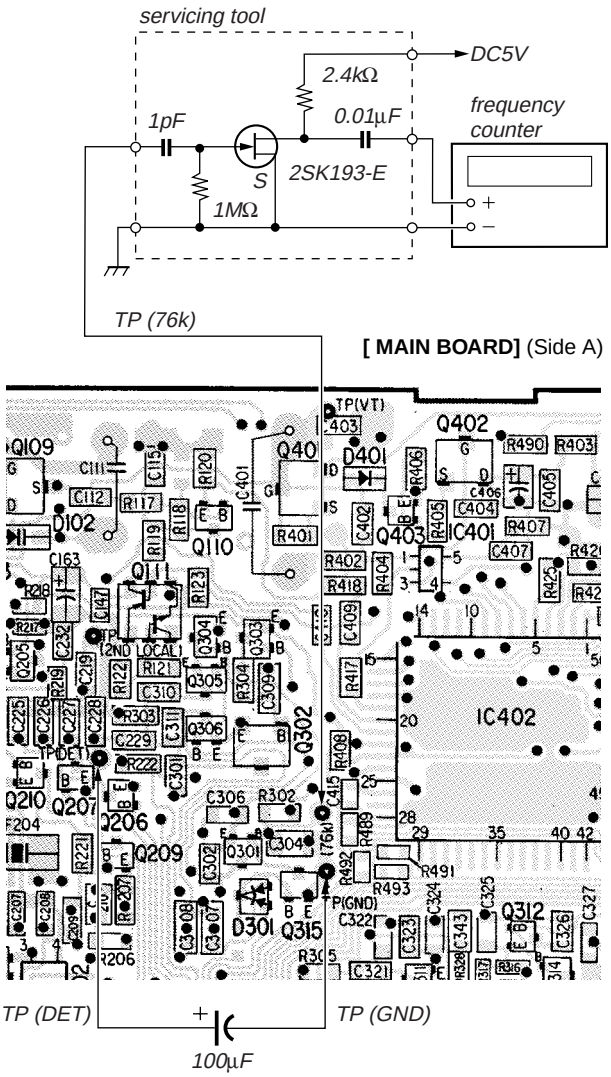

Note : Connect a capacitor (100µF) to TP (DET) during TP (GND).

Procedure :

1. Adjust RV301 to obtain a 76kHz on the frequency counter.
   Standard value : 75.7 – 76.3MHz

Adjustments Location : MAIN board (see page 33)

SD Adjustment

BAND : FM
VOLUME control : as required

Connection Points :

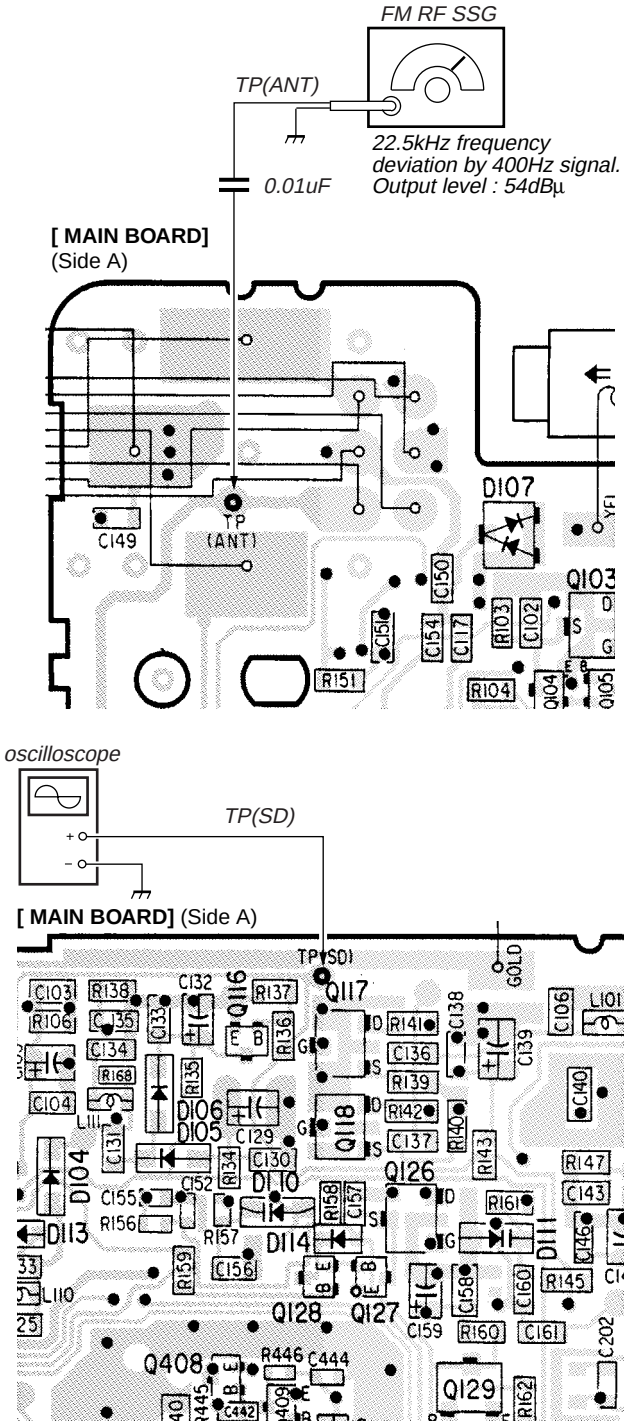

Procedure :

1. Set the frequencies of the FM RF SSG and the frequency display of the set to 93MHz.
2. Adjust RV202 so that a waveform on oscilloscope is as shown below.

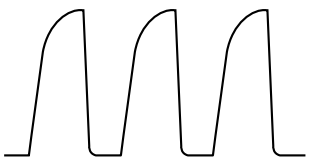

Adjustments Location : MAIN board (see page 33)

FM 100MHz Adjustment

BAND : FM

VOLUME control : as required

Connection Points :

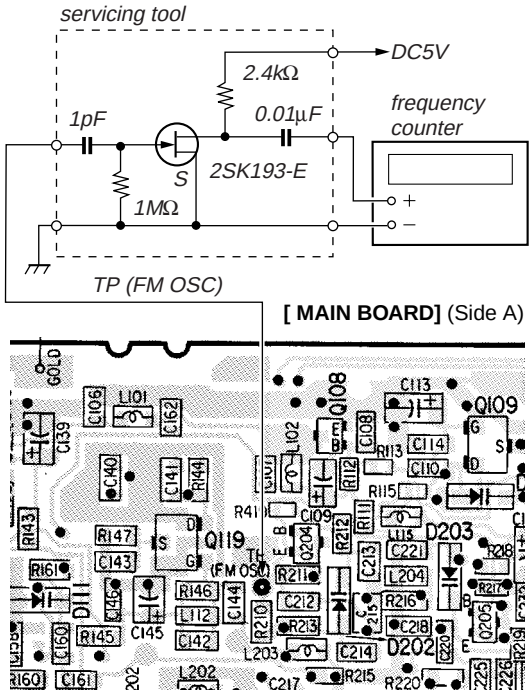

Procedure :

1. Tune the set to FM 89.3MHz.
2. Adjust CT401 to obtain a 100MHz on the frequency counter. Standard value : 99.99997 – 100.00003MHz

Adjustments Location : MAIN board

MICROCOMPUTER SECTION

4MHz SYSTEM CLOCK Adjustment

BAND : AM

VOLUME control : as required

Connection Points :

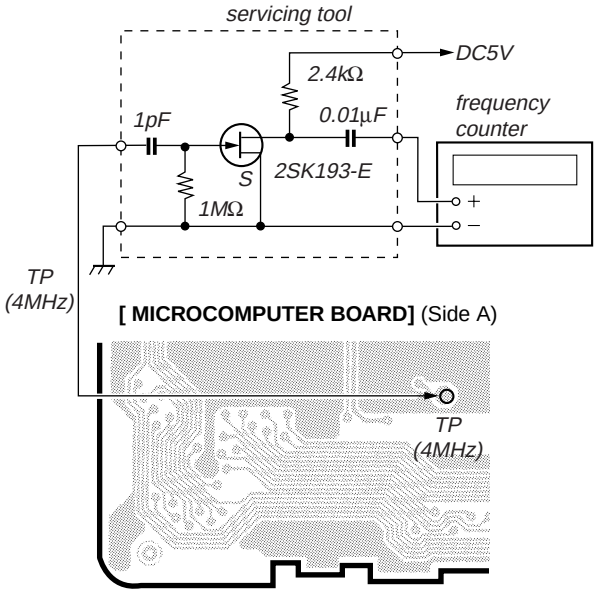

Procedure :

1. Tune the set to AM 150kHz.
2. Adjust CT501 to obtain a 4.04MHz on the frequency counter. Standard value : 4.038 – 4.042MHz
3. Tune the set to AM 1010kHz.
4. Make sure that the frequency counter reading is 3.9670 – 3.9730 MHz

Adjustments Location :

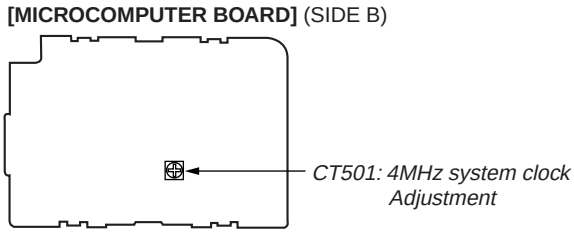

Adjustments Location :

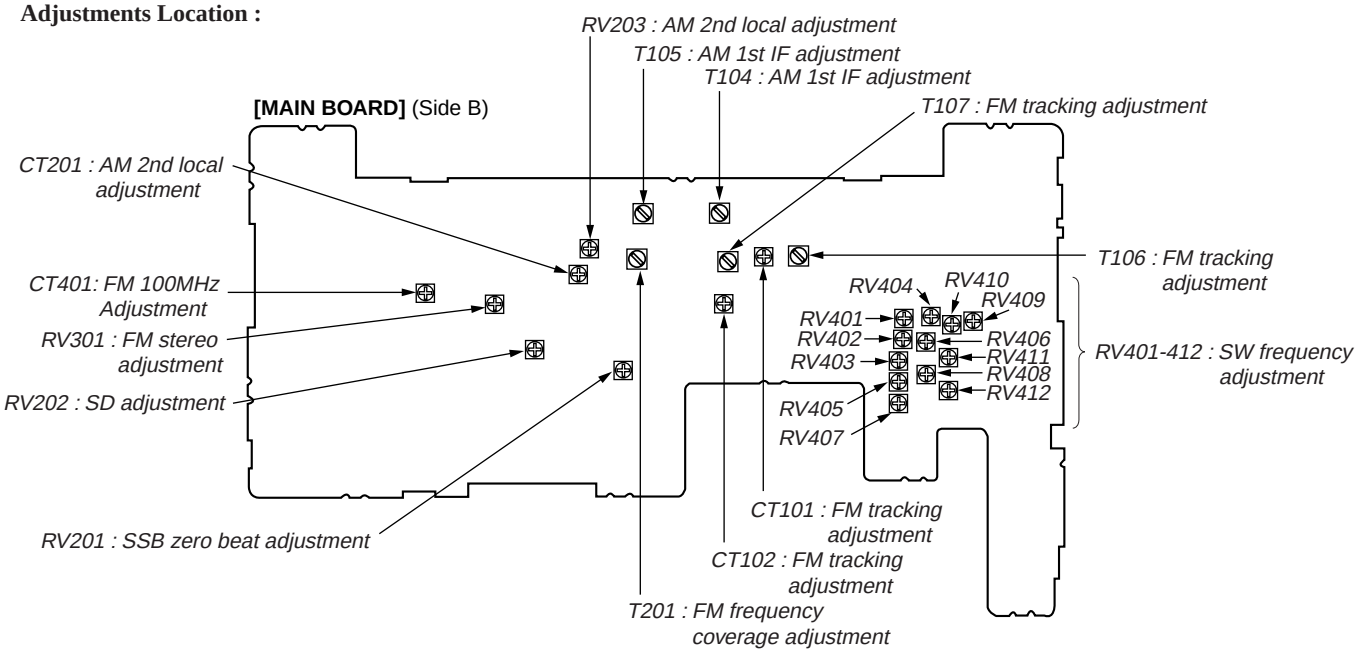

SECTION 5
DIAGRAMS

5-1. EXPLANATION OF IC TERMINALS

IC402 μPD17072GB-556-1A7 (PLL SYNTHESIZER CONTROL)

Pin No.	Pin name	I/O	Description
1	ROD/BAR	O	ROD/BAR antenna select output. "H" : BAR, "L" : ROD
2	AM/FM	O	AM/FM select output. "H" : AM, "L" : FM
3	ENV/PSN	O	ENV/PSN select output. "H" : ENV, "L" : PSN
4	SSB/SYNC	O	SSB/SYNC select output. "H" : SSBR, "L" : SYNC
5	L/U	O	USB/LSB select output.
6	BAND0	O	Meter band select output.
7	BAND1	O	Meter band select output.
8	BAND2	O	Meter band select output.
9	BAND3	O	Meter band select output.
10 – 13	———	–	Not used (OPEN).
14	DA0	I/O	DA signal in/out terminal.
15	DA1	I/O	DA signal in/out terminal.
16	DA2	I/O	DA signal in/out terminal.
17	DA3	I/O	DA signal in/out terminal.
18	GND	–	Ground terminal.
19	EO	O	PLL charge pump output.
20	VCOL	I	MF, HF input terminal.
21	VCOH	I	VHF input terminal.
22	REGO	O	Regurator output for PLL.
23	VDD	–	Power supply terminal.
24	XOUT	O	Osillator output terminal (75kHz).
25	XIN	I	Osillator input terminal (75kHz).
26	REG1	O	Regurator output for oscillator.
27 – 49	———	–	Not used (OPEN).
50	CE	I	Chip enable input.
51	REQ	I	PLL request signal input.
52	PLL-CTL	O	PLL control output.
53	UNLOCK	O	PLL unlock signal output.
54	ACK	O	Clock signal ouput for system control (IC501).
55	SCK	O	Clock signal ouput for sub system control (IC502).
56	SI	I	Data signal input for sub system control (IC502).

IC501 μPD753017AGK-717-BE9 (MAIN SYSTEM CONTROL, LCD DRIVE)

Pin No.	Pin name	I/O	Description
1 – 12	S12 – 23	O	LCD segment signal output.
13 – 16	———	–	Not used (OPEN).
17	XTAL-CTL	O	Level shift control output for system clock.
18	BEEP-CTL	O	Beep signal control ouptut.
19	IF-POWER	O	IF B+ ON/OFF control output.
20	AF-POWER	O	Power amp ON/OFF control output.
21	COM0	O	LCD common signal output.
22	COM1	O	LCD common signal output.
23	COM2	O	LCD common signal output.
24	COM3	O	LCD common signal output.
25	BIAS	O	Bias output for LCD.
26	VLC0	–	LCD drive power supply.
27	VLC1	–	LCD drive power supply.
28	VLC2	–	LCD drive power supply.
29	SD	I	SD signal input terminal.
30	TUNE	I	TUNE signal input terminal.
31	———	–	Connect to VDD.
32	HOLD	I	Hold switch input.
33	GND	–	Ground terminal.
34	MUTE	O	Mute signal output.
35	SET	–	Not used (OPEN).
36	REQ-SUB	O	Request signal output for sub system control.
37	REQ-DTS	O	DTS request signal output for PLL.
38	VDET-1	I	Power voltage detect input.
39	SCK	I	Sub clock signal input.
40	SO	O	Data signal output.
41	SI	I	Data signal input.
42	ACK	I	Clock signal input from PLL.
43	VDET2	I	Power voltage detect input.
44	UNLOCK	I	PLL unlock detect input.
45	CARD	–	Connect to ground.
46	———	–	Not used (OPEN).
47	CS1	O	Chip select output for ROM.
48	BEEP	O	Beep signal output.
49	CS0	O	Chip select signal output.
50	KS0	I	Key input.
51	KS1	I	Key input.
52	KS2	I	Key input.
53	KS3	I	Key input.
54	VDD	–	Power supply terminal.
55	XT1	I	Sub clock input (32.768kHz).
56	XT2	O	Sub clock output (32.768kHz).
57	IC	–	Connect to VDD.
58	X1	I	Main system clock input (4MHz).
59	X2	O	Main system clock output (4MHz).
60 – 67	KR0 – KR7	I	Key input terminal.
68	RESET	I	System reset input. “L” : Reset
69 – 80	S0 – S11	O	LCD segment signal output.

IC502 μPD753012AGK-781-BE9 (SUB SYSTEM CONTROL, LCD DRIVE)

Pin No.	Pin name	I/O	Description
1 – 18	S12 – S29	O	LCD segment signal output.
19, 20	———	–	Not used (OPEN).
21	COM0	O	LCD common signal output.
22	COM1	O	LCD common signal output.
23	COM2	O	LCD common signal output.
24	COM3	O	LCD common signal output.
25	BIAS	O	Bias output for LCD.
26	VLC0	–	LCD drive power supply.
27	VLC1	–	LCD drive power supply.
28	VLC2	–	LCD drive power supply.
29 – 37	———	–	Not used (Connect to GND).
38	REQ	I	Request signal input.
39	SCK	I	Sub clock input.
40	———	–	Not used (fix to “L”).
41	SI	I	Data signal input.
42 – 45	———	–	Not used (Connect to GND).
46	ACK	O	PLL clock signal control output.
47 – 53	———	–	Not used (OPEN).
54	VDD	–	Power supply terminal.
55	XT1	I	Sub clock input (32.768kHz).
56	XT2	O	Sub clock output (32.768kHz).
57	IC	–	Connect to VDD.
58	X1	I	System main clock input (4MHz).
59	X2	O	System main clock output (4MHz).
60 – 67	———	–	Not used (OPEN).
68 – 80	S0 – S11	O	LCD segment signal output.

● **Circuit Boards Location**

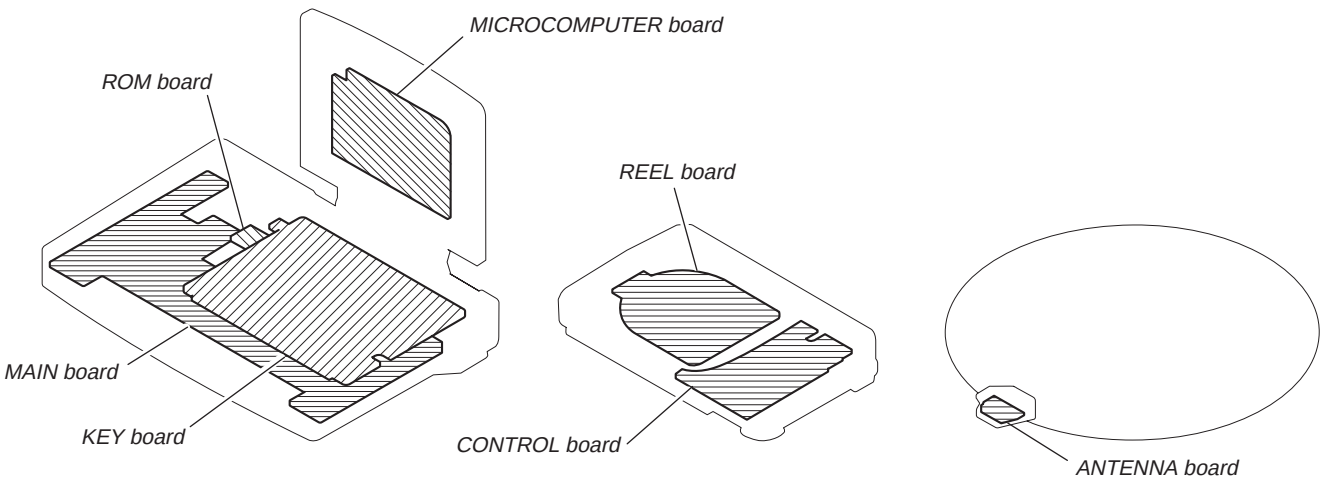

ICF-SW07 **ANTENNA CONTROLLER** **SW LOOP ANTENNA**

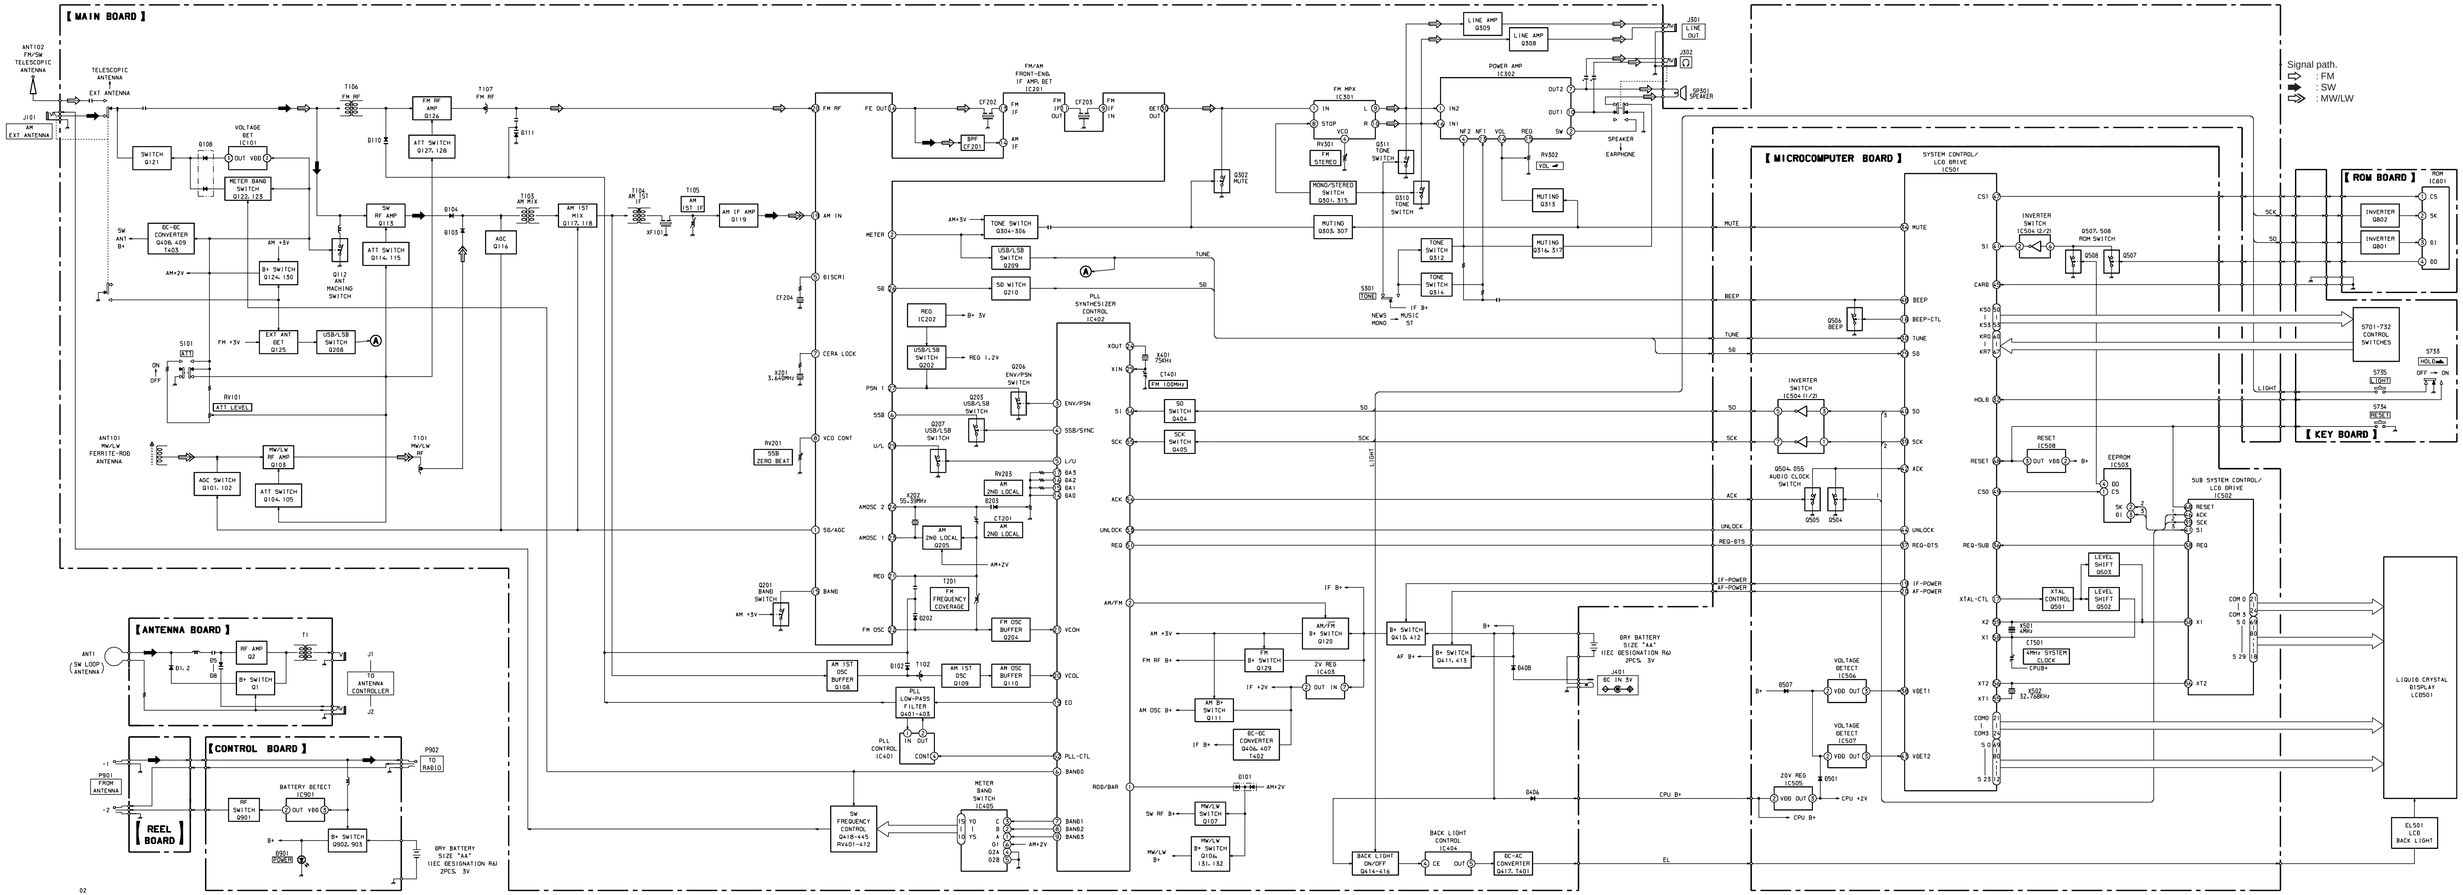
【MAIN BOARD】
【ANTENNA BOARD】
【CONTROL BOARD】
【MICROCOMPUTER BOARD】
【ROM BOARD】
【KEY BOARD】
REEL BOARD
Signal path.
: FM
: SW
: MW/LW
ANT102 FM/SW TELESCOPIC ANTENNA
TELESCOPIC ANTENNA
EXT ANTENNA
J101 AM EXT ANTENNA
SWITCH Q121
VOLTAGE DET IC101
METER BAND SWITCH Q122, 123
DC-DC CONVERTER Q408, 409 T405
SW ANT B+
AM +2V
AM +5V
B+ SWITCH Q124, 150
EXT ANT DET Q125
USB/LSB SWITCH Q208
FM +5V
S101 ANT
ON OFF
RV101 ATT LEVEL
ANT101 MW/LW FERRITE-ROD ANTENNA
AGC SWITCH Q101, 102
MW/LW RF AMP Q103
ATT SWITCH Q104, 105
T101 MW/LW RF
T106 FM RF
FM RF AMP Q126
T107 FM RF
ATT SWITCH Q127, 128
SW RF AMP Q113
ATT SWITCH Q114, 115
Q112 ANT MATCHING SWITCH
AGC Q116
T103 AM RF
T104 AM 1ST
T105 AM 1ST IF
XF101
AM 1ST MIX Q117, 118
AM IF AMP Q119
FM RF
AM IN
METER
S0
B15CR1
CERA LOCK
X201 3.640MHz
PSN 1
SSB
VCO CONT
U/L
RV201 SSB ZERO BEAT
AMOSC 2
AMOSC 1
SG/AGC
REG
BAND
FM OSC
Q201 BAND SWITCH
AM +5V
FE OUT
CF202 FM IF
BPF IC201
AM IF
CF205 FM IF IN
FM IF OUT
DET OUT
FM/AM FRONT-END, IF AMP, DET IC201
Q202 MUTE
AM+5V
TONE SWITCH Q304-306
USB/LSB SWITCH Q209
S0 WITCH Q210
TUNE
S0
REG IC202
B+ 5V
USB/LSB SWITCH Q202
REG 1.2V
PSN 1
Q206 ENV/PSN SWITCH
Q205 USB/LSB SWITCH
Q207 USB/LSB SWITCH
RV205 AM 2ND LOCAL
Q203 AM 2ND LOCAL
X202 55.390MHz
CT201 AM 2ND LOCAL
AM 2ND LOCAL Q205
AM+2V
T201 FM FREQUENCY COVERAGE
T202
FM OSC BUFFER Q204
AM 1ST OSC BUFFER Q108
AM 1ST OSC Q109
AM OSC BUFFER Q110
PLL LOW-PASS FILTER Q401-405
PLL IC401
IN OUT
CONT
SW FREQUENCY CONTROL Q418-445 RV401-412
METER BAND SWITCH IC405
PLL SYNTHESIZER CONTROL IC402
XOUT
XIN
X401 75KHz
CT401 FM 100MHz
ENV/PSN
SSB/SYNC
L/U
BA3
BA2
BA1
BA0
S0 SWITCH Q404
SCK SWITCH Q405
ACK
UNLOCK
REG
AM/FM
VCOH
VCOL
EO
PLL-CTL
BAND0
BAND1
BAND2
BAND3
RDS/BAR
FM MPX IC301
IN
STOP
VCO
L
R
RV301 FM STEREO
MONO/STEREO SWITCH Q301, 315
MUTING Q305, 307
Q311 TONE SWITCH
Q310 TONE SWITCH
S301 TONE
NEWS MONO
IF B+
MUSIC S1
LINE AMP Q309
LINE AMP Q308
POWER AMP IC552
IN2
IN1
NF2 NF1 VOL REG
OUT2
OUT1
SW
RV502 VOL
MUTING Q313
MUTING Q316, 317
TONE SWITCH Q313
TONE SWITCH Q314
J501 LINE OUT
J502
SP101 SPEAKER
SPEAKER EARPHONE
AM/FM B+ SWITCH Q120
FM B+ SWITCH Q129
2V REG IC408
OUT IN
AM B+ SWITCH Q111
DC-DC CONVERTER Q406, 407 T402
MW/LW SWITCH Q107
MW/LW B+ SWITCH Q104, 131, 132
B+ SWITCH Q410, 412
AF B+ SWITCH Q411, 413
D408
DRY BATTERY SIZE "AA" (IEC DESIGNATION R6) 2PCS. 3V
J401 DC IN 3V
D406
BACK LIGHT ON/OFF Q414-416
BACK LIGHT CONTROL IC404
CE OUT
DC-AC CONVERTER Q417, T403
EL
CPU B+
CPU +2V
20V REG IC505
D501
D507
VOLTAGE DETECT IC506
VOLTAGE DETECT IC507
VDD OUT
VDET1
VDET2
SYSTEM CONTROL/ LCD DRIVE IC501
MUTE
BEEP
BEEP-CTL
TUNE
S0
SCK
ACK
UNLOCK
REQ-BTS
IF-POWER
AF-POWER
XTAL-CTL
REQ-SUB
REQ
X1
XT2
XT1
COM0
COM3
S0
S29
CS1
SI
CARD
KS0 KS3
KR0 KR7
HOLD
RESET
CS0
INVERTER SWITCH IC504 (1/2)
INVERTER SWITCH IC504 (2/2)
Q506 BEEP
Q504, 505 AUDIO CLOCK SWITCH
Q505
Q504
Q507, 508 ROM SWITCH
Q508
Q507
INVERTER Q802
INVERTER Q801
ROM IC801
S701-732 CONTROL SWITCHES
S735 LIGHT
S734 RESET
S733 HOLD
OFF → ON
RESET IC508
EEPROM IC503
SUB SYSTEM CONTROL/ LCD DRIVE IC502
LEVEL SHIFT Q503
LEVEL SHIFT Q502
XTAL CONTROL Q501
X501 4MHz
CT501 4MHz SYSTEM CLOCK
CPUB+
X502 32.768KHz
LIQUID CRYSTAL DISPLAY LCD501
EL501 LCD BACK LIGHT
ANT1 (SW LOOP ANTENNA)
D1, 2
D8
RF AMP Q2
B+ SWITCH Q1
T1
J1
TO ANTENNA CONTROLLER
J2
P901 FROM ANTENNA
P902 TO RADIO
RF SWITCH Q901
BATTERY DETECT IC901
B+ SWITCH Q902, 903
Q951 POWER
DRY BATTERY SIZE "AA" (IEC DESIGNATION R6) 2PCS. 3V

● VOLTAGE VALUES OF IC402 PINS ⑥ - ⑨ ON CONNECTING AM EXT ANTENNA (SW RECEPTION)

(UNIT : V)

Pin No.	11mb	13mb	15mb	16mb	19mb	22mb	25mb	31mb	41mb	49mb	60mb	75mb	90mb	120mb
6	2	2	2	2	2	2	2	2	0	0	0	0	0	0
7	2	2	2	2	0	0	0	0	2	2	0	0	0	0
8	0	0	0	0	2	2	0	0	0	0	2	2	0	0
9	2	2	0	0	2	0	2	0	2	0	2	0	2	0

● VOLTAGE VALUES OF IC405 ON CONNECTING AM EXT ANTENNA (SW RECEPTION)

(UNIT : V)

Pin No.	11mb	13mb	15mb	16mb	19mb	22mb	25mb	31mb	41mb	49mb	60mb	75mb	90mb	120mb
1	2	2	0	0	2	0	2	0	2	0	2	0	2	0
2	0	0	0	0	2	2	0	0	0	0	2	2	0	0
3	2	2	2	2	0	0	0	0	2	2	0	0	0	0
10	2	2	0	0	0	0	0	0	2	0	0	0	0	0
11	0	0	2	2	0	0	0	0	0	2	0	0	0	0
12	0	0	0	0	2	0	0	0	0	0	2	0	0	0
13	0	0	0	0	0	2	0	0	0	0	0	2	0	0
14	0	0	0	0	0	0	2	0	0	0	0	0	2	0
15	0	0	0	0	0	0	0	2	0	0	0	0	0	2
6, 16	2	2	2	2	2	2	2	2	2	2	2	2	2	2

Note:
- All capacitors are in µF unless otherwise noted. pF: µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- B+ : B+ Line.
- ▭ : adjustment for repair.
- Power voltage is dc 3V and fed with regulated dc power supply from external power voltage jack.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
  ( ) : MW/LW
  < > : SW
  [ ] :AM EXT ANT CONNECTED
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  ⇨ : FM
  ➡ : SW
  ⇨» : MW/LW

● Waveforms (MAIN Section)

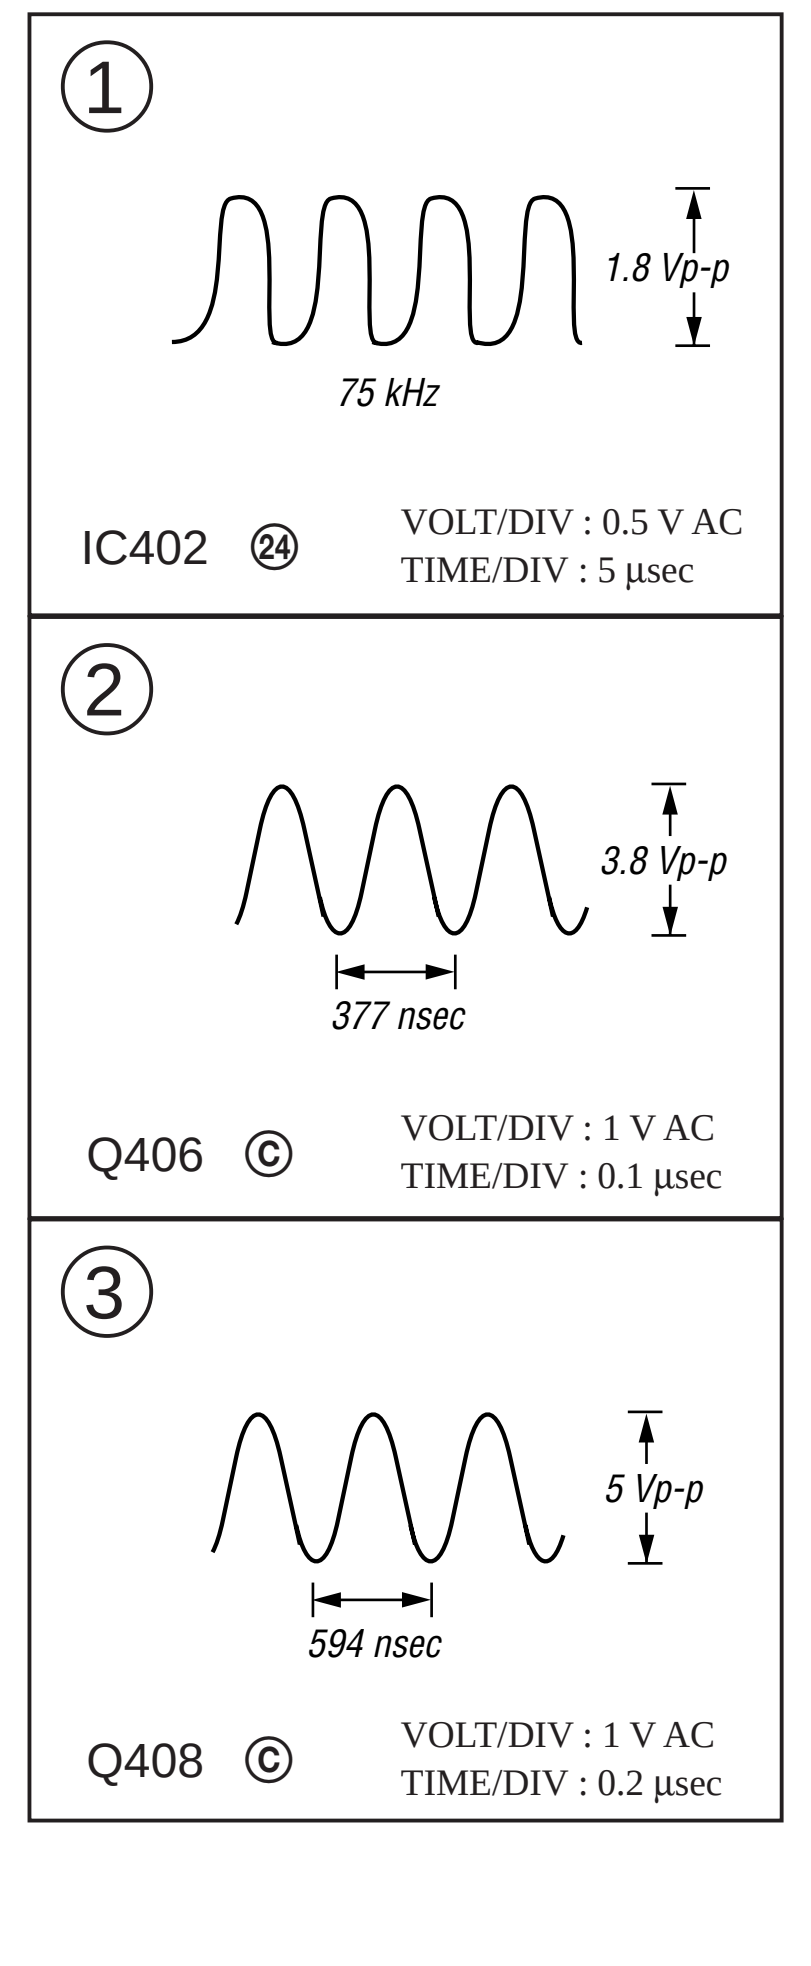

● VOLTAGE VALUES OF TRANSISTORS Q418 - 445 ON CONNECTING AM EXT ANTENNA (SW RECEPTION)

(UNIT : V)

SW		11mb	13mb	15mb	16mb	19mb	22mb	25mb	31mb	41mb	49mb	60mb	75mb	90mb	120mb
Q418	E	18.1	18.1	18	18	18	18	18	18	18	18	18	18	18	0.7
	B	18.7	18.7	12.3	12.3	10	8.6	6.8	4.7	16.8	13	9.8	7.2	4.8	0.2
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.2	12.7	9	6	3.7	7
Q419	E	18.1	18.1	18	18	18	18	18	3.2	18	18	18	18	18	18.1
	B	18.7	18.7	12.7	12.7	10	8.6	6.8	2.6	16.8	13	9.8	7.2	4.8	1.9
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.2	12.7	9	6	3.7	0.7
Q420	E	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	3.7	18.4
	B	18.7	18.7	13.1	13.1	10.5	9.2	7.4	5.5	16.9	13.3	10.3	7.8	3.1	2.2
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.2	12.7	9	6	3.7	0.7
Q421	E	18.7	18.7	18.7	18.7	18.6	18.6	5.7	18.7	18.6	18.6	18.6	18.6	18.6	18.7
	B	18.7	18.7	13.5	13.5	11.1	9.8	5.1	6.3	17	13.6	10.9	8.5	6.2	2.8
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.2	12.7	9	6	3.7	0.7
Q422	E	18.7	18.7	18.7	18.7	18.6	18.6	18.6	18.7	18.6	18.6	18.6	6	18.7	18.7
	B	18.7	18.7	13.5	13.5	11.1	9.8	8.1	6.3	16.7	13.6	10.9	5.4	6.2	2.8
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.1	12.7	9	6	3.7	0.7
Q423	E	18.8	18.8	18.7	18.7	18.7	7.6	18.7	18.8	18.7	18.7	18.7	18.7	18.7	18.8
	B	18.7	18.7	13.5	13.5	11.4	7	8.5	6.9	17	13.8	11.2	9	6.6	3.2
	C	19.1	19.1	12.1	12.1	9.2	7.6	5.6	3.2	17.2	12.7	9	6	3.7	0.7
Q424	E	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	0	0	0	0	0	0
	B	0	0	0	0	0	0	0	2	0	0	0	0	0	2
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.1	12.7	9	6	3.7	0
Q425	E	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	0	0	0	0	0	0
	B	0	0	0	0	0	0	0	2	0	0	0	0	0	2
	C	18.5	18.5	12.6	12.6	9.9	8.5	6.7	4.7	16.6	12.9	9.7	7.1	4.8	0
Q426	E	0	0	0	0	0	0	0	0	1.6	1.6	1.6	1.6	1.6	1.6
	B	0	0	0	0	0	0	0	2	0	0	0	0	0	2
	C	18.4	18.4	12.6	12.6	9.9	8.5	6.7	0	16.7	12.8	9.7	7.1	4.8	1.9
Q427	E	1.6	1.6	1.6	1.6	0	1.6	1.6	1.6	0	0	0	0	0	0
	B	0	0	0	0	0	0	2	0	0	0	0	0	2	0
	C	18.5	18.5	13	13	10.4	9.1	7.3	5.4	16.7	13.2	10.2	7.7	0	2.2
Q428	E	0	0	0	0	0	0	0	0	1.6	1.6	1.6	1.6	1.6	1.6
	B	0	0	0	0	0	0	2	0	0	0	0	0	0	0
	C	18.4	18.4	13.4	13.4	10.9	9.7	0	6.2	16.7	13.4	10.7	8.4	6.1	2.8
Q429	E	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	0	0	0	0	0	0
	B	0	0	0	0	0	2	0	0	0	0	0	2	0	0
	C	18.4	18.4	13.3	13.3	10.9	9.7	8	6.2	16.7	13.4	10.7	0	6.1	2.8
Q430	E	0	0	0	0	0	0	0	0	1.6	1.6	1.6	1.6	1.6	1.6
	B	0	0	0	0	0	2	0	0	0	0	0	2	0	0
	C	18.3	18.3	13.6	13.6	11.2	0	8.4	6.7	16.7	13.6	11	8.8	6.5	3.2
Q431	E	18.9	18.9	18.9	18.9	18.8	18.8	18.8	18.9	18.9	18.8	9	18.8	18.8	18.9
	B	18.7	18.7	14.2	14.2	11.9	10.7	9.1	7.5	17.1	14.1	8.4	9.5	7.2	3.7
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.1	12.7	9	6	3.7	0.7
Q432	E	18.9	18.9	18.9	18.9	9.2	18.8	18.8	18.9	18.8	18.8	18.8	18.8	18.8	18.9
	B	18.7	18.7	14.2	14.2	8.7	10.7	9.1	7.6	17.1	14.1	11.7	9.5	7.2	3.6
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.1	12.7	9	6	3.7	0.7
Q433	E	19	19	19	19	19	19	19	19	19	12.7	19	19	19	19
	B	18.7	18.7	14.9	14.9	12.9	11.9	10	8.9	17.2	12.1	12.7	10.7	8.3	4.7
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.2	12.7	9	6	3.7	0.7
Q434	E	18.9	18.9	12.1	12.1	18.9	18.9	18.9	18.9	18.9	18.8	18.8	18.9	18.9	18.9
	B	18.7	18.7	11.5	11.5	12.1	11	9.3	7.8	17.1	14.2	11.9	9.8	7.4	3.8
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.2	12.7	9	6	3.7	0.7
Q435	E	19.2	19.2	19.2	19.2	19.1	19.1	19.1	19.2	17.2	19.1	19.1	19.1	19.1	19.2
	B	18.7	18.7	16.4	16.4	14.9	13.9	12.5	11.6	16.6	16.2	14.6	12.9	10.9	7
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.2	12.7	9	6	3.7	0.7
Q436	E	19.1	19.1	19.2	19.2	19.2	19.2	19.2	19.3	19.2	19.2	19.2	19.2	19.2	19.3
	B	18.6	18.6	18.4	18.4	17.2	16.7	15.6	15.2	18.5	18.2	17	16	14.5	11.8
	C	19.1	19.1	12.1	12.1	9.2	7.5	5.6	3.2	17.2	12.7	9	6	3.7	0.7
Q437	E	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	0	0	0	0	0	0
	B	0	0	0	0	2	0	0	0	0	0	2	0	0	0
	C	18.3	18.3	13.9	13.9	11.6	10.5	8.9	7.4	16.7	13.9	0	9.3	7.1	3.6
Q438	E	0	0	0	0	0	0	0	0	1.6	1.6	1.6	1.6	1.6	1.6
	B	0	0	0	0	2	0	0	0	0	0	2	0	0	0
	C	18.3	18.3	13.9	13.9	0	10.5	8.9	7.4	16.7	13.9	11.5	9.3	7.1	3.6
Q439	E	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	0	0	0	0	0	0
	B	0	0	2	2	0	0	0	0	0	2	0	0	0	0
	C	18.2	18.2	14.5	14.5	12.5	11.6	9.9	8.7	16.8	0	12.4	10.5	8.1	4.7
Q440	E	0	0	0	0	0	0	0	0	1.6	0	1.6	1.6	1.6	1.6
	B	0	0	2	2	0	0	0	0	0	2	0	0	0	0
	C	18.1	18.1	0	0	11.7	10.6	9	7.6	16.5	13.8	11.5	9.4	7.2	3.8
Q441	E	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	0	0	0	0	0	0
	B	2	2	0	0	0	0	0	0	2	0	0	0	0	0
	C	17.8	17.8	15.7	15.7	14.2	13.3	11.9	11.1	0	15.4	13.9	12.4	10.4	6.9
Q442	E	0	0	0	0	0	0	0	0	1.6	1.6	1.6	1.6	1.6	1.6
	B	2	2	0	0	0	0	0	0	2	0	0	0	0	0
	C	0	0	17.2	17.2	16.1	15.6	14.7	14.2	17.3	17.1	16	15	13.6	11.3
Q443	E	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	B	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	0	0	0	0	0	0
	C	0	0	0	0	0	0	0	0	0.6	0.6	0.6	0.6	0.6	0.6
Q444	E	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	B	0	0	0	0	0	0	0	0	0.6	0.6	0.6	0.6	0.6	0.6
	C	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	0	0	0	0	0	0
Q445	E	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	B	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	0	0	0	0	0	0
	C	0	0	0	0	0	0	0	0	1.6	1.6	1.6	1.6	1.6	1.6

5-4. SCHEMATIC DIAGRAM (MAIN SECTION)

● Refer to page 63 for IC Block Diagrams.

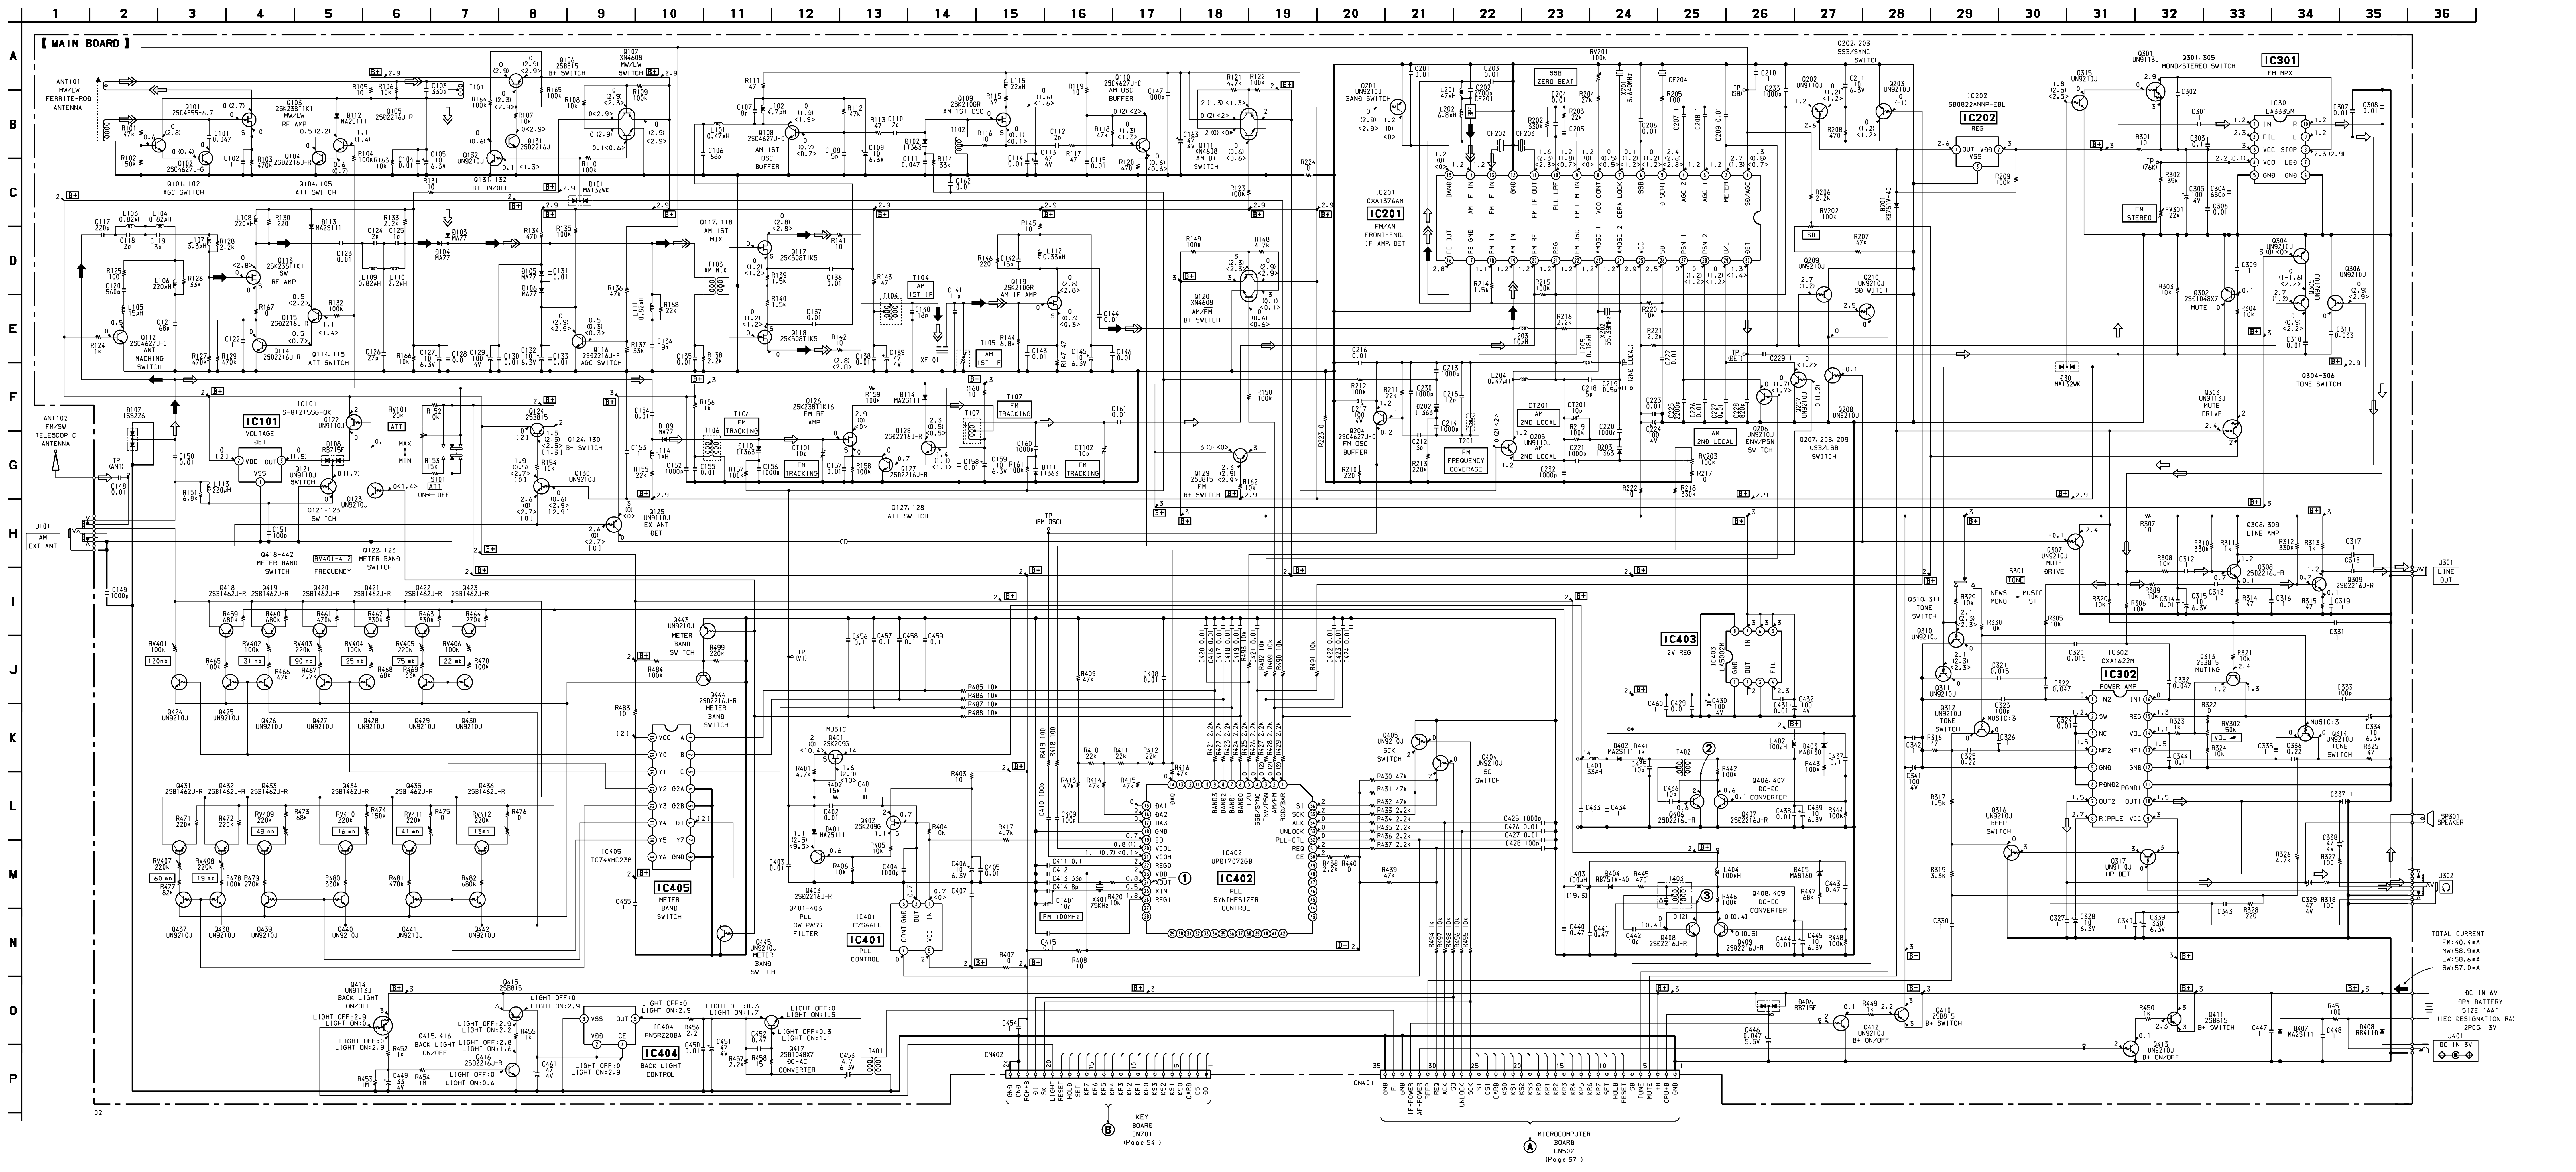

5-5. PRINTED WIRING BOARDS (KEY SECTION)

- Semiconductor Location

Ref. No.	Location
IC801	G-12
Q801	G-12
Q802	G-12

Note:
- ⟵ : parts extracted from the component side.
- ● : Through hole.
- ▒▒▒ : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

Caution:

Pattern face side: (Side A)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Side B)	Parts on the parts face side seen from the parts face are indicated.

5-6. SCHEMATIC DIAGRAM (KEY SECTION)

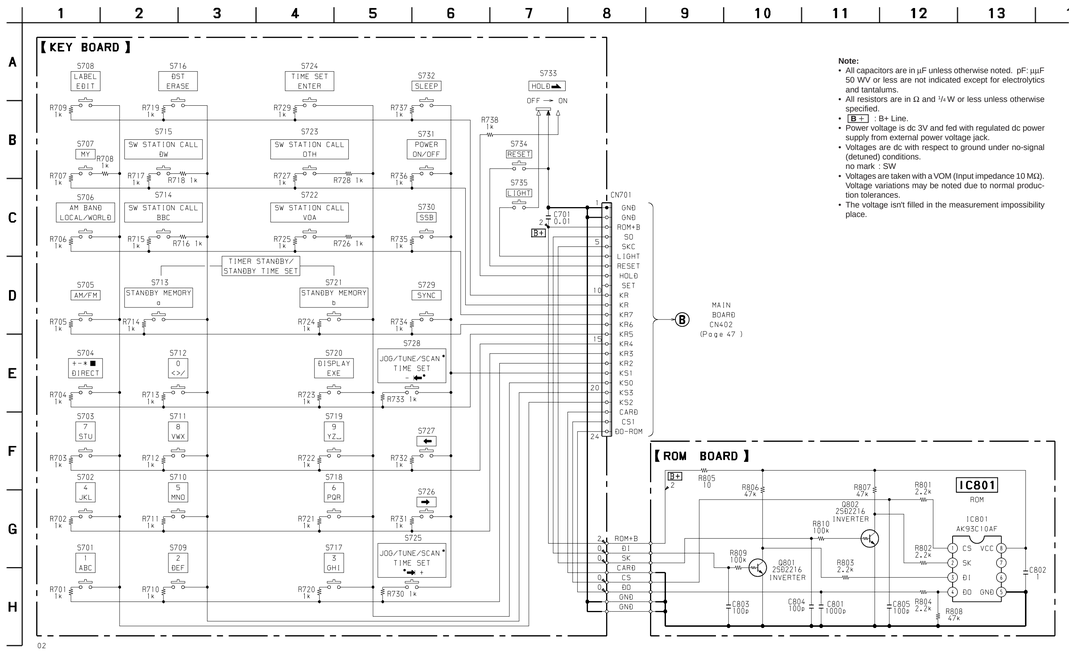

5-7. PRINTED WIRING BOARDS (MICROCOMPUTER SECTION)

- **Semiconductor Location**

Ref. No.	Location
D501	C-2
D502	D-3
D503	D-3
D504	D-2
D505	D-2
D506	B-2
D507	C-2
IC501	B-3
IC502	C-5
IC503	B-5
IC504	C-2
IC505	B-2
IC506	D-2
IC507	C-3
IC508	D-3
Q501	C-4
Q502	C-4
Q503	C-4
Q504	C-3
Q505	C-3
Q506	C-3
Q507	D-2
Q508	D-2

Note:

- ○—— : parts extracted from the component side.
- ● : Through hole.
- ▪ : Pattern of the rear side.
- ▪ : Pattern on the side which is seen.

- **Waveform**

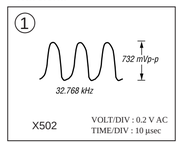

Note:

- All capacitors are in µF unless otherwise noted. pF: µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- B+ : B+ Line.
- ▭ : adjustment for repair.
- Power voltage is dc 3V and fed with regulated dc power supply from external power voltage jack.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- The voltage isn't filled in the measurement impossibility place.

5-8. SCHEMATIC DIAGRAM (MICROCOMPUTER SECTION)

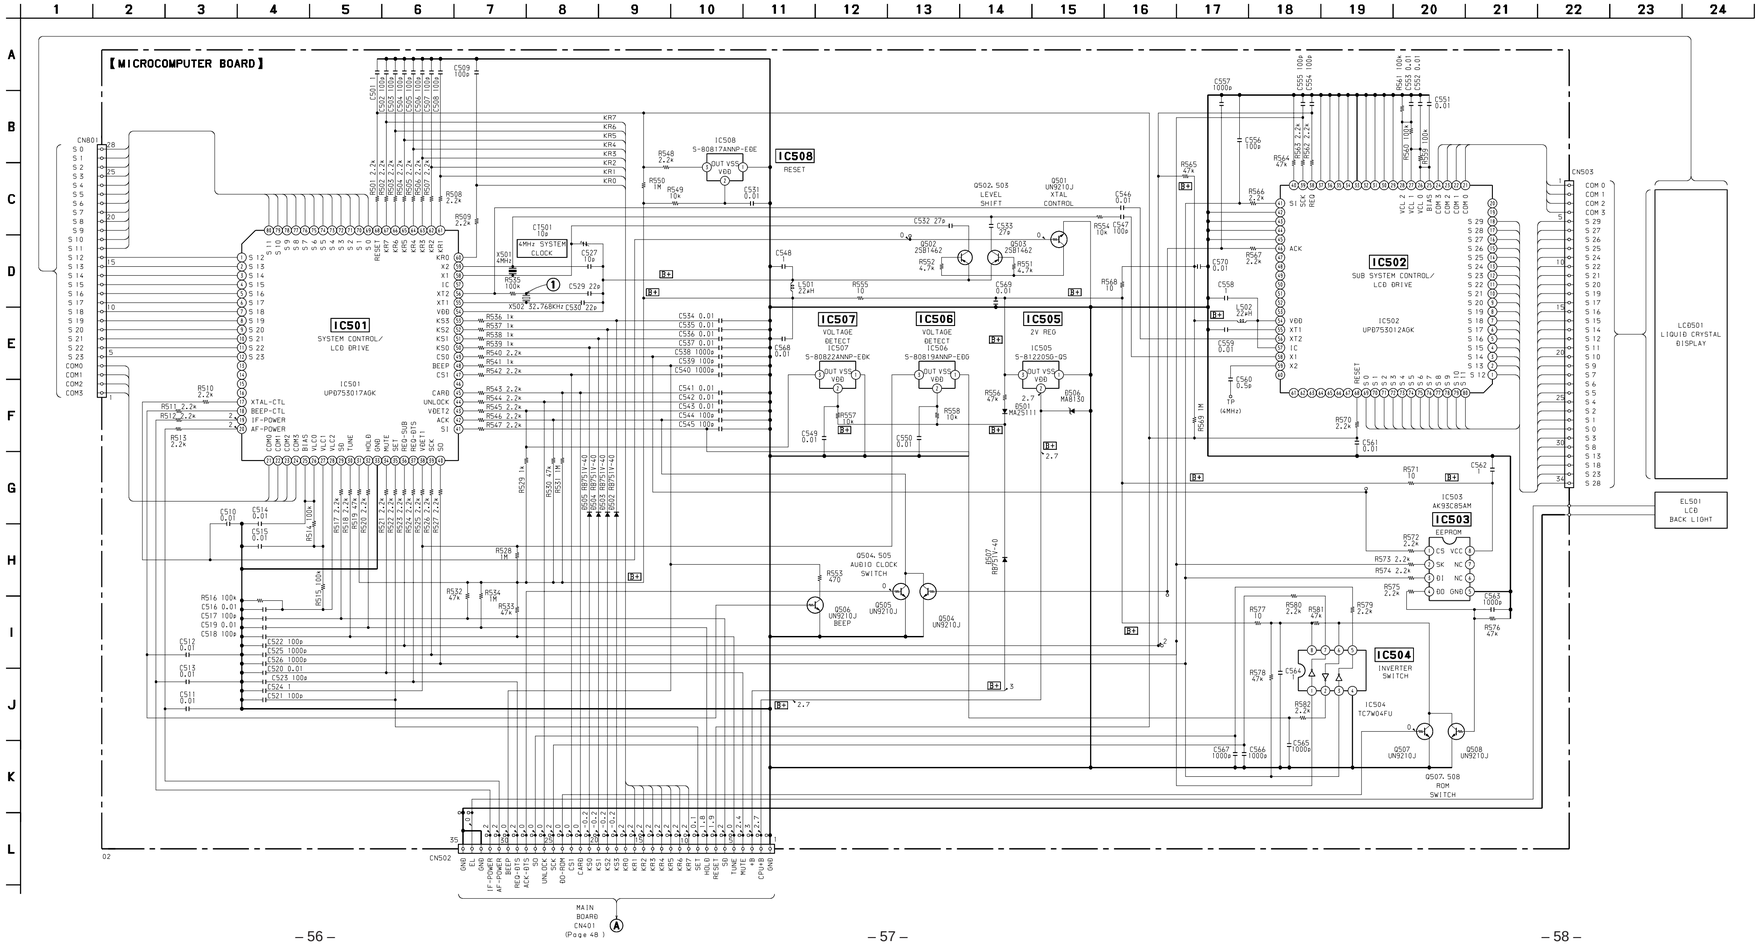

5-9. PRINTED WIRING BOARDS (ANTENNA SECTION)

- **Semiconductor Location**

Ref. No.	Location
D1	I-2
D2	I-2
D5	I-3
D6	I-3
D7	I-3
D8	I-3
D9	I-1
D10	I-1
D11	I-2
D12	I-2
D13	I-2
D14	I-1
D901	B-11
D902	B-9
IC901	C-10
Q1	H-3
Q2	I-3
Q901	C-9
Q902	B-10
Q903	B-10

5-10. SCHEMATIC DIAGRAM (ANTENNA SECTION)

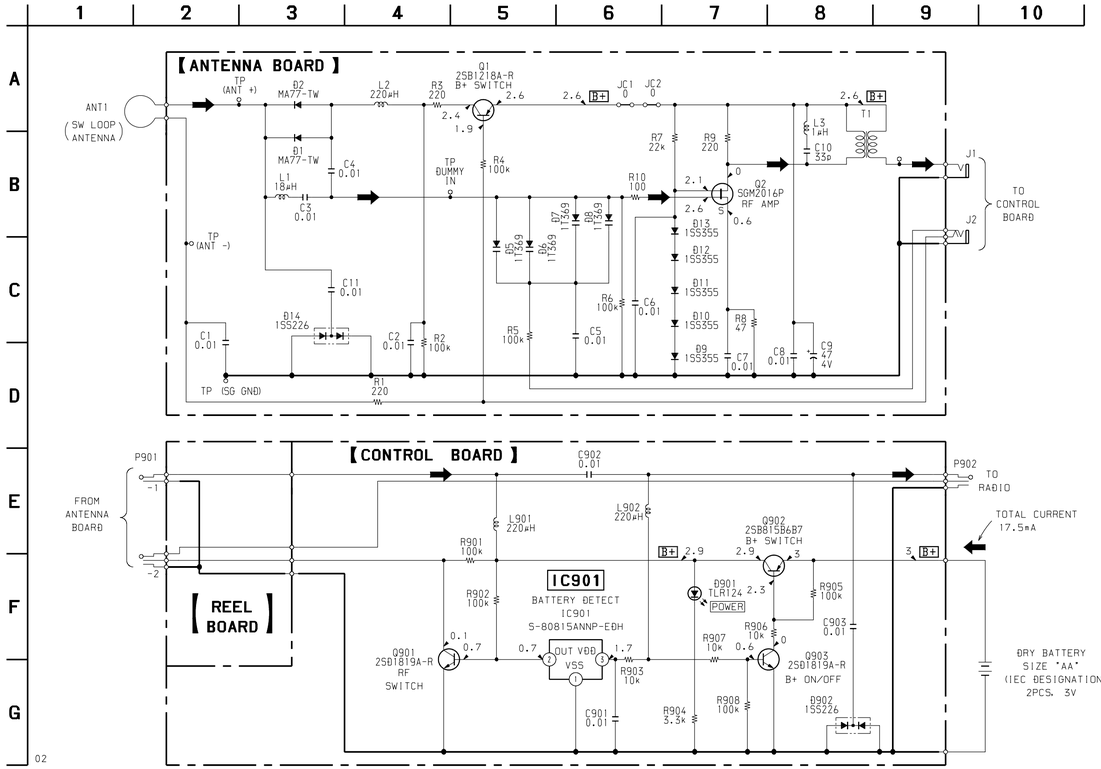

Note:
- ○—— : parts extracted from the component side.
- ▒▒▒ : Pattern from the side which enables seeing.

Note:
- All capacitors are in μF unless otherwise noted. pF: μμF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- B+ : B+ Line.
- Power voltage is dc 3V and fed with regulated dc power supply from external power voltage jack.
- Voltages are dc with respect to ground under no-signal (detuned) conditions.
  no mark : SW
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ➡ : SW

● **IC Block Diagrams (MAIN Section)**

IC403 LA5002M

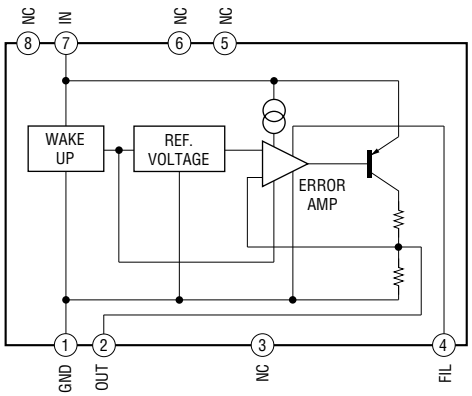

IC201 CXA1376AM

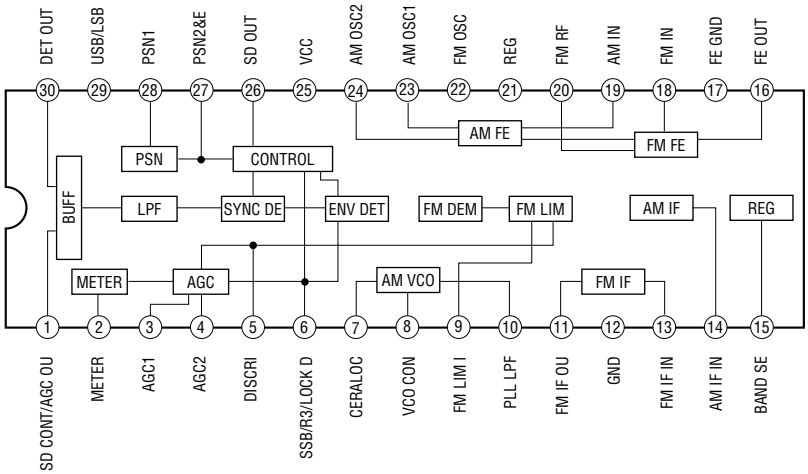

IC301 LA3335M

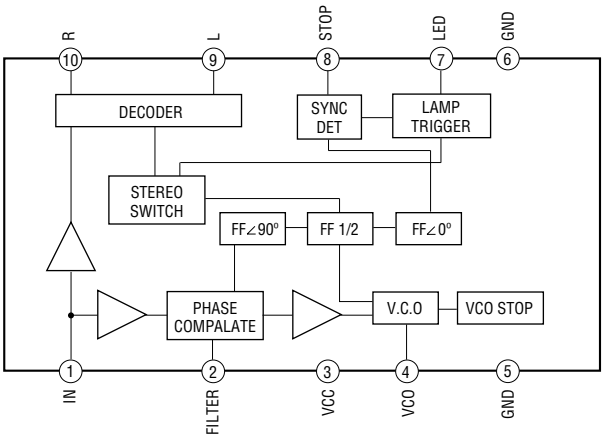

IC302 CXA1622M

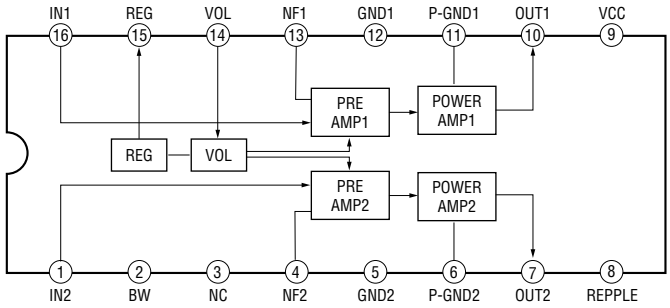

SECTION 6
EXPLODED VIEWS

NOTE :

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked " * "are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied
- Accessories and packing materials are given in the last of this parts list.

6-1. CABINET SECTION

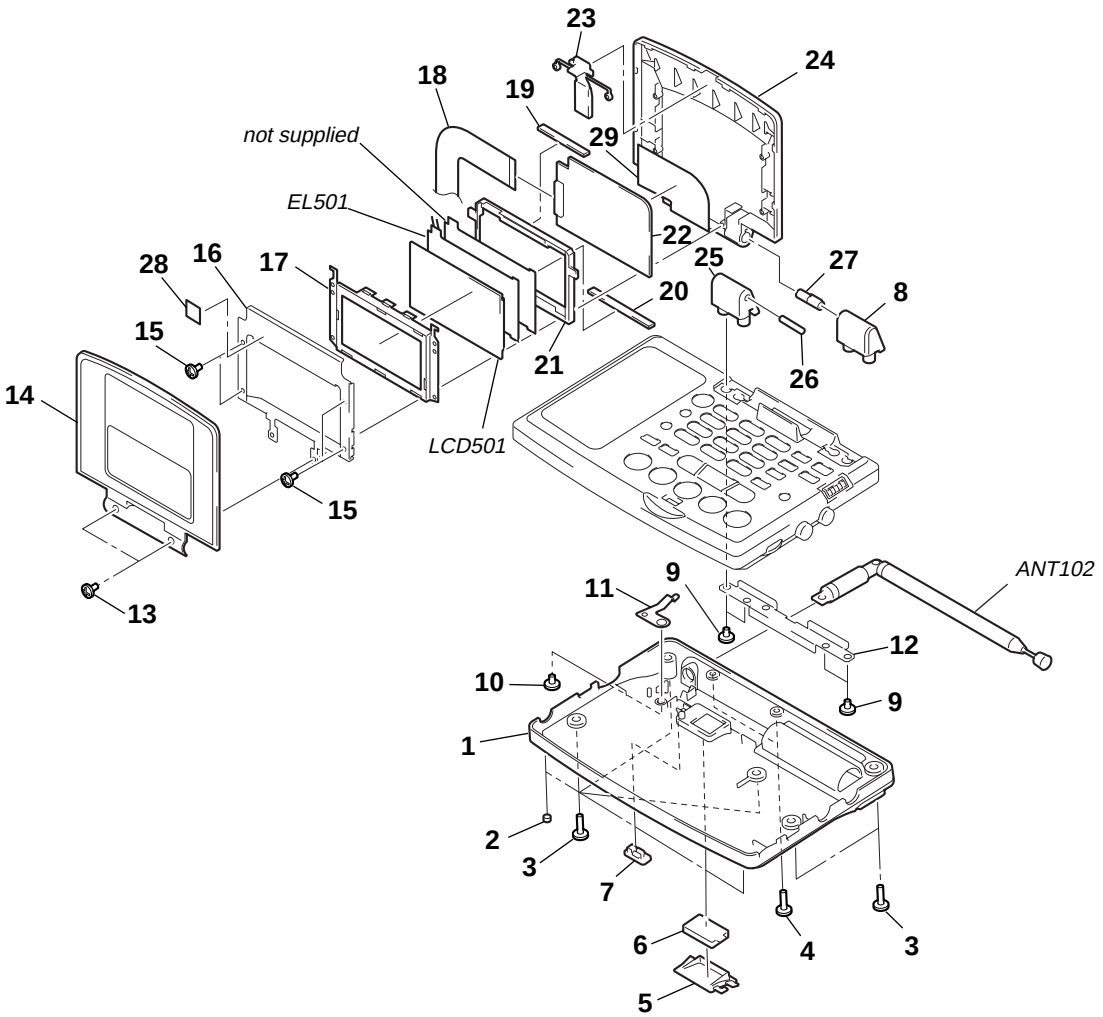

Ref. No.	Part No.	Description	Remark
1	X-3377-539-1	CABINET (LOWER) ASSY	
2	3-910-062-01	FOOT,RUBBER	
3	3-371-765-11	SCREW(2X8), +BTP	
4	3-363-895-01	SCREW(M1.7)	
5	3-031-499-01	LID(ROM)	
* 6	X-3377-112-1	ROM ASSY	
7	3-031-500-01	STOPPER (ROM)	
8	3-031-509-01	ADAPTOR (SHAFT)	
9	7-685-104-19	SCREW +P 2X6 TYPE2 NON-SLIT	
10	3-719-381-01	SCREW (M2X4)	
* 11	3-938-082-01	PLATE (ANT), CONTACT	
* 12	3-031-513-01	REINFORCEMENT (A)	
13	3-316-938-51	SCREW (B1.4X6), TAPPING	
14	X-3376-587-1	LID(REAR) ASSY	
15	3-384-797-01	SCREW	
* 16	3-031-514-01	FRAME (LID)	
17	3-031-516-01	HOLDER (LCD)	
18	1-672-548-11	FLEXIBLE BOARD	
19	1-694-492-11	CONDUCTIVE BOARD,CONNECTION(B)	
20	1-694-491-11	CONDUCTIVE BOARD,CONNECTION(A)	
21	3-031-517-01	CASE(LCD)	
* 22	A-3663-171-A	MICROCOMPUTER BOARD, COMPLETE	
23	3-031-493-01	BUTTON (OPEN)	
24	3-031-492-01	LID(FRONT)	
25	3-031-510-01	ADAPTOR (PIN)	
26	3-703-357-08	PIN(DIA. 1.6 SERISE)	
27	X-3376-860-1	SHAFT ASSY	
* 28	3-033-858-01	SPACER (FRAME)	
29	3-035-189-01	LEAF, COPPER (FPC)	
ANT102	1-501-658-11	ANTENNA, TELESCOPIC (FM/SW)	
EL501	1-803-372-11	ELEMENT, EL INDICATION (LCD BACK LIGHT)	
LCD501	1-803-371-11	PANEL, LIQUID CRYSTAL DISPLAY	

6-2. CHASSIS SECTION

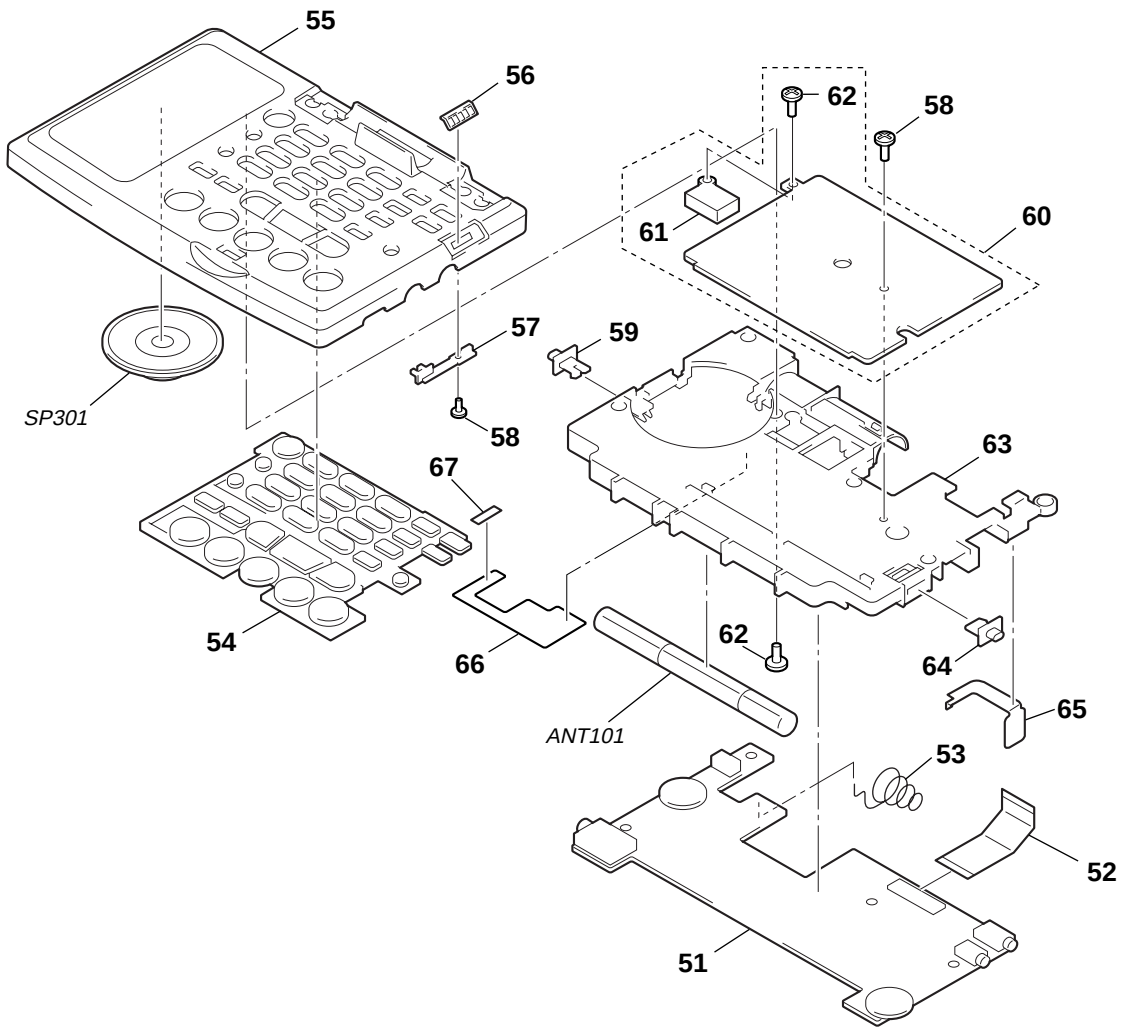

Ref. No.	Part No.	Description	Remark
* 51	A-3683-027-A	MAIN BOARD, COMPLETE	
52	1-672-549-11	FLEXIBLE BOARD	
53	3-031-529-01	TERMINAL (-), BATTERY	
54	3-031-491-01	BUTTON (10 KEY)	
55	X-3376-861-1	CABINET ASSY	
56	3-031-511-01	KNOB(HOLD)	
57	3-031-512-01	LEVER (HOLD)	
58	3-895-823-11	SCREW (B1.4X3), TAPPING	
59	3-031-519-01	KNOB(ATT)	
* 60	A-3683-026-A	KEYBOARD, COMPLETE	

Ref. No.	Part No.	Description	Remark
* 61	A-3638-687-A	CONNECTOR ASSY	
62	3-384-797-01	SCREW	
63	3-031-494-01	CHASSIS	
64	3-031-520-01	KNOB(TONE)	
65	3-031-518-01	TERMINAL (+), BATTERY	
66	3-033-844-01	LEAF(3.64M), COPPER	
67	3-355-482-01	SHEET (KT), ADHESIVE	
ANT101	1-501-657-22	FERRITE-ROD ANTENNA (MW/LW)	
SP301	1-505-165-11	SPEAKER (4cm)	

6-3. ANTENNA CONTROLLER SECTION

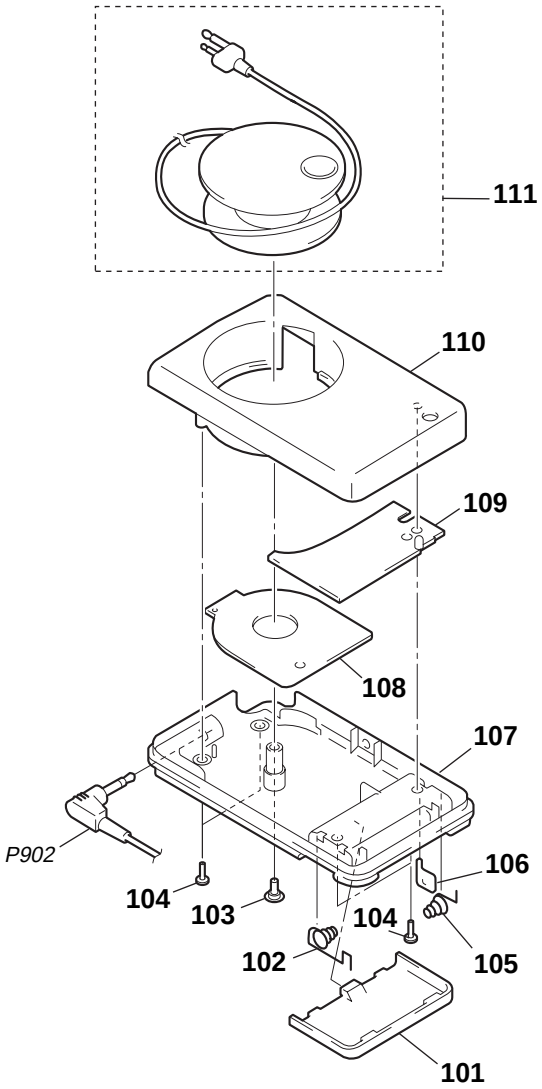

Ref. No.	Part No.	Description	Remark
101	3-015-956-01	LID, BATTERY CASE	
102	3-907-747-01	SPRING (+/-.B), BATTERY	
103	3-895-517-11	SCREW (2), TAPPING, STEP	
104	3-363-895-01	SCREW (M1.7)	
105	3-907-745-01	SPRING (-), BATTERY	
106	3-377-127-01	TERMINAL (+), BATTERY	
107	3-015-949-01	CABINET (REAR)	
* 108	1-666-723-11	REEL BOARD	
* 109	A-3683-030-A	CONTROL BOARD, COMPLETE	
110	3-030-407-01	CABINET (FRONT)	
111	A-3638-504-A	REEL ASSY	
P902	1-790-234-11	CODE (WITH PLUG)	

6-4. SW LOOP ANTENNA SECTION

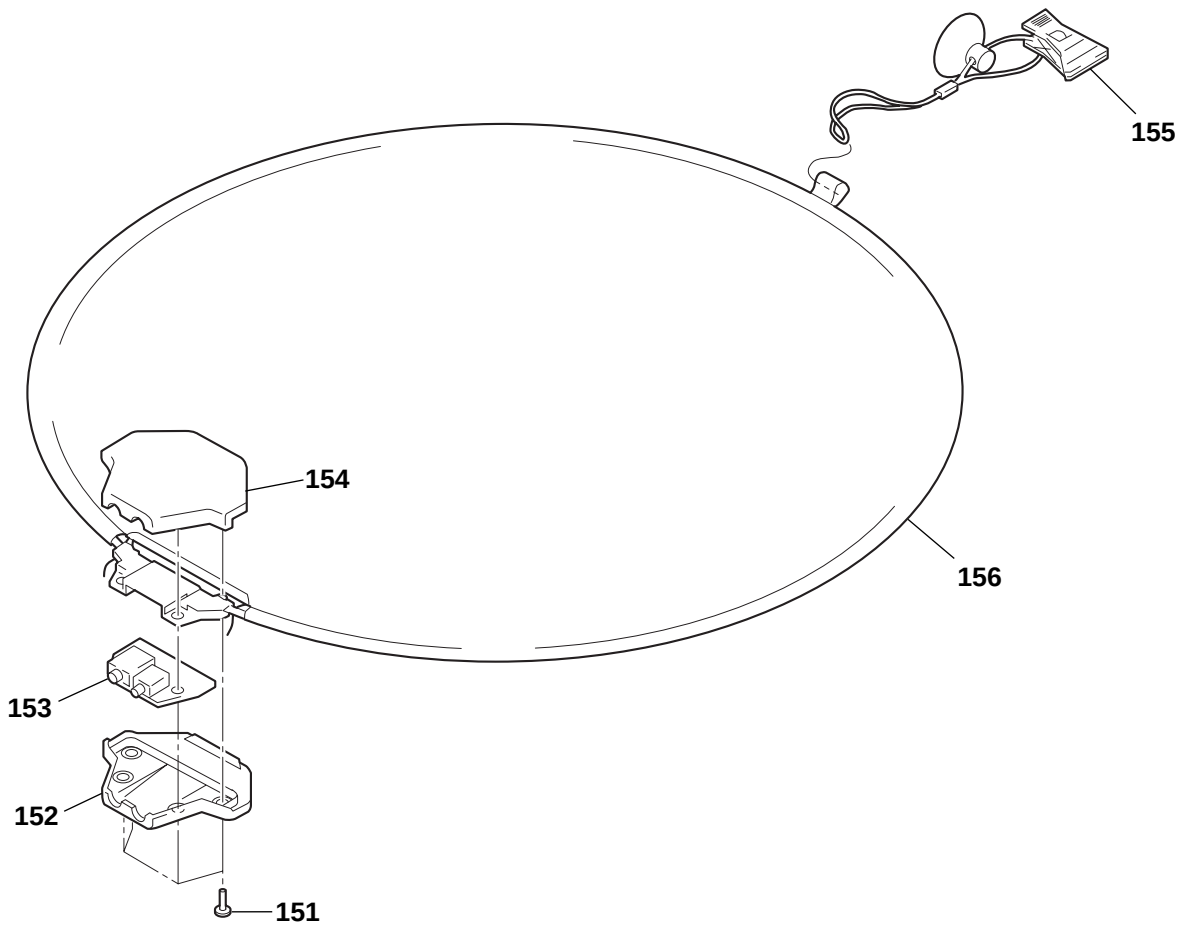

Ref. No.	Part No.	Description	Remark
151	3-910-063-01	SCREW (1.7X10)	
152	3-015-954-01	CASE (LOWER)	
* 153	A-3683-029-A	ANTENNA BOARD, COMPLETE	
154	3-015-953-11	CASE (UPPER)	
155	3-018-979-01	CLIP (SUCKER)	
156	X-3374-227-2	ANTENNA ASSY	

ANTENNA **CONTROL**

SECTION 7
ELECTRICAL PARTS LIST

NOTE :

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms
  METAL : Metal-film resistor
  METAL OXIDE :Metal oxide-film resistor
  F : nonflammable
- Items marked " * "are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u : µ , for example :
  uA.... : µ A.... , uPA.... : µ PA....
  uPB.... : µ PB.... , uPC.... : µ PC....
  uPD.... : µ PD....
- CAPACITORS
  uF : µ F
- COILS
  uH : µ H
- Abbreviation
  AEP : AC adaptor is attached
  7AEP : AC adaptor is not attached

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark
*	A-3683-029-A	ANTENNA BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C1	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C4	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C6	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C7	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C8	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C9	1-104-908-11	TANTAL. CHIP	47uF	20%	4V
C10	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
C11	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
		< DIODE >			
D1	8-719-421-40	DIODE MA77			
D2	8-719-421-40	DIODE MA77			
D5	8-713-101-57	DIODE 1T369-M20-T8A			
D6	8-713-101-57	DIODE 1T369-M20-T8A			
D7	8-713-101-57	DIODE 1T369-M20-T8A			
D8	8-713-101-57	DIODE 1T369-M20-T8A			
D9	8-719-988-61	DIODE 1SS355TE-17			
D10	8-719-988-61	DIODE 1SS355TE-17			
D11	8-719-988-61	DIODE 1SS355TE-17			
D12	8-719-988-61	DIODE 1SS355TE-17			
D13	8-719-988-61	DIODE 1SS355TE-17			
D14	8-719-800-76	DIODE 1SS226			
		< JACK >			
J1	1-569-215-11	JACK (FROM ANTENNA CONTROLLER)			
J2	1-573-996-11	JACK, SMALL (WATERPROOF) (FROM ANTENNA CONTROLLER)			
		< JUMPER RESISTOR >			
JC1	1-216-864-11	METAL CHIP	0	5%	1/16W
JC2	1-216-864-11	METAL CHIP	0	5%	1/16W
		< COIL >			
L1	1-408-412-00	INDUCTOR	18uH		
L2	1-410-658-31	INDUCTOR CHIP	220uH		
L3	1-412-979-21	INDUCTOR	1uH		
		< TRANSISTOR >			
Q1	8-729-402-55	TRANSISTOR 2SB1218A-R			
Q2	8-766-002-46	TRANSISTOR SGM2016AP-T7			
		< RESISTOR >			
R1	1-216-813-11	METAL CHIP	220	5%	1/16W
R2	1-216-845-11	METAL CHIP	100K	5%	1/16W
R3	1-216-813-11	METAL CHIP	220	5%	1/16W
R4	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5	1-216-845-11	METAL CHIP	100K	5%	1/16W
R6	1-216-845-11	METAL CHIP	100K	5%	1/16W
R7	1-216-837-11	METAL CHIP	22K	5%	1/16W
R8	1-216-805-11	METAL CHIP	47	5%	1/16W
R9	1-216-813-11	METAL CHIP	220	5%	1/16W
R10	1-216-809-11	METAL CHIP	100	5%	1/16W
		< TRANSFORMER >			
T1	1-426-357-11	TRANSFORMER, RF			
**********					
*	A-3683-030-A	CONTROL BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C901	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C902	1-163-031-11	CERAMIC CHIP	0.01uF		50V
C903	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
		< DIODE >			
D901	8-719-812-41	LED TLR124 (POWER)			
D902	8-719-800-76	DIODE 1SS226			
		< IC >			
IC901	8-759-568-84	IC S-80815ANNP-EDC-T2			
		< COIL >			
L901	1-410-658-31	INDUCTOR CHIP	220uH		
L902	1-410-658-31	INDUCTOR CHIP	220uH		

Ref. No.	Part No.	Description			Remark
		< TRANSISTOR >			
Q901	8-729-402-32	TRANSISTOR 2SD1819A-R			
Q902	8-729-800-71	TRANSISTOR 2SB815B7-TB			
Q903	8-729-402-32	TRANSISTOR 2SD1819A-R			
		< RESISTOR >			
R901	1-216-845-11	METAL CHIP	100K	5%	1/16W
R902	1-216-845-11	METAL CHIP	100K	5%	1/16W
R903	1-216-833-11	METAL CHIP	10K	5%	1/16W
R904	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R905	1-216-845-11	METAL CHIP	100K	5%	1/16W
R906	1-216-833-11	METAL CHIP	10K	5%	1/16W
R907	1-216-833-11	METAL CHIP	10K	5%	1/16W
R908	1-216-845-11	METAL CHIP	100K	5%	1/16W
**********					
*	A-3683-026-A	KEY BOARD, COMPLETE **********			
	3-384-797-01	SCREW			
		< CAPACITOR >			
C701	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
		< CONNECTOR >			
* CN701	1-766-598-11	HOUSING, FPC CONNECTOR(ZIF)24P			
		< RESISTOR >			
R701	1-218-953-11	RES,CHIP	1K	5%	1/16W
R702	1-218-953-11	RES,CHIP	1K	5%	1/16W
R703	1-218-953-11	RES,CHIP	1K	5%	1/16W
R704	1-218-953-11	RES,CHIP	1K	5%	1/16W
R705	1-218-953-11	RES,CHIP	1K	5%	1/16W
R706	1-218-953-11	RES,CHIP	1K	5%	1/16W
R707	1-218-953-11	RES,CHIP	1K	5%	1/16W
R708	1-218-953-11	RES,CHIP	1K	5%	1/16W
R709	1-218-953-11	RES,CHIP	1K	5%	1/16W
R710	1-218-953-11	RES,CHIP	1K	5%	1/16W
R711	1-218-953-11	RES,CHIP	1K	5%	1/16W
R712	1-218-953-11	RES,CHIP	1K	5%	1/16W
R713	1-218-953-11	RES,CHIP	1K	5%	1/16W
R714	1-218-953-11	RES,CHIP	1K	5%	1/16W
R715	1-218-953-11	RES,CHIP	1K	5%	1/16W
R716	1-218-953-11	RES,CHIP	1K	5%	1/16W
R717	1-218-953-11	RES,CHIP	1K	5%	1/16W
R718	1-218-953-11	RES,CHIP	1K	5%	1/16W
R719	1-218-953-11	RES,CHIP	1K	5%	1/16W
R720	1-218-953-11	RES,CHIP	1K	5%	1/16W
R721	1-218-953-11	RES,CHIP	1K	5%	1/16W
R722	1-218-953-11	RES,CHIP	1K	5%	1/16W
R723	1-218-953-11	RES,CHIP	1K	5%	1/16W
R724	1-218-953-11	RES,CHIP	1K	5%	1/16W
R725	1-218-953-11	RES,CHIP	1K	5%	1/16W
R726	1-218-953-11	RES,CHIP	1K	5%	1/16W
R727	1-218-953-11	RES,CHIP	1K	5%	1/16W
R728	1-218-953-11	RES,CHIP	1K	5%	1/16W
R729	1-218-953-11	RES,CHIP	1K	5%	1/16W
R730	1-218-953-11	RES,CHIP	1K	5%	1/16W
R731	1-218-953-11	RES,CHIP	1K	5%	1/16W
R732	1-218-953-11	RES,CHIP	1K	5%	1/16W
R733	1-218-953-11	RES,CHIP	1K	5%	1/16W
R734	1-218-953-11	RES,CHIP	1K	5%	1/16W
R735	1-218-953-11	RES,CHIP	1K	5%	1/16W
R736	1-218-953-11	RES,CHIP	1K	5%	1/16W
R737	1-218-953-11	RES,CHIP	1K	5%	1/16W
R738	1-218-953-11	RES,CHIP	1K	5%	1/16W
		< SWITCH >			
S701	1-692-453-11	SWITCH, KEY BOARD (1)			
S702	1-692-453-11	SWITCH, KEY BOARD (4)			
S703	1-692-453-11	SWITCH, KEY BOARD (7)			
S704	1-692-453-11	SWITCH, KEY BOARD (DIRECT)			
S705	1-692-453-11	SWITCH, KEY BOARD (FM/AM)			
S706	1-692-453-11	SWITCH, KEY BOARD (AM BAND LOCAL/WORLD)			
S707	1-692-453-11	SWITCH, KEY BOARD (MY)			
S708	1-692-453-11	SWITCH, KEY BOARD (LABEL EDIT)			
S709	1-692-453-11	SWITCH, KEY BOARD (2)			
S710	1-692-453-11	SWITCH, KEY BOARD (5)			
S711	1-692-453-11	SWITCH, KEY BOARD (8)			
S712	1-692-453-11	SWITCH, KEY BOARD (0)			
S713	1-692-453-11	SWITCH, KEY BOARD (STANDBY MEMORY a)			
S714	1-692-453-11	SWITCH, KEY BOARD (BBC)			
S715	1-692-453-11	SWITCH, KEY BOARD (DW)			
S716	1-692-453-11	SWITCH, KEY BOARD (DST ERASE)			
S717	1-692-453-11	SWITCH, KEY BOARD (3)			
S718	1-692-453-11	SWITCH, KEY BOARD (6)			
S719	1-692-453-11	SWITCH, KEY BOARD (9)			
S720	1-692-453-11	SWITCH, KEY BOARD (DISPLAY EXE)			
S721	1-692-453-11	SWITCH, KEY BOARD (STANDBY MEMORY b)			
S722	1-692-453-11	SWITCH, KEY BOARD (VOA)			
S723	1-692-453-11	SWITCH, KEY BOARD (OTH)			
S724	1-692-453-11	SWITCH, KEY BOARD (TIME SET ENTER)			
S725	1-692-453-11	SWITCH, KEY BOARD (JOG/TUNE/SCAN •➡I +)			
S726	1-692-453-11	SWITCH, KEY BOARD (TIME DIF ➡)			
S727	1-692-453-11	SWITCH, KEY BOARD (TIME DIF ⬅)			
S728	1-692-453-11	SWITCH, KEY BOARD (JOG/TUNE/SCAN – I⬅ •)			
S729	1-692-453-11	SWITCH, KEY BOARD (SYNC)			
S730	1-692-453-11	SWITCH, KEY BOARD (SSB)			
S731	1-692-453-11	SWITCH, KEY BOARD (POWER ON/OFF)			
S732	1-692-453-11	SWITCH, KEY BOARD (SLEEP)			
S733	1-572-922-11	SWITCH, SLIDE (HOLD ➡)			
S734	1-572-921-11	SWITCH, KEY BOARD (RESET)			
S735	1-692-453-11	SWITCH, KEY BOARD (LIGHT)			
**********					
*	A-3683-027-A	MAIN BOARD, COMPLETE **********			
		< CAPACITOR >			
C101	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C102	1-115-156-11	CERAMIC CHIP	1uF		10V
C103	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C104	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

MAIN

Ref. No.	Part No.	Description			Remark
C105	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C106	1-162-925-11	CERAMIC CHIP	68PF	5%	50V
C107	1-162-913-11	CERAMIC CHIP	8PF	0.5PF	50V
C108	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
C109	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C110	1-162-907-11	CERAMIC CHIP	2PF	0.25PF	50V
C111	1-162-847-11	CERAMIC	0.047uF	10%	16V
C112	1-162-907-11	CERAMIC CHIP	2PF	0.25PF	50V
C113	1-107-811-11	TANTAL. CHIP	47uF	20%	4V
C114	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C115	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C117	1-162-957-11	CERAMIC CHIP	220PF	5%	50V
C118	1-162-907-11	CERAMIC CHIP	2PF	0.25PF	50V
C119	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C120	1-164-363-11	CERAMIC CHIP	560PF	5%	50V
C121	1-162-925-11	CERAMIC CHIP	68PF	5%	50V
C122	1-115-156-11	CERAMIC CHIP	1uF		10V
C123	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C124	1-162-907-11	CERAMIC CHIP	2PF	0.25PF	50V
C125	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V
C126	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C127	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C128	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C129	1-110-967-11	TANTAL. CHIP	100uF	20%	4V
C130	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C131	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C132	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C133	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C134	1-162-914-11	CERAMIC CHIP	9PF	0.5PF	50V
C135	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C136	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C137	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C138	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C139	1-107-811-11	TANTAL. CHIP	47uF	20%	4V
C140	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C141	1-164-376-11	CERAMIC CHIP	11PF	5%	50V
C142	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
C143	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C144	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C145	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C146	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C147	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C148	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C149	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C150	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C151	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C152	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C153	1-115-156-11	CERAMIC CHIP	1uF		10V
C154	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C155	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C156	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C157	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C158	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C159	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C160	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C161	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C162	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C163	1-107-811-11	TANTAL. CHIP	47uF	20%	4V
C201	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C202	1-162-979-11	CERAMIC CHIP	2700PF	5%	50V
C203	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C204	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C205	1-115-156-11	CERAMIC CHIP	1uF		10V
C206	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C207	1-115-156-11	CERAMIC CHIP	1uF		10V
C208	1-115-156-11	CERAMIC CHIP	1uF		10V
C209	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C210	1-115-156-11	CERAMIC CHIP	1uF		10V
C211	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C212	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C213	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C214	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C215	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C216	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C217	1-110-967-11	TANTAL. CHIP	100uF	20%	4V
C218	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V
C219	1-162-904-11	CERAMIC CHIP	0.5PF	0.25PF	50V
C220	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C221	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C222	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C223	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C224	1-110-967-11	TANTAL. CHIP	100uF	20%	4V
C225	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C226	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C227	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C228	1-164-473-11	CERAMIC CHIP	820PF	5%	50V
C229	1-115-156-11	CERAMIC CHIP	1uF		10V
C230	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C232	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C233	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C301	1-115-156-11	CERAMIC CHIP	1uF		10V
C302	1-115-156-11	CERAMIC CHIP	1uF		10V
C303	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C304	1-163-137-00	CERAMIC CHIP	680PF	5%	50V
C305	1-110-967-11	TANTAL. CHIP	100uF	20%	4V
C306	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C307	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C308	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C309	1-115-156-11	CERAMIC CHIP	1uF		10V
C310	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C311	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C312	1-115-156-11	CERAMIC CHIP	1uF		10V
C313	1-115-156-11	CERAMIC CHIP	1uF		10V
C314	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C315	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C316	1-115-156-11	CERAMIC CHIP	1uF		10V
C317	1-115-156-11	CERAMIC CHIP	1uF		10V
C318	1-115-156-11	CERAMIC CHIP	1uF		10V
C319	1-115-156-11	CERAMIC CHIP	1uF		10V
C320	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V
C321	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V
C322	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C323	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C324	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C325	1-165-128-91	CERAMIC CHIP	0.22uF	10%	16V

Ref. No.	Part No.	Description			Remark
C326	1-115-156-11	CERAMIC CHIP	1uF		10V
C327	1-115-156-11	CERAMIC CHIP	1uF		10V
C328	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C329	1-107-811-11	TANTAL. CHIP	47uF	20%	4V
C330	1-115-156-11	CERAMIC CHIP	1uF		10V
C331	1-115-156-11	CERAMIC CHIP	1uF		10V
C332	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C333	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C334	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C335	1-115-156-11	CERAMIC CHIP	1uF		10V
C336	1-165-128-91	CERAMIC CHIP	0.22uF	10%	16V
C337	1-115-156-11	CERAMIC CHIP	1uF		10V
C338	1-107-811-11	TANTAL. CHIP	47uF	20%	4V
C339	1-128-391-11	ELECT CHIP	330uF	20%	6.3V
C340	1-115-156-11	CERAMIC CHIP	1uF		10V
C341	1-110-967-11	TANTAL. CHIP	100uF	20%	4V
C342	1-115-156-11	CERAMIC CHIP	1uF		10V
C343	1-115-156-11	CERAMIC CHIP	1uF		10V
C344	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C401	1-130-834-00	FILM	1uF	5%	63V
C402	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C403	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C404	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C405	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C406	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C407	1-115-156-11	CERAMIC CHIP	1uF		10V
C408	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C409	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C410	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C411	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C412	1-115-156-11	CERAMIC CHIP	1uF		10V
C413	1-164-862-11	CERAMIC CHIP	33PF	5%	16V
C414	1-164-848-11	CERAMIC CHIP	8PF	0.5PF	16V
C415	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C416	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C417	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C418	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C419	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C420	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C421	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C422	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C423	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C424	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C425	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C426	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C427	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C428	1-164-874-11	CERAMIC CHIP	100PF	5%	16V
C429	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C430	1-110-967-11	TANTAL. CHIP	100uF	20%	4V
C431	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C432	1-110-967-11	TANTAL. CHIP	100uF	20%	4V
C433	1-164-346-11	CERAMIC CHIP	1uF		16V
C434	1-164-346-11	CERAMIC CHIP	1uF		16V
C435	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C436	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C437	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C438	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C439	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C440	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C441	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C442	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C443	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C444	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C445	1-107-813-11	TANTAL. CHIP	10uF	20%	6.3V
C446	1-125-618-11	DOUBLE LAYER	0.047F	0	5.5V
C447	1-115-156-11	CERAMIC CHIP	1uF		10V
C448	1-115-156-11	CERAMIC CHIP	1uF		10V
C449	1-107-810-11	TANTAL. CHIP	33uF	20%	4V
C450	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C451	1-107-811-11	TANTAL. CHIP	47uF	20%	4V
C452	1-113-619-11	CERAMIC CHIP	0.47uF		10V
C453	1-107-812-11	TANTAL. CHIP	4.7uF	20%	6.3V
C454	1-115-156-11	CERAMIC CHIP	1uF		10V
C455	1-115-156-11	CERAMIC CHIP	1uF		10V
C456	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C457	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C458	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C459	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C460	1-115-156-11	CERAMIC CHIP	1uF		10V
C461	1-107-811-11	TANTAL. CHIP	47uF	20%	4V
		< FILTER >			
CF201	1-760-199-11	FILTER, CERAMIC			
CF202	1-767-313-11	FILTER, CERAMIC			
CF203	1-767-313-11	FILTER, CERAMIC			
CF204	1-781-211-21	FILTER,CERAMIC (DISCRIMINATOR)			
		< CONNECTOR >			
CN401	1-785-566-21	HOUSING, FPC CONNECTOR(ZIF)35P			
* CN402	1-766-598-11	HOUSING, FPC CONNECTOR(ZIF)24P			
		< TRIMMER >			
CT101	1-141-327-11	CAP, CHIP TYPE TRIMMER 10PF (FM TRACKING)			
CT102	1-141-327-11	CAP, CHIP TYPE TRIMMER 10PF (FM TRACKING)			
CT201	1-141-482-21	CAP, ADJ 10PF (AM 2ND LOCAL)			
CT401	1-141-482-21	CAP, ADJ 10PF (FM100MHz)			
		< DIODE >			
D101	8-719-421-67	DIODE MA132WK			
D102	8-719-002-81	DIODE 1T363			
D103	8-719-421-40	DIODE MA77			
D104	8-719-421-40	DIODE MA77			
D105	8-719-421-40	DIODE MA77			
D106	8-719-421-40	DIODE MA77			
D107	8-719-800-76	DIODE 1SS226			
D108	8-719-988-82	DIODE RB715F			
D109	8-719-421-40	DIODE MA77			
D110	8-719-002-81	DIODE 1T363			
D111	8-719-002-81	DIODE 1T363			
D112	8-719-046-91	DIODE MA2S111			
D113	8-719-046-91	DIODE MA2S111			
D114	8-719-046-91	DIODE MA2S111			
D201	8-719-060-48	DIODE RB751V-40TE-17			

MAIN

Ref. No.	Part No.	Description	Remark
D202	8-719-002-81	DIODE 1T363	
D203	8-719-002-81	DIODE 1T363	
D301	8-719-421-67	DIODE MA132WK	
D401	8-719-046-91	DIODE MA2S111	
D402	8-719-046-91	DIODE MA2S111	
D403	8-719-420-87	DIODE MA8130	
D404	8-719-060-48	DIODE RB751V-40TE-17	
D405	8-719-057-80	DIODE MA8160-M-TX	
D406	8-719-988-82	DIODE RB715F	
D407	8-719-046-91	DIODE MA2S111	
D408	8-719-975-40	DIODE RB411D	
		< IC >	
IC101	8-759-461-80	IC S-81215SG-QK-T1	
IC201	8-752-064-32	IC CXA1376AM	
IC202	8-759-575-75	IC S-80822ANNP-EDK-T2	
IC301	8-759-804-98	IC LA3335M	
IC302	8-752-058-42	IC CXA1622M	
IC401	8-759-082-60	IC TC7S66FU	
IC402	8-759-585-44	IC uPD17072GB-556-1A7	
IC403	8-759-804-76	IC LA5002M	
IC404	8-759-577-33	IC RN5RZ20BA-TR	
IC405	8-759-524-23	IC TC74VHC238FT(EL)	
		< JACK >	
J101	1-573-178-11	JACK (AM EXT ANT)	
J301	1-563-280-21	JACK (LINE OUT)	
J302	1-573-177-11	JACK (🎧)	
J401	1-580-372-21	JACK,DC(POLARITY UNIFIED TYPE)(DC IN 3V)	
		< COIL >	
L101	1-412-975-31	INDUCTOR 0.47uH	
L102	1-412-987-31	INDUCTOR 4.7uH	
L103	1-412-978-21	INDUCTOR 0.82uH	
L104	1-412-978-21	INDUCTOR 0.82uH	
L105	1-412-993-11	INDUCTOR 15uH	
L106	1-410-658-31	INDUCTOR CHIP 220uH	
L107	1-412-985-11	INDUCTOR 3.3uH	
L108	1-410-658-31	INDUCTOR CHIP 220uH	
L109	1-412-978-21	INDUCTOR 0.82uH	
L110	1-412-983-11	INDUCTOR 2.2uH	
L111	1-412-978-21	INDUCTOR 0.82uH	
L112	1-412-973-11	INDUCTOR 0.33uH	
L113	1-410-658-31	INDUCTOR CHIP 220uH	
L114	1-412-979-21	INDUCTOR 1uH	
L115	1-412-995-21	INDUCTOR 22uH	
L201	1-412-959-21	INDUCTOR CHIP 47uH	
L202	1-412-989-11	INDUCTOR 6.8uH	
L203	1-412-991-11	INDUCTOR 10uH	
L204	1-412-975-31	INDUCTOR 0.47uH	
L205	1-469-419-21	INDUCTOR	
L401	1-412-997-11	INDUCTOR 33uH	
L402	1-412-963-11	INDUCTOR 100uH	
L403	1-412-963-11	INDUCTOR 100uH	
L404	1-412-963-11	INDUCTOR 100uH	
		< TRANSISTOR >	
Q101	8-729-034-58	TRANSISTOR 2SC4555-6.7-TL	
Q102	8-729-037-89	TRANSISTOR 2SC4627J-C(TX).SO	
Q103	8-729-123-86	TRANSISTOR 2SK238-K16	
Q104	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q105	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q106	8-729-800-71	TRANSISTOR 2SB815B7-TB	
Q107	8-729-402-16	TRANSISTOR XN4608	
Q108	8-729-037-89	TRANSISTOR 2SC4627J-C(TX).SO	
Q109	8-729-208-47	TRANSISTOR 2SK210-GR	
Q110	8-729-037-89	TRANSISTOR 2SC4627J-C(TX).SO	
Q111	8-729-402-16	TRANSISTOR XN4608	
Q112	8-729-037-89	TRANSISTOR 2SC4627J-C(TX).SO	
Q113	8-729-123-86	TRANSISTOR 2SK238-K16	
Q114	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q115	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q116	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q117	8-729-116-64	TRANSISTOR 2SK508-K51	
Q118	8-729-116-64	TRANSISTOR 2SK508-K51	
Q119	8-729-208-47	TRANSISTOR 2SK210-GR	
Q120	8-729-402-16	TRANSISTOR XN4608	
Q121	8-729-037-58	TRANSISTOR UN9110J-(TX).SO	
Q122	8-729-037-58	TRANSISTOR UN9110J-(TX).SO	
Q123	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q124	8-729-800-71	TRANSISTOR 2SB815B7-TB	
Q125	8-729-037-58	TRANSISTOR UN9110J-(TX).SO	
Q126	8-729-123-86	TRANSISTOR 2SK238-K16	
Q127	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q128	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q129	8-729-800-71	TRANSISTOR 2SB815B7-TB	
Q130	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q131	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q132	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q201	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q202	8-729-037-58	TRANSISTOR UN9110J-(TX).SO	
Q203	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q204	8-729-037-89	TRANSISTOR 2SC4627J-C(TX).SO	
Q205	8-729-037-58	TRANSISTOR UN9110J-(TX).SO	
Q206	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q207	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q208	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q209	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q210	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q301	8-729-037-61	TRANSISTOR UN9113J-(TX).SO	
Q302	8-729-800-37	TRANSISTOR 2SD1048-X7	
Q303	8-729-037-61	TRANSISTOR UN9113J-(TX).SO	
Q304	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q305	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q306	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q307	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q308	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q309	8-729-037-92	TRANSISTOR 2SD2216J-R(TX).SO	
Q310	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q311	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q312	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q313	8-729-800-71	TRANSISTOR 2SB815B7-TB	
Q314	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q315	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q316	8-729-037-71	TRANSISTOR UN9210J-(TX).SO	
Q317	8-729-037-58	TRANSISTOR UN9110J-(TX).SO	

Ref. No.	Part No.	Description			Remark
Q401	8-729-220-93	TRANSISTOR	2SK209-G		
Q402	8-729-220-93	TRANSISTOR	2SK209-G		
Q403	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO		
Q404	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q405	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q406	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO		
Q407	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO		
Q408	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO		
Q409	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO		
Q410	8-729-800-71	TRANSISTOR	2SB815B7-TB		
Q411	8-729-800-71	TRANSISTOR	2SB815B7-TB		
Q412	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q413	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q414	8-729-037-61	TRANSISTOR	UN9113J-(TX).SO		
Q415	8-729-800-71	TRANSISTOR	2SB815B7-TB		
Q416	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO		
Q417	8-729-800-37	TRANSISTOR	2SD1048-X7		
Q418	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q419	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q420	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q421	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q422	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q423	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q424	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q425	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q426	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q427	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q428	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q429	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q430	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q431	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q432	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q433	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q434	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q435	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q436	8-729-037-86	TRANSISTOR	2SB1462J-R(TX).SO		
Q437	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q438	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q439	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q440	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q441	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q442	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q443	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		
Q444	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO		
Q445	8-729-037-71	TRANSISTOR	UN9210J-(TX).SO		

< RESISTOR >

R101	1-216-841-11	METAL CHIP	47K	5%	1/16W
R102	1-216-847-11	METAL CHIP	150K	5%	1/16W
R103	1-216-853-11	METAL CHIP	470K	5%	1/16W
R104	1-216-845-11	METAL CHIP	100K	5%	1/16W
R105	1-216-797-11	METAL CHIP	10	5%	1/16W
R106	1-216-833-11	METAL CHIP	10K	5%	1/16W
R107	1-216-833-11	METAL CHIP	10K	5%	1/16W
R108	1-216-833-11	METAL CHIP	10K	5%	1/16W
R109	1-216-845-11	METAL CHIP	100K	5%	1/16W
R110	1-216-845-11	METAL CHIP	100K	5%	1/16W
R111	1-218-937-11	RES,CHIP	47	5%	1/16W
R112	1-218-973-11	RES,CHIP	47K	5%	1/16W
R113	1-218-937-11	RES,CHIP	47	5%	1/16W
R114	1-216-839-11	METAL CHIP	33K	5%	1/16W
R115	1-218-937-11	RES,CHIP	47	5%	1/16W
R116	1-218-929-11	RES,CHIP	10	5%	1/16W
R117	1-216-805-11	METAL CHIP	47	5%	1/16W
R118	1-216-841-11	METAL CHIP	47K	5%	1/16W
R119	1-216-797-11	METAL CHIP	10	5%	1/16W
R120	1-216-817-11	METAL CHIP	470	5%	1/16W
R121	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R122	1-216-845-11	METAL CHIP	100K	5%	1/16W
R123	1-216-845-11	METAL CHIP	100K	5%	1/16W
R124	1-216-821-11	METAL CHIP	1K	5%	1/16W
R125	1-216-809-11	METAL CHIP	100	5%	1/16W
R126	1-216-839-11	METAL CHIP	33K	5%	1/16W
R127	1-216-853-11	METAL CHIP	470K	5%	1/16W
R128	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R129	1-216-853-11	METAL CHIP	470K	5%	1/16W
R130	1-216-813-11	METAL CHIP	220	5%	1/16W
R131	1-216-797-11	METAL CHIP	10	5%	1/16W
R132	1-216-845-11	METAL CHIP	100K	5%	1/16W
R133	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R134	1-218-949-11	RES,CHIP	470	5%	1/16W
R135	1-218-977-11	RES,CHIP	100K	5%	1/16W
R136	1-216-841-11	METAL CHIP	47K	5%	1/16W
R137	1-216-839-11	METAL CHIP	33K	5%	1/16W
R138	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R139	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R140	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R141	1-216-797-11	METAL CHIP	10	5%	1/16W
R142	1-216-797-11	METAL CHIP	10	5%	1/16W
R143	1-216-805-11	METAL CHIP	47	5%	1/16W
R144	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R145	1-216-797-11	METAL CHIP	10	5%	1/16W
R146	1-216-813-11	METAL CHIP	220	5%	1/16W
R147	1-216-805-11	METAL CHIP	47	5%	1/16W
R148	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R149	1-216-845-11	METAL CHIP	100K	5%	1/16W
R150	1-216-845-11	METAL CHIP	100K	5%	1/16W
R151	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R152	1-216-833-11	METAL CHIP	10K	5%	1/16W
R153	1-216-835-11	METAL CHIP	15K	5%	1/16W
R154	1-216-833-11	METAL CHIP	10K	5%	1/16W
R155	1-216-837-11	METAL CHIP	22K	5%	1/16W
R156	1-218-953-11	RES,CHIP	1K	5%	1/16W
R157	1-218-977-11	RES,CHIP	100K	5%	1/16W
R158	1-218-977-11	RES,CHIP	100K	5%	1/16W
R159	1-216-845-11	METAL CHIP	100K	5%	1/16W
R160	1-216-797-11	METAL CHIP	10	5%	1/16W
R161	1-216-845-11	METAL CHIP	100K	5%	1/16W
R162	1-216-833-11	METAL CHIP	10K	5%	1/16W
R163	1-218-965-11	RES,CHIP	10K	5%	1/16W
R164	1-216-845-11	METAL CHIP	100K	5%	1/16W
R165	1-216-845-11	METAL CHIP	100K	5%	1/16W
R166	1-216-833-11	METAL CHIP	10K	5%	1/16W
R167	1-216-864-11	METAL CHIP	0	5%	1/16W
R168	1-218-969-11	RES,CHIP	22K	5%	1/16W

MAIN

Ref. No.	Part No.	Description			Remark
R201	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R202	1-216-851-11	METAL CHIP	330K	5%	1/16W
R203	1-216-837-11	METAL CHIP	22K	5%	1/16W
R204	1-216-838-11	METAL CHIP	27K	5%	1/16W
R205	1-218-941-11	RES,CHIP	100	5%	1/16W
R206	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R207	1-216-841-11	METAL CHIP	47K	5%	1/16W
R208	1-218-949-11	RES,CHIP	470	5%	1/16W
R209	1-216-845-11	METAL CHIP	100K	5%	1/16W
R210	1-216-813-11	METAL CHIP	220	5%	1/16W
R211	1-216-837-11	METAL CHIP	22K	5%	1/16W
R212	1-216-845-11	METAL CHIP	100K	5%	1/16W
R213	1-216-849-11	METAL CHIP	220K	5%	1/16W
R214	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R215	1-216-845-11	METAL CHIP	100K	5%	1/16W
R216	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R217	1-218-990-11	SHORT	0		
R218	1-218-983-11	RES,CHIP	330K	5%	1/16W
R219	1-218-977-11	RES,CHIP	100K	5%	1/16W
R220	1-216-833-11	METAL CHIP	10K	5%	1/16W
R221	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R222	1-216-797-11	METAL CHIP	10	5%	1/16W
R223	1-216-864-11	METAL CHIP	0	5%	1/16W
R224	1-216-864-11	METAL CHIP	0	5%	1/16W
R301	1-216-797-11	METAL CHIP	10	5%	1/16W
R302	1-216-840-11	METAL CHIP	39K	5%	1/16W
R303	1-216-833-11	METAL CHIP	10K	5%	1/16W
R304	1-216-833-11	METAL CHIP	10K	5%	1/16W
R305	1-216-833-11	METAL CHIP	10K	5%	1/16W
R306	1-216-833-11	METAL CHIP	10K	5%	1/16W
R307	1-216-797-11	METAL CHIP	10	5%	1/16W
R308	1-216-833-11	METAL CHIP	10K	5%	1/16W
R309	1-216-833-11	METAL CHIP	10K	5%	1/16W
R310	1-216-851-11	METAL CHIP	330K	5%	1/16W
R311	1-216-821-11	METAL CHIP	1K	5%	1/16W
R312	1-216-851-11	METAL CHIP	330K	5%	1/16W
R313	1-216-821-11	METAL CHIP	1K	5%	1/16W
R314	1-216-805-11	METAL CHIP	47	5%	1/16W
R315	1-216-805-11	METAL CHIP	47	5%	1/16W
R316	1-218-937-11	RES,CHIP	47	5%	1/16W
R317	1-218-955-11	RES,CHIP	1.5K	5%	1/16W
R318	1-216-809-11	METAL CHIP	100	5%	1/16W
R319	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R320	1-216-833-11	METAL CHIP	10K	5%	1/16W
R321	1-216-833-11	METAL CHIP	10K	5%	1/16W
R322	1-216-864-11	METAL CHIP	0	5%	1/16W
R323	1-216-821-11	METAL CHIP	1K	5%	1/16W
R324	1-216-833-11	METAL CHIP	10K	5%	1/16W
R325	1-218-937-11	RES,CHIP	47	5%	1/16W
R326	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R327	1-216-809-11	METAL CHIP	100	5%	1/16W
R328	1-218-945-11	RES,CHIP	220	5%	1/16W
R329	1-216-833-11	METAL CHIP	10K	5%	1/16W
R330	1-218-965-11	RES,CHIP	10K	5%	1/16W
R401	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R402	1-216-835-11	METAL CHIP	15K	5%	1/16W
R403	1-216-797-11	METAL CHIP	10	5%	1/16W

Ref. No.	Part No.	Description			Remark
R404	1-216-833-11	METAL CHIP	10K	5%	1/16W
R405	1-216-833-11	METAL CHIP	10K	5%	1/16W
R406	1-216-833-11	METAL CHIP	10K	5%	1/16W
R407	1-216-797-11	METAL CHIP	10	5%	1/16W
R408	1-218-929-11	RES,CHIP	10	5%	1/16W
R409	1-218-973-11	RES,CHIP	47K	5%	1/16W
R410	1-218-969-11	RES,CHIP	22K	5%	1/16W
R411	1-218-969-11	RES,CHIP	22K	5%	1/16W
R412	1-218-969-11	RES,CHIP	22K	5%	1/16W
R413	1-218-973-11	RES,CHIP	47K	5%	1/16W
R414	1-218-973-11	RES,CHIP	47K	5%	1/16W
R415	1-218-973-11	RES,CHIP	47K	5%	1/16W
R416	1-218-973-11	RES,CHIP	47K	5%	1/16W
R417	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R418	1-216-809-11	METAL CHIP	100	5%	1/16W
R419	1-218-948-11	RES,CHIP	100	5%	1/16W
R420	1-218-965-11	RES,CHIP	10K	5%	1/16W
R421	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R422	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R423	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R424	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R425	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R426	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R427	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R428	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R429	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R430	1-218-973-11	RES,CHIP	47K	5%	1/16W
R431	1-218-973-11	RES,CHIP	47K	5%	1/16W
R432	1-216-841-11	METAL CHIP	47K	5%	1/16W
R433	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R434	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R435	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R436	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R437	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R438	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R439	1-218-973-11	RES,CHIP	47K	5%	1/16W
R440	1-218-990-11	SHORT	0		
R441	1-218-953-11	RES,CHIP	1K	5%	1/16W
R442	1-218-977-11	RES,CHIP	100K	5%	1/16W
R443	1-218-977-11	RES,CHIP	100K	5%	1/16W
R444	1-218-977-11	RES,CHIP	100K	5%	1/16W
R445	1-218-949-11	RES,CHIP	470	5%	1/16W
R446	1-218-977-11	RES,CHIP	100K	5%	1/16W
R447	1-218-975-11	RES,CHIP	68K	5%	1/16W
R448	1-218-977-11	RES,CHIP	100K	5%	1/16W
R449	1-216-821-11	METAL CHIP	1K	5%	1/16W
R450	1-216-821-11	METAL CHIP	1K	5%	1/16W
R451	1-216-809-11	METAL CHIP	100	5%	1/16W
R452	1-216-821-11	METAL CHIP	1K	5%	1/16W
R453	1-216-857-11	METAL CHIP	1M	5%	1/16W
R454	1-216-857-11	METAL CHIP	1M	5%	1/16W
R455	1-216-821-11	METAL CHIP	1K	5%	1/16W
R456	1-216-789-11	METAL CHIP	2.2	5%	1/16W
R457	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R458	1-216-799-11	METAL CHIP	15	5%	1/16W
R459	1-216-855-11	METAL CHIP	680K	5%	1/16W
R460	1-216-855-11	METAL CHIP	680K	5%	1/16W
R461	1-216-853-11	METAL CHIP	470K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R462	1-216-851-11	METAL CHIP	330K	5%	1/16W
R463	1-216-851-11	METAL CHIP	330K	5%	1/16W
R464	1-216-850-11	METAL CHIP	270K	5%	1/16W
R465	1-216-845-11	METAL CHIP	100K	5%	1/16W
R466	1-216-841-11	METAL CHIP	47K	5%	1/16W
R467	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R468	1-216-843-11	METAL CHIP	68K	5%	1/16W
R469	1-216-839-11	METAL CHIP	33K	5%	1/16W
R470	1-216-845-11	METAL CHIP	100K	5%	1/16W
R471	1-216-849-11	METAL CHIP	220K	5%	1/16W
R472	1-216-849-11	METAL CHIP	220K	5%	1/16W
R473	1-216-843-11	METAL CHIP	68K	5%	1/16W
R474	1-216-847-11	METAL CHIP	150K	5%	1/16W
R475	1-216-864-11	METAL CHIP	0	5%	1/16W
R476	1-216-864-11	METAL CHIP	0	5%	1/16W
R477	1-216-844-11	METAL CHIP	82K	5%	1/16W
R478	1-216-845-11	METAL CHIP	100K	5%	1/16W
R479	1-216-850-11	METAL CHIP	270K	5%	1/16W
R480	1-216-851-11	METAL CHIP	330K	5%	1/16W
R481	1-216-853-11	METAL CHIP	470K	5%	1/16W
R482	1-216-855-11	METAL CHIP	680K	5%	1/16W
R483	1-216-797-11	METAL CHIP	10	5%	1/16W
R484	1-216-845-11	METAL CHIP	100K	5%	1/16W
R485	1-216-833-11	METAL CHIP	10K	5%	1/16W
R486	1-216-833-11	METAL CHIP	10K	5%	1/16W
R487	1-216-833-11	METAL CHIP	10K	5%	1/16W
R488	1-216-833-11	METAL CHIP	10K	5%	1/16W
R489	1-218-965-11	RES,CHIP	10K	5%	1/16W
R490	1-216-833-11	METAL CHIP	10K	5%	1/16W
R491	1-218-965-11	RES,CHIP	10K	5%	1/16W
R492	1-218-965-11	RES,CHIP	10K	5%	1/16W
R493	1-218-965-11	RES,CHIP	10K	5%	1/16W
R494	1-218-953-11	RES,CHIP	1K	5%	1/16W
R495	1-218-965-11	RES,CHIP	10K	5%	1/16W
R496	1-218-965-11	RES,CHIP	10K	5%	1/16W
R497	1-218-965-11	RES,CHIP	10K	5%	1/16W
R498	1-218-965-11	RES,CHIP	10K	5%	1/16W
R499	1-216-849-11	METAL CHIP	220K	5%	1/16W

< VARIABLE RESISTOR >

RV101	1-237-870-11	RES, VAR, CARBON	20K (ATT)
RV201	1-241-481-11	RES, ADJ, CERMET	100K (SSB ZERO BEAT)
RV202	1-241-481-11	RES, ADJ, CERMET	100K(SD)
RV203	1-241-481-11	RES, ADJ, CERMET	100K (AM 2ND LOCAL)
RV301	1-241-479-11	RES, ADJ, CERMET	22K (FM STEREO)
RV302	1-241-849-11	RES, VAR, CARBON	50K (VOL ◢)
RV401	1-241-481-11	RES, ADJ, CERMET	100K(120mb)
RV402	1-241-481-11	RES, ADJ, CERMET	100K(31mb)
RV403	1-241-482-11	RES, ADJ, CERMET	220K(90mb)
RV404	1-241-481-11	RES, ADJ, CERMET	100K(25mb)
RV405	1-241-482-11	RES, ADJ, CERMET	220K(75mb)
RV406	1-241-481-11	RES, ADJ, CERMET	100K(22mb)
RV407	1-241-482-11	RES, ADJ, CERMET	220K(60mb)
RV408	1-241-482-11	RES, ADJ, CERMET	220K(19mb)
RV409	1-241-482-11	RES, ADJ, CERMET	220K(49mb)
RV410	1-241-482-11	RES, ADJ, CERMET	220K(16mb)
RV411	1-241-482-11	RES, ADJ, CERMET	220K(41mb)
RV412	1-241-482-11	RES, ADJ, CERMET	220K(13mb)

< SWITCH >

S101	1-771-246-21	SWITCH, SLIDE (ATT)
S301	1-572-922-11	SWITCH, SLIDE (TONE)

< TRANSFORMER >

T101	1-423-983-41	TRANSFORMER, HIGH FREQUENCY
T102	1-403-629-41	COIL (WITH CORE) (OSC)
T103	1-423-981-11	TRANSFORMER, HIGH FREQUENCY
T104	1-403-633-41	TRANSFORMER, IF (AM 1ST IF)
T105	1-403-604-41	TRANSFORMER, IF (AM 1ST IF)
T106	1-411-446-21	COIL (FM ANT) (FM TRACKING)
T107	1-411-445-21	COIL (FM RF) (FM TRACKING)
T201	1-403-638-41	COIL (WITH CORE) (OSC) (FM FREQUENCY COVERAGE)
T401	1-433-539-21	TRANSFORMER, EL
T402	1-449-021-21	COIL, DC/DC CONVERTER
T403	1-450-531-21	TRANSFORMER, DC-DC CONVERTER

< VIBRATOR >

X201	1-760-200-11	VIBRATOR, CERAMIC (3.640MHz)
X202	1-760-197-11	VIBRATOR, CRYSTAL (55.390MHz)
X401	1-579-744-21	VIBRATOR, CRYSTAL (75kHz)

< FILTER >

XF101	1-760-198-11	FILTER, CRYSTAL

****

*	A-3663-171-A	MICROCOMPUTER BOARD, COMPLETE

****

Caution :
When replacing the microcomputer board, remove IC503 from the older circuit board and add it to the new circuit board. This allows continued use of the user's preset memory.

	1-672-548-11	FLEXIBLE BOARD
	1-694-491-11	CONDUCTIVE BOARD,CONNECTION(A)
	1-694-492-11	CONDUCTIVE BOARD,CONNECTION(B)
	3-031-516-01	HOLDER (LCD)
	3-031-517-01	CASE (LCD)

< CAPACITOR >

C501	1-115-156-11	CERAMIC CHIP	1uF		10V
C502	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C503	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C504	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C505	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C506	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C507	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C508	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C509	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C510	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C511	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C512	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C513	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C514	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

MICROCOMPUTER

Ref. No.	Part No.	Description			Remark
C515	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C516	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C517	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C518	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C519	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C520	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C521	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C522	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C523	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C524	1-115-156-11	CERAMIC CHIP	1uF		10V
C525	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C526	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C527	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C529	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C530	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C531	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C532	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C533	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C534	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C535	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C536	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C537	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C538	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C539	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C540	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C541	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C542	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C543	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C544	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C545	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C546	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C547	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C548	1-115-156-11	CERAMIC CHIP	1uF		10V
C549	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C550	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C551	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C552	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C553	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C554	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C555	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C556	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C557	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C558	1-115-156-11	CERAMIC CHIP	1uF		10V
C559	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C560	1-162-904-11	CERAMIC CHIP	0.5PF	0.25PF	50V
C561	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C562	1-115-156-11	CERAMIC CHIP	1uF		10V
C563	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C564	1-115-156-11	CERAMIC CHIP	1uF		10V
C565	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C566	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C567	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C568	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C569	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C570	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

Ref. No.	Part No.	Description			Remark
		< CONNECTOR >			
CN502	1-785-566-21	HOUSING, FPC CONNECTOR(ZIF)35P			
		< TRIMMER >			
CT501	1-141-327-11	CAP, CHIP TYPE TRIMMER 10PF (4MHz SYSTEM CLOCK)			
		< DIODE >			
D501	8-719-046-91	DIODE MA2S111			
D502	8-719-060-48	DIODE RB751V-40TE-17			
D503	8-719-060-48	DIODE RB751V-40TE-17			
D504	8-719-060-48	DIODE RB751V-40TE-17			
D505	8-719-060-48	DIODE RB751V-40TE-17			
D506	8-719-420-87	DIODE MA8130			
D507	8-719-060-48	DIODE RB751V-40TE-17			
		< EL LUMINOUS ELEMENT >			
EL501	1-803-372-11	ELEMENT, EL INDICATION (LCD BACK LIGHT)			
		< IC >			
IC501	8-759-585-45	IC uPD753017AGK-717-BE9			
IC502	8-759-585-46	IC uPD753012AGK-781-BE9			
IC503	8-759-465-76	IC AK93C85AM-E2			
IC504	8-759-082-57	IC TC7W04FU			
IC505	8-759-278-04	IC S-81220SG-QS-T2			
IC506	8-759-578-28	IC S-80819ANNP-EDG-T2			
IC507	8-759-575-75	IC S-80822ANNP-EDK-T2			
IC508	8-759-577-41	IC S-80817ANNP-EDE-T2			
		< COIL >			
L501	1-412-995-21	INDUCTOR 22uH			
L502	1-412-995-21	INDUCTOR 22uH			
		< LIQUID CRYSTAL DISPLAY >			
LCD501	1-803-371-11	PANEL, LIQUID CRYSTAL DISPLAY			
		< TRANSISTOR >			
Q501	8-729-037-71	TRANSISTOR UN9210J-(TX).SO			
Q502	8-729-037-86	TRANSISTOR 2SB1462J-R(TX).SO			
Q503	8-729-037-86	TRANSISTOR 2SB1462J-R(TX).SO			
Q504	8-729-037-71	TRANSISTOR UN9210J-(TX).SO			
Q505	8-729-037-71	TRANSISTOR UN9210J-(TX).SO			
Q506	8-729-037-71	TRANSISTOR UN9210J-(TX).SO			
Q507	8-729-037-71	TRANSISTOR UN9210J-(TX).SO			
Q508	8-729-037-71	TRANSISTOR UN9210J-(TX).SO			
		< RESISTOR >			
R501	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R502	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R503	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R504	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R505	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R506	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R507	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R508	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R509	1-216-825-11	METAL CHIP	2.2K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R510	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R511	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R512	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R513	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R514	1-216-845-11	METAL CHIP	100K	5%	1/16W
R515	1-216-845-11	METAL CHIP	100K	5%	1/16W
R516	1-216-845-11	METAL CHIP	100K	5%	1/16W
R517	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R518	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R519	1-216-841-11	METAL CHIP	47K	5%	1/16W
R520	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R521	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R522	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R523	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R524	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R525	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R526	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R527	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R528	1-216-857-11	METAL CHIP	1M	5%	1/16W
R529	1-216-857-11	METAL CHIP	1M	5%	1/16W
R530	1-216-841-11	METAL CHIP	47K	5%	1/16W
R531	1-216-857-11	METAL CHIP	1M	5%	1/16W
R532	1-216-841-11	METAL CHIP	47K	5%	1/16W
R533	1-216-841-11	METAL CHIP	47K	5%	1/16W
R534	1-216-857-11	METAL CHIP	1M	5%	1/16W
R535	1-216-845-11	METAL CHIP	100K	5%	1/16W
R536	1-216-821-11	METAL CHIP	1K	5%	1/16W
R537	1-216-821-11	METAL CHIP	1K	5%	1/16W
R538	1-216-821-11	METAL CHIP	1K	5%	1/16W
R539	1-216-821-11	METAL CHIP	1K	5%	1/16W
R540	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R541	1-216-821-11	METAL CHIP	1K	5%	1/16W
R542	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R543	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R544	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R545	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R546	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R547	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R548	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R549	1-216-833-11	METAL CHIP	10K	5%	1/16W
R550	1-216-857-11	METAL CHIP	1M	5%	1/16W
R551	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R552	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R553	1-216-817-11	METAL CHIP	470	5%	1/16W
R554	1-216-833-11	METAL CHIP	10K	5%	1/16W
R555	1-216-797-11	METAL CHIP	10	5%	1/16W
R556	1-216-841-11	METAL CHIP	47K	5%	1/16W
R557	1-216-833-11	METAL CHIP	10K	5%	1/16W
R558	1-216-833-11	METAL CHIP	10K	5%	1/16W
R559	1-216-845-11	METAL CHIP	100K	5%	1/16W
R560	1-216-845-11	METAL CHIP	100K	5%	1/16W
R561	1-216-845-11	METAL CHIP	100K	5%	1/16W
R562	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R563	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R564	1-216-841-11	METAL CHIP	47K	5%	1/16W
R565	1-216-841-11	METAL CHIP	47K	5%	1/16W
R566	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R567	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R568	1-216-797-11	METAL CHIP	10	5%	1/16W
R569	1-216-857-11	METAL CHIP	1M	5%	1/16W
R570	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R571	1-216-797-11	METAL CHIP	10	5%	1/16W
R572	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R573	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R574	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R575	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R576	1-216-841-11	METAL CHIP	47K	5%	1/16W
R577	1-216-797-11	METAL CHIP	10	5%	1/16W
R578	1-216-841-11	METAL CHIP	47K	5%	1/16W
R579	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R580	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R581	1-216-841-11	METAL CHIP	47K	5%	1/16W
R582	1-216-825-11	METAL CHIP	2.2K	5%	1/16W

< VIBRATOR >

X501	1-781-210-21	VIBRATOR, CERAMIC (4MHz)			
X502	1-760-201-11	VIBRATOR, CRYSTAL (32.768kHz)			

****

*	1-666-723-11	REEL BOARD			

****

****

*	X-3377-112-1	ROM ASSY			

< CAPACITOR >

C801	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C802	1-115-156-11	CERAMIC CHIP	1uF		10V
C803	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C804	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C805	1-162-927-11	CERAMIC CHIP	100PF	5%	50V

< TRANSISTOR >

Q801	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO
Q802	8-729-037-92	TRANSISTOR	2SD2216J-R(TX).SO

< RESISTOR >

R801	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R802	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R803	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R804	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R805	1-216-797-11	METAL CHIP	10	5%	1/16W
R806	1-216-841-11	METAL CHIP	47K	5%	1/16W
R807	1-216-841-11	METAL CHIP	47K	5%	1/16W
R808	1-216-841-11	METAL CHIP	47K	5%	1/16W
R809	1-216-845-11	METAL CHIP	100K	5%	1/16W
R810	1-216-845-11	METAL CHIP	100K	5%	1/16W

****

MISCELLANEOUS

****

18	1-672-548-11	FLEXIBLE BOARD
19	1-694-492-11	CONDUCTIVE BOARD,CONNECTION(B)

Ref. No.	Part No.	Description	Remark
20	1-694-491-11	CONDUCTIVE BOARD,CONNECTION(A)	
52	1-672-549-11	FLEXIBLE BOARD	
ANT101	1-501-657-22	FERRITE-ROD ANTENNA (MW/LW)	
ANT102	1-501-658-11	ANTENNA, TELESCOPIC (FM/SW)	
EL501	1-803-372-11	ELEMENT, EL INDICATION(LCD BACK LIGHT)	
LCD501	1-803-371-11	PANEL, LIQUID CRYSTAL DISPLAY	
P902	1-790-234-11	CODE (WITH PLUG)	
SP301	1-505-165-11	SPEAKER (4cm)	

****

ACCESSORIES & PACKING MATERIALS
****

⚠	1-467-543-11	ADAPTOR, AC (AC-E311) (AEP,Singapore)	
⚠	1-467-543-21	ADAPTOR, AC (AC-E312) (US)	
⚠	1-467-543-31	ADAPTOR, AC (AC-E313) (Tourist)	
⚠	1-467-543-41	ADAPTOR, AC (AC-E314) (Canadian)	
⚠	1-569-007-11	ADAPTOR, CONVERSION 2P (Tourist)	
⚠	1-569-008-21	ADAPTOR, CONVERSION 2P (AEP,Singapore)	
⚠	1-573-856-11	ADAPTOR, CHANGE (Canadian)	
	3-015-932-01	CASE, CARRYING (FOR LOOP ANTENNA)	
	3-031-532-01	CASE, CARRYING (FOR RADIO)	
	3-865-472-01	MANUAL, INSTRUCTION (JAPANESE, ENGLISH, SPANISH,KOREAN, CHINESE) (7AEP, Singapore, Tourist)	
	3-865-472-11	MANUAL, INSTRUCTION (GERMAN, DUTCH, PORTUGUESE,SWEDISH, ITALIAN) (AEP)	
	3-865-472-21	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH,DANISH, FINNISH) (US,Canadian,AEP)	
	3-893-802-14	BOOK, GUIDE, WAVE	
	8-953-130-90	HEADPHONE MDR-E805LP/K SET	
	X-332-965-71	ATTACHMENT	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

99B0279-1
Printed in Japan © 1999.2
Published by Quality Engineering Dept. (Shinagawa)